



USER GUIDE

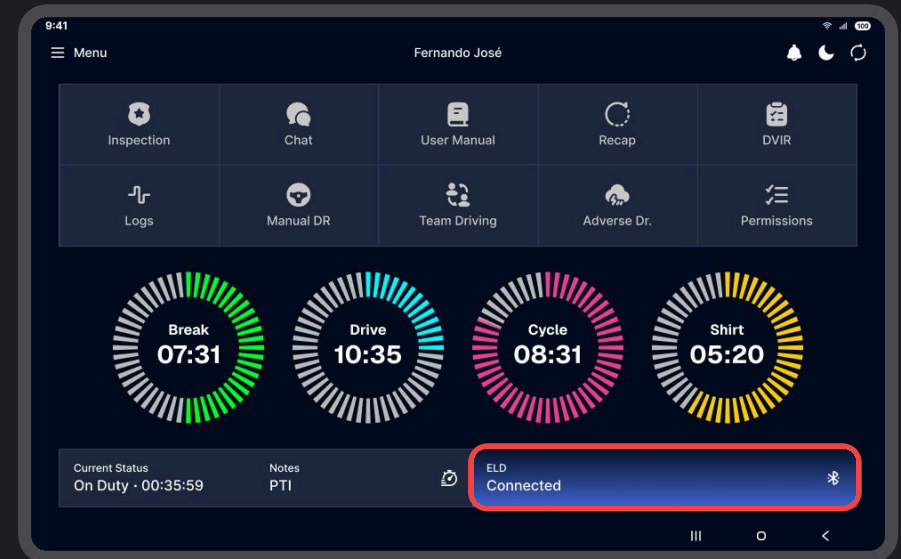

CUSTOMER
SUPPORT CONTACT

 (713) 445-7268  info@nortlighteld.com

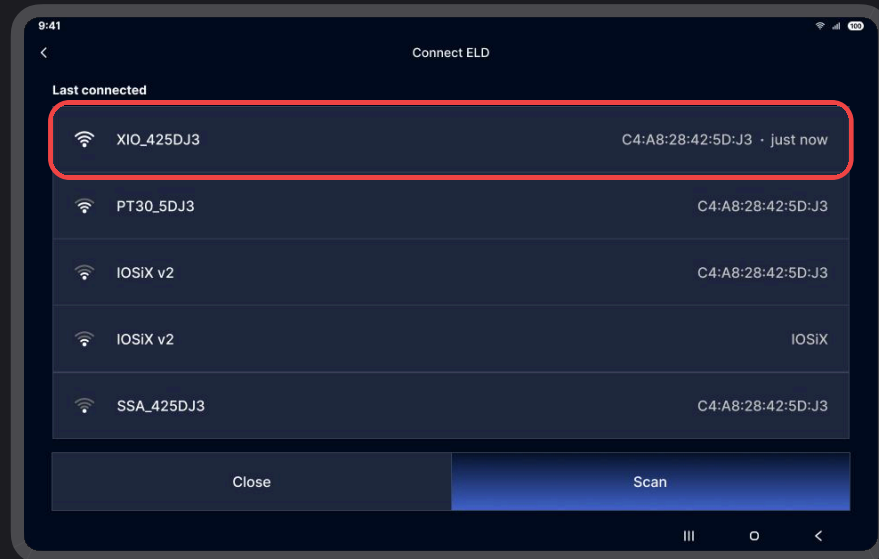

1. Select your ELD device

Select your ELD from the available devices using the displayed signal strength.

2. Your ELD is now connected



A green 'Connected' indicator on the instrument panel confirms that your ELD is paired and ready for use.

Using ELD while driving



Automated tracking of driving time.

Your driving time is recorded automatically once your ELD is connected. Your status changes to "Driving" when your speed reaches 5 mph or higher. If your speed falls below 5 mph, your status switches to "On Duty" after you've been stopped for 6 minutes.

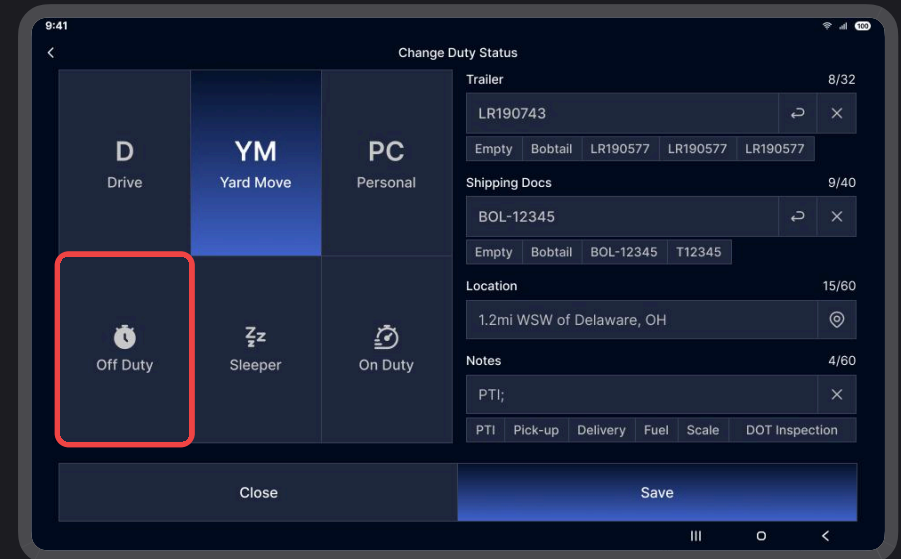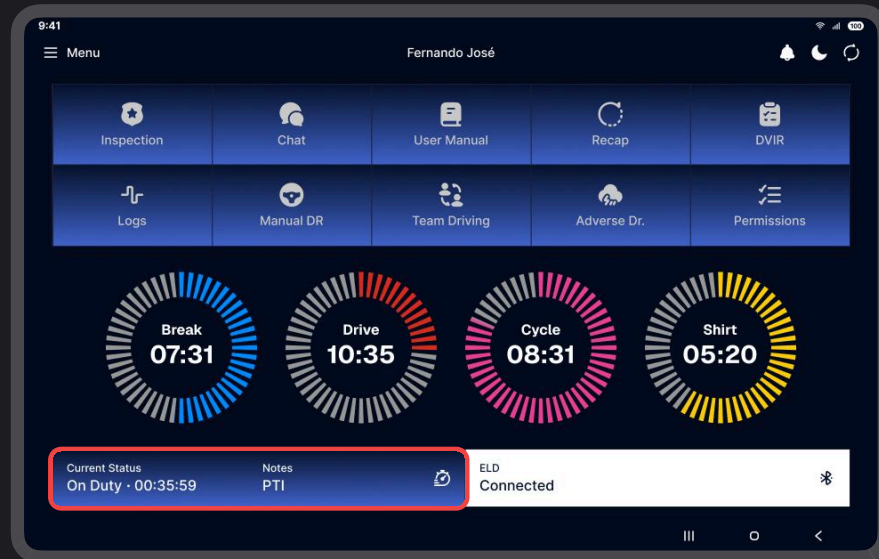

1. Updating Your Duty Status.



Tap the status bar on your dashboard to update your duty status. Select Off Duty, Sleeper, On Duty, Yard Move, or Personal based on your current activity.

2. Entering Trip Details.

Enter your Trailer, Shipping Documents, Location, and Notes. Use the quick-select buttons for common entries like "PTI" or "Delivery," or enter them manually. If the Location field is left blank, it will be filled in automatically.

Review your ELD logs

4

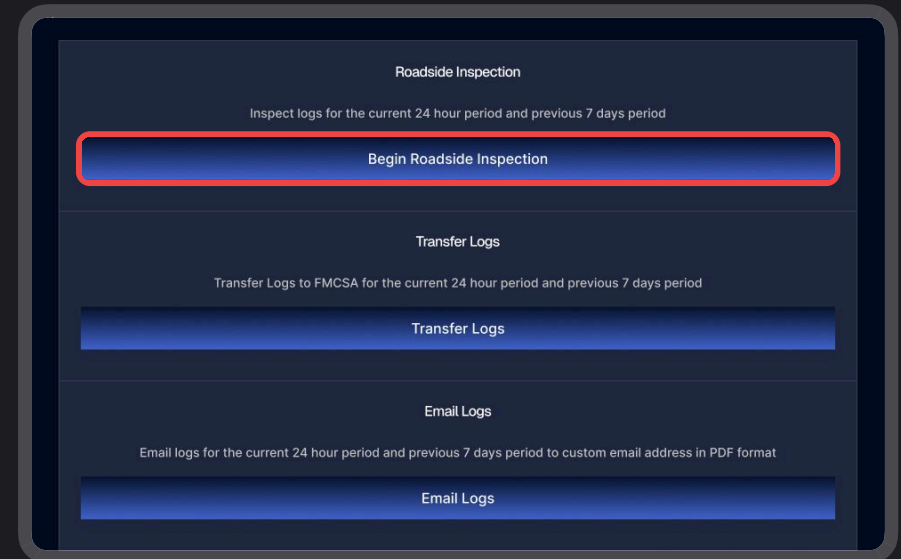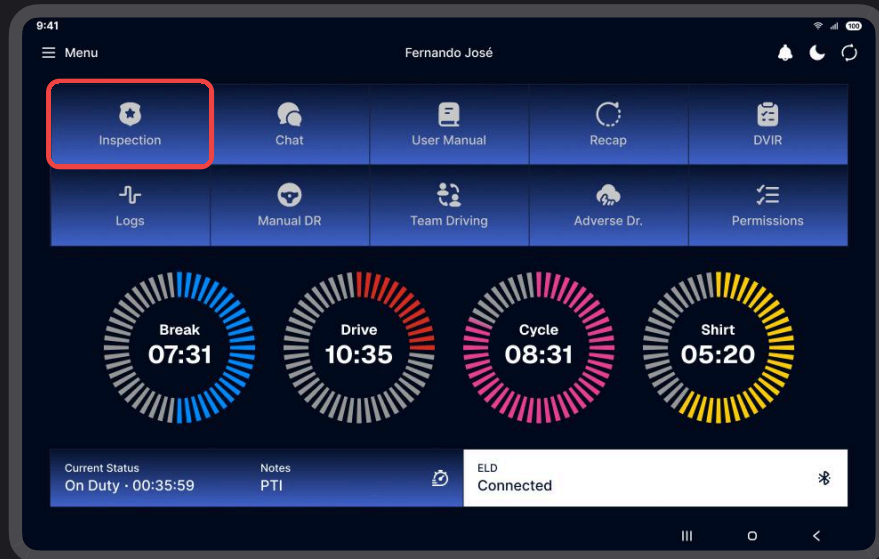

1. Use these instructions to show your records to the officer

Select "Inspection" from the dashboard or the menu.

2. Starting a Roadside Inspection.

Then, tap "Begin Roadside Inspection" to display your eight-day logbook summary for the officer.

Driver's daily log

DRIVER'S DAILY LOG



Sunday, March 12, 2026

USA property 70 hour / 8 day


Driver Name	Fernando José	Driver ID	5829137
Driver's License State	USA-NO	Driver's License Number	T8394726
Co-Driver's Name	Álvaro Martín	Co-Driver ID	7048265
Carrier			
Main Office Location	2940 W Cobalt Dr, Meridian, ID 83642	Home Terminal Location	2940 W Cobalt Dr, Meridian, ID 83642
Driver's Certification Status	No		
Trailers Owned	2016	Shipping Documents	81777
Exempt Driver Status	No, not exempt	Unidentified Driver Records	0 Records
Malfunction Indicators	Yes	Data Diagnostic Indicators	No
Current Location			
Time Zone Offset	PST (UTC-8)	24-Hour Start Time	12:00 AM (Midnight)
ELD Identification Number		ELD Provider Name	

Displaying your logs.

Hand your device to the officer to display your eight-day logbook summary. The screen shows your Driver's Daily Log with all required information.

Transfer ELD records to authorized safety officer for inspection.

6

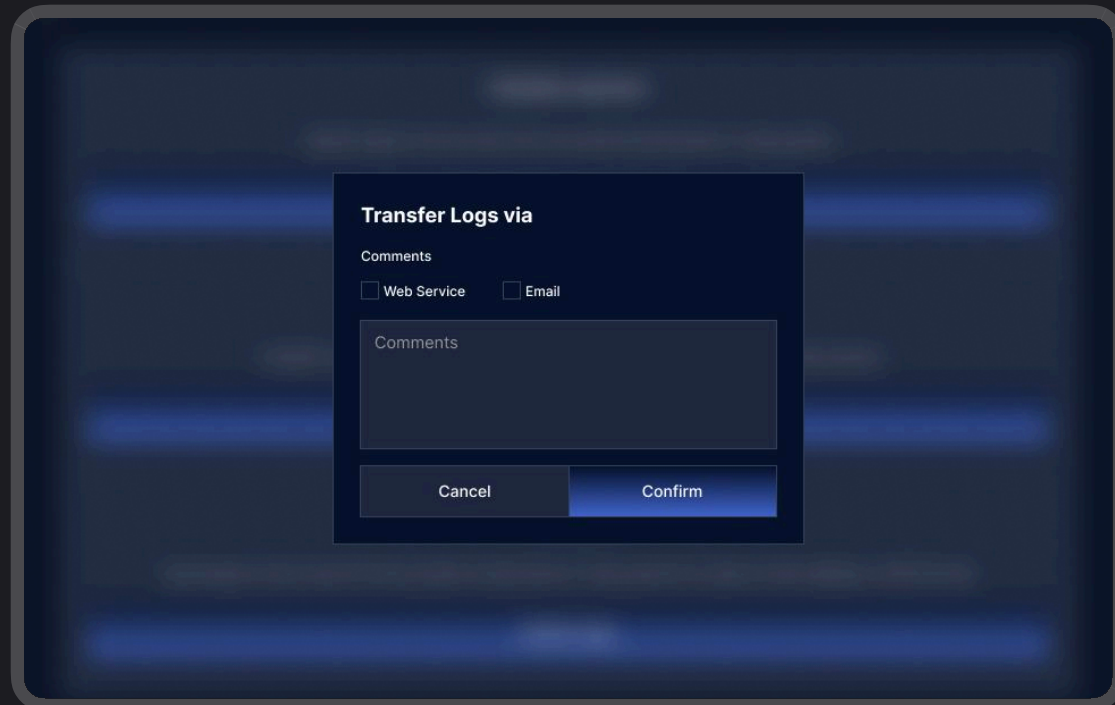A screenshot of a software interface showing a 'Transfer Logs via' dialog box. The dialog box is dark-themed with white text. It has a title bar that says 'Transfer Logs via'. Below the title bar, there is a section labeled 'Comments' with two checkboxes: 'Web Service' and 'Email'. Below these checkboxes is a text input field labeled 'Comments'. At the bottom of the dialog box, there are two buttons: 'Cancel' and 'Confirm'. The 'Confirm' button is highlighted in blue.

Transfer Logs via

Comments

☐ Web Service ☐ Email

Comments

Cancel Confirm

Choose "Web Service" or "Email," add a comment if needed, and press "Confirm" to send your logs to the officer

Confirm that your documents comply with the required guidelines before submitting them to the office.

Ensure you follow the guidelines when presenting your documents to the office.

7

ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions", table 4:

P – "Power compliance" malfunction, E – "Engine synchronization compliance" malfunction, T – "Timing compliance" malfunction, L – "Positioning compliance" malfunction, R – "Data recording compliance" malfunction, S – "Data transfer compliance" malfunction, O – "Other" ELD detected malfunction.

P – "Power compliance" malfunction,
E – "Engine synchronization compliance" malfunction,
T – "Timing compliance" malfunction,
L – "Positioning compliance" malfunction,
R – "Data recording compliance" malfunction,
S – "Data transfer compliance" malfunction,
O – "Other" ELD detected malfunction

A motor carrier must ensure that its drivers possess an ELD information packet containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions. The following instructions are in accordance with the guidelines set forth in 395-34.

The following instructions are in accordance with the guidelines set forth in 395-34.



NORTLIGHT