

# Users Manual

## SUPPORT CONTACT

 [support@lucideld.com](mailto:support@lucideld.com)

 +(717) 703-0377

Please keep this Manual in your vehicle at all times



# How to install ELD device


- 1 Make sure your vehicle engine is turned off. If the engine is on, please turn it off and turn the key to the "Off" position before connecting ELD device.
- 2 Locate the diagnostic part inside your vehicle's cabin. The diagnostic part is typically located in one of the following places:
  - under the left side of the dashboard;
  - under the steering wheel;
  - near the driver's seat;
  - under the driver's seat.
- 3 Connect the ELD plug to the diagnostic part of the vehicle. Unscrew the lock surface until it locks. Make sure the ELD is connected
- 4 Once plugged in, the device will start syncing with the engine control module [ECM] and ELD application on the tablet.
- 5 Then get the tablet provided by fleet and turn it on. Tablet should automatically start application.



# Application Guide

## 1 Log in to application using your username and password.



If you don't have an ELD account, please, contact your carrier. If you don't remember your password, contact your carrier.

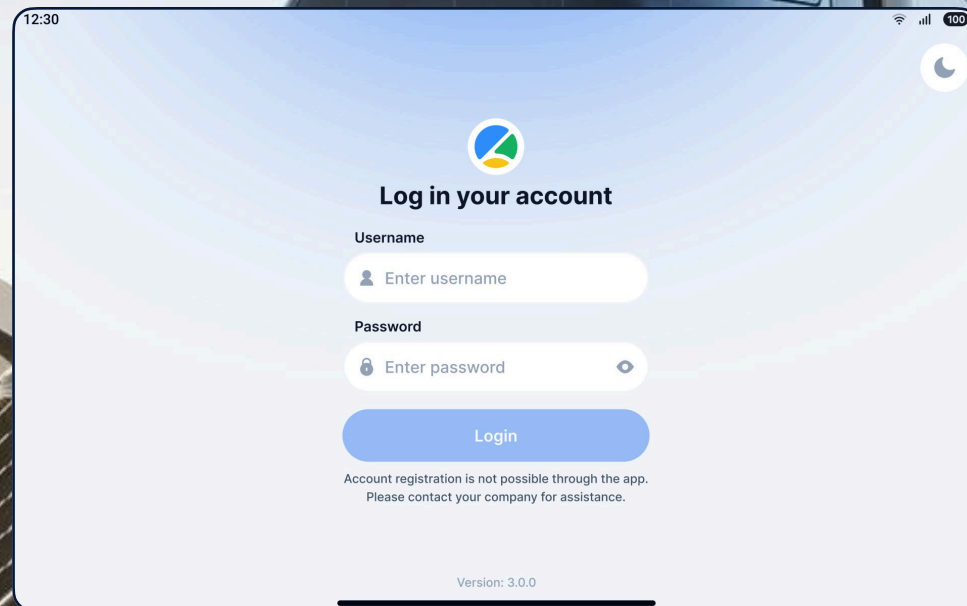

2

# Device connection

The app automatically connects to your previously paired ELD. If the status shows red, tap it to connect manually. Confirm the green light on your ELD device is on.

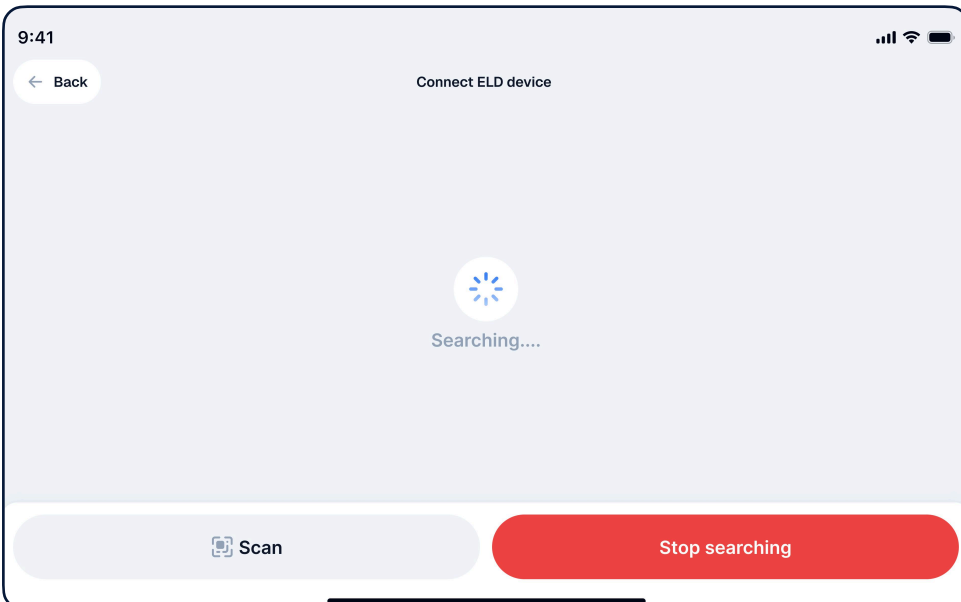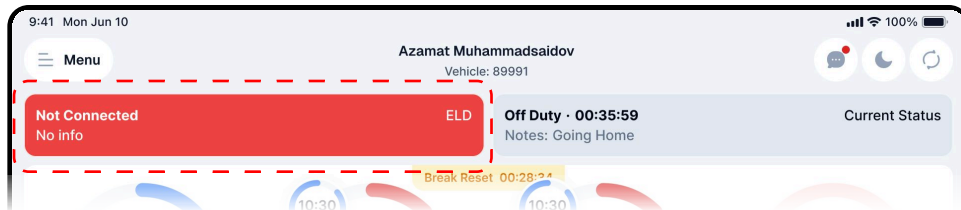

UZ01 —



PT30 —




IOSix —

3

## Select your ELD device


Choose your ELD from the list of available devices. Signal strength is shown for each device.

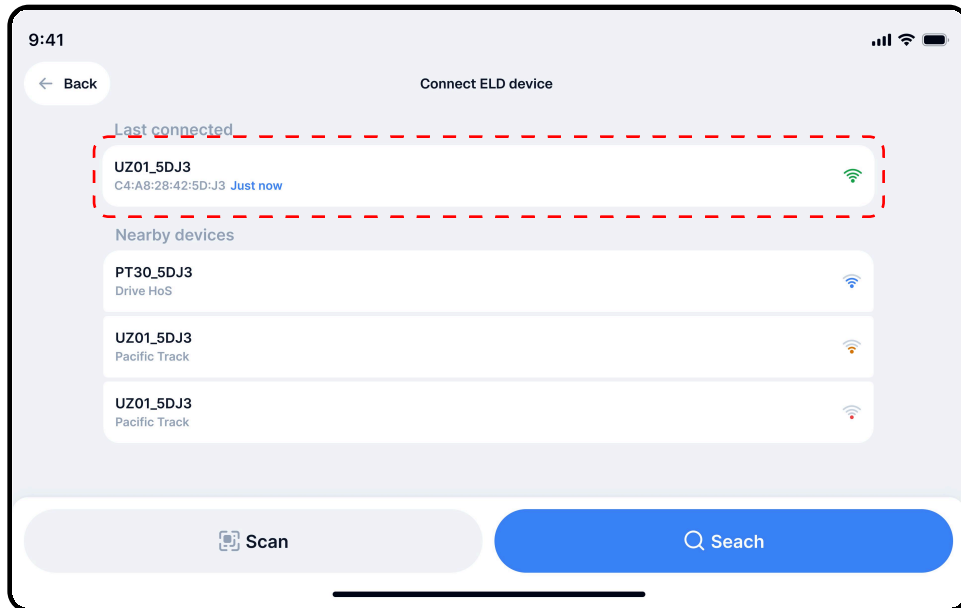

4

## ELD connected

A green "Connected" status on the dashboard means your ELD is successfully linked and ready to use.

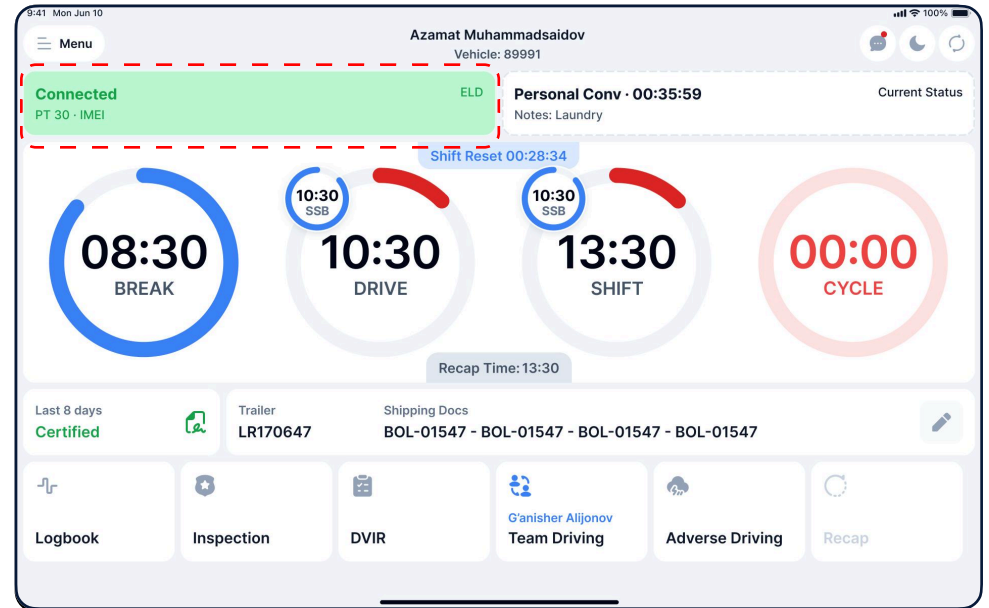


# Using ELD on the road

2

## Changing Your Duty Status


Tap the on your current duty status bar on the dashboard to change your duty status. Select from Off Duty, Sleeper, On Duty, Yard Move, or Personal based on your current situation.

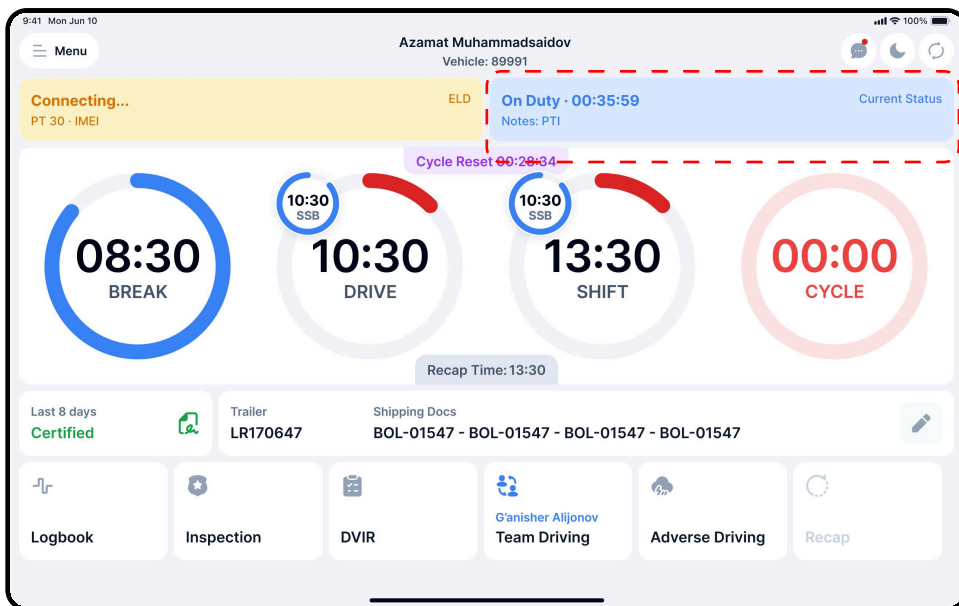

3


## Adding Trip Details

Enter your Trailer, Shipping Docs, Location, and Notes. Use the quick select buttons for common notes like "PTI" or "Delivery," or enter them manually. If you leave the location blank, it will be filled in automatically.

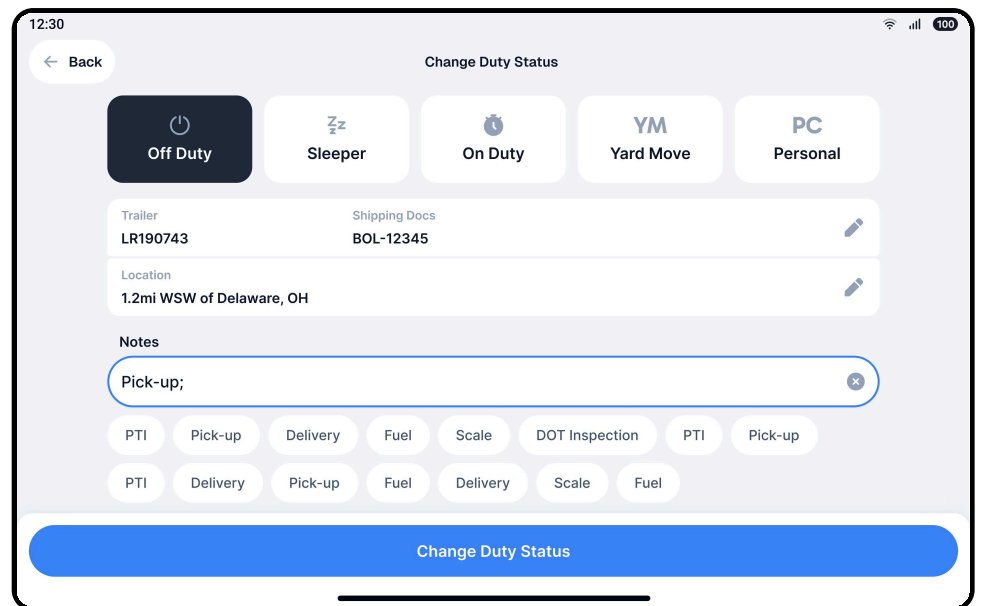

Follow the given guidelines to show your records to the office


# Using ELD on the road

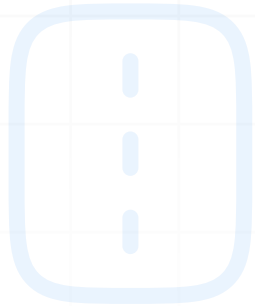

1

## Automatic driving time recording

Your driving time is recorded automatically once your ELD connected. At 5 mph or above, your status switches to "Driving." Below 5 mph, it changes to "On Duty" after 6 minutes being stationary.

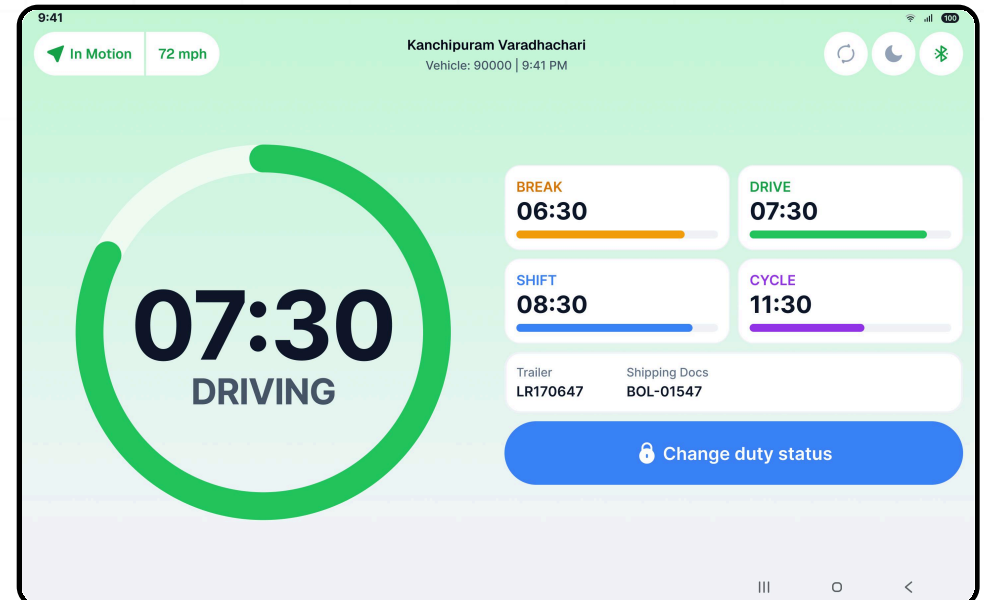


# Review ELD logs

1

Follow these steps to show your records to the officer.


Tap "Inspection" from the dashboard or Menu.

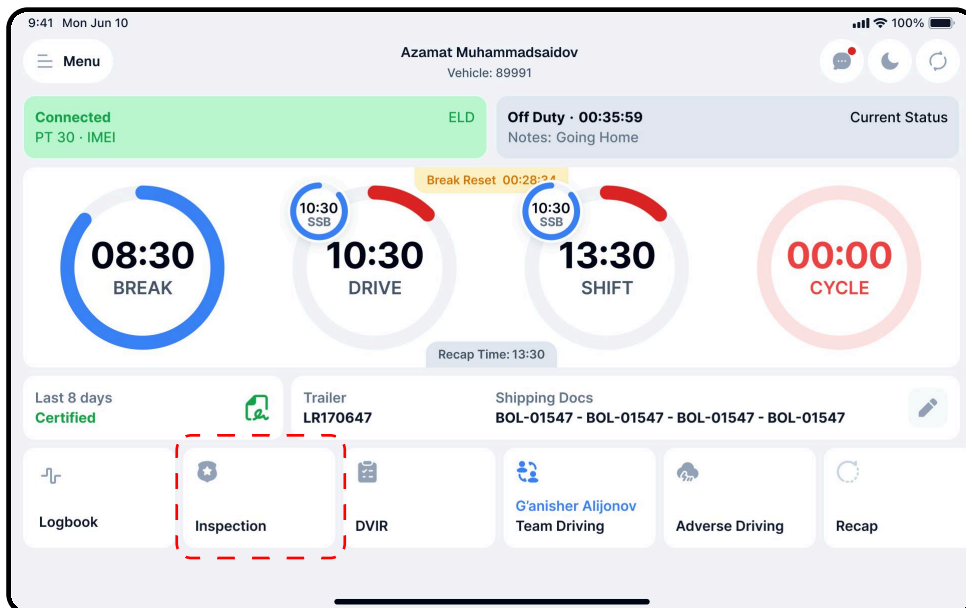

2

Starting a Roadside Inspection

Then tap "Begin Inspection" to display your eight-day logbook summary to the officer.

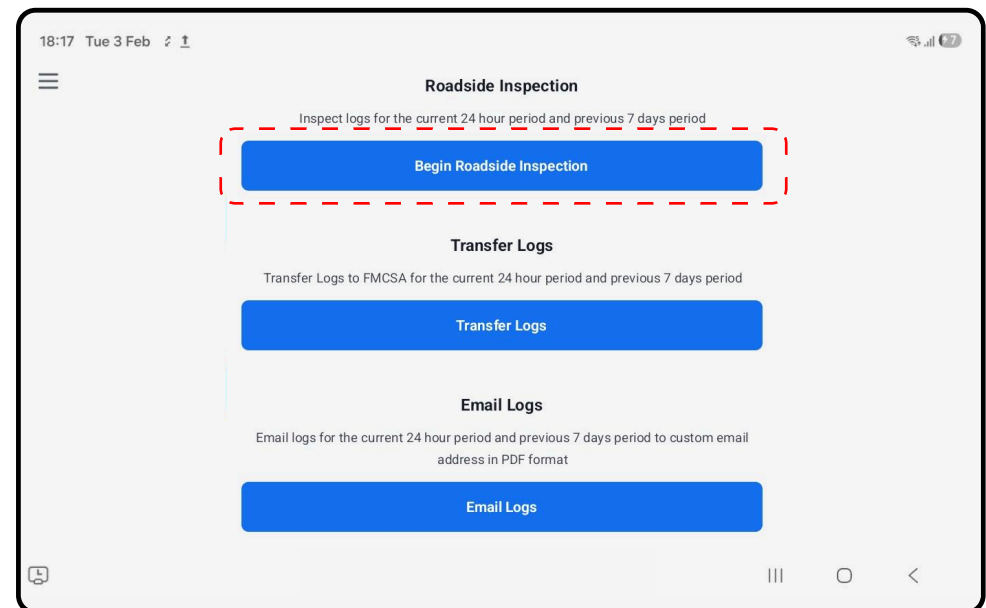


Follow the given guidelines to show your records to the office

2

# Presenting your logs

Hand your device to the officer to display your eight-day logbook summary. The screen shows your Driver's Daily Log with all required information.

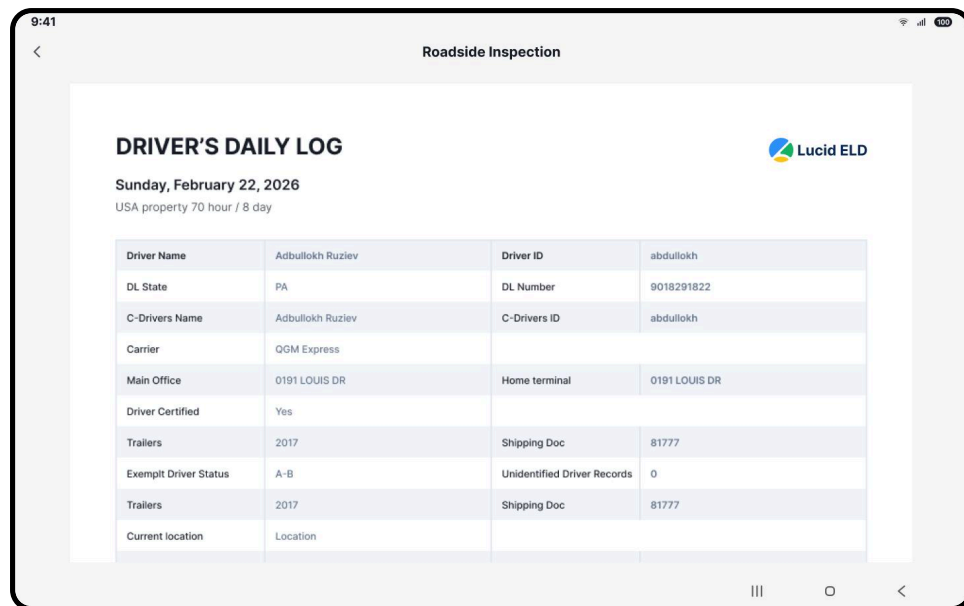

9:41 Roadside Inspection

**DRIVER'S DAILY LOG** Lucid ELD

Sunday, February 22, 2026  
USA property 70 hour / 8 day

Driver Name	Adbullokh Ruziev	Driver ID	abduullokh
DL State	PA	DL Number	9018291822
C-Drivers Name	Adbullokh Ruziev	C-Drivers ID	abduullokh
Carrier	QGM Express		
Main Office	0191 LOUIS DR	Home terminal	0191 LOUIS DR
Driver Certified	Yes		
Trailers	2017	Shipping Doc	81777
Exempt Driver Status	A-B	Unidentified Driver Records	0
Trailers	2017	Shipping Doc	81777
Current location	Location		


Follow the given guidelines to show your records to the office

# Transfer your ELD records to the authorized safety officer for inspection.

1

## Transfer ELD Records to the Officer


Follow these steps to electronically send your records to the officer.

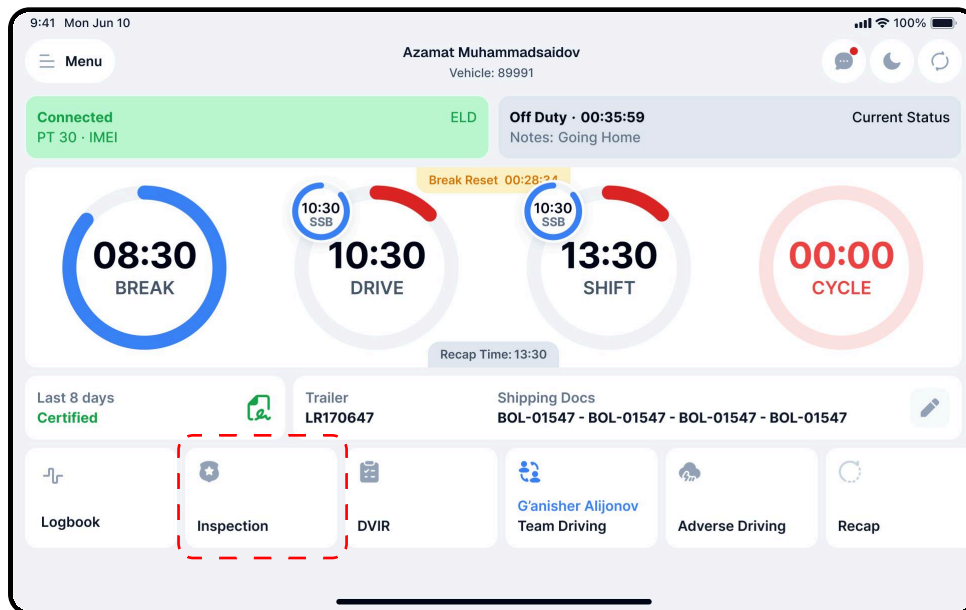

2

## Accessing the Transfer Option

Tap "Inspection" from the dashboard or Menu, then tap "Transfer Logs."

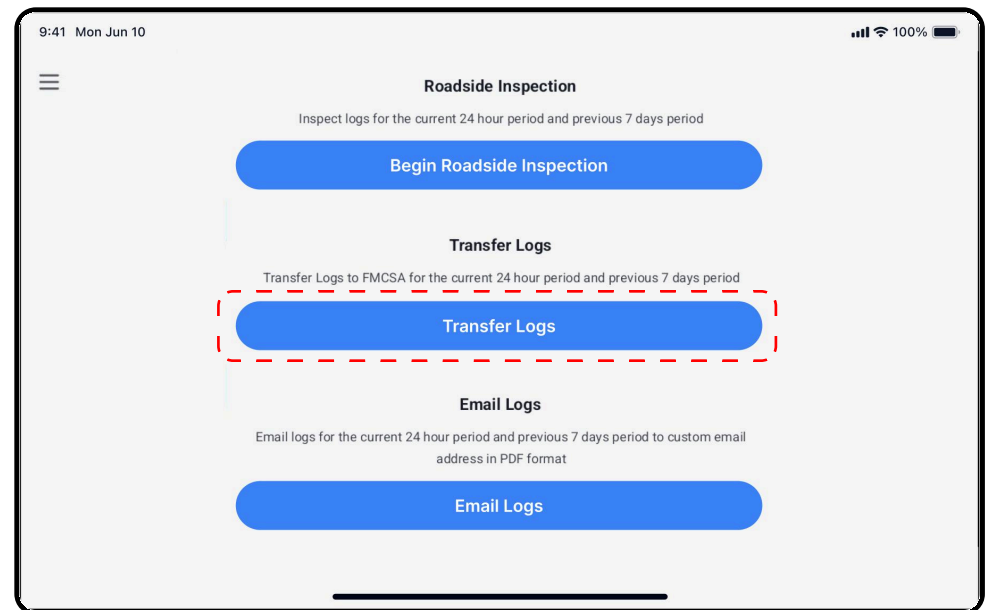


Follow the given guidelines to show your records to the office

# Transfer your ELD records to the authorized safety officer for inspection.

3

## Sending Your Records

Select "Web Service" or "Email," add a comment if needed, and tap "Confirm" to send your logs to the officer.

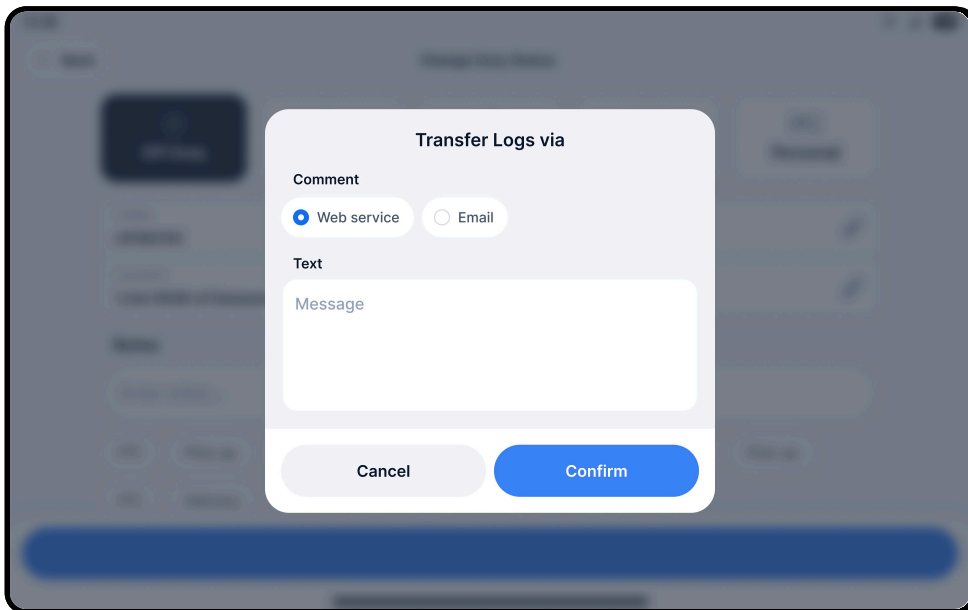

Follow the given guidelines to show your records to the office

# ELD Malfunctions



## 395.22 Motor carrier Responsibilities

Motor carriers must ensure drivers have an ELD information packet onboard that includes malfunction reporting requirements and record keeping procedures. The following instructions are in accordance with 395-34.

### Malfunction Codes

The ELD monitors and reports malfunctions based on section 4.6 "ELD's Self-Monitoring of Required Functions," table 4:

- P – "Power compliance" malfunction,
- E – "Engine synchronization compliance" malfunction,
- T – "Timing compliance" malfunction,
- L – "Positioning compliance" malfunction,
- R – "Data recording compliance" malfunction,
- S – "Data transfer compliance" malfunction,
- O – "Other" ELD detected malfunction