

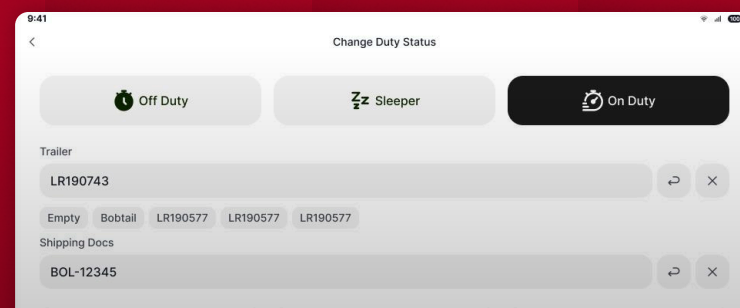
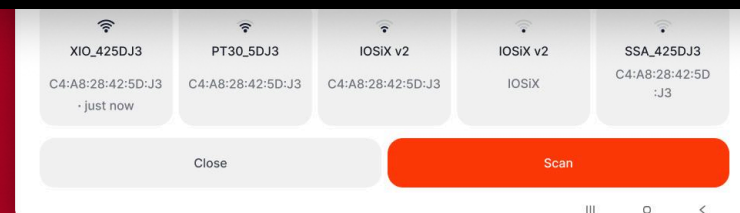
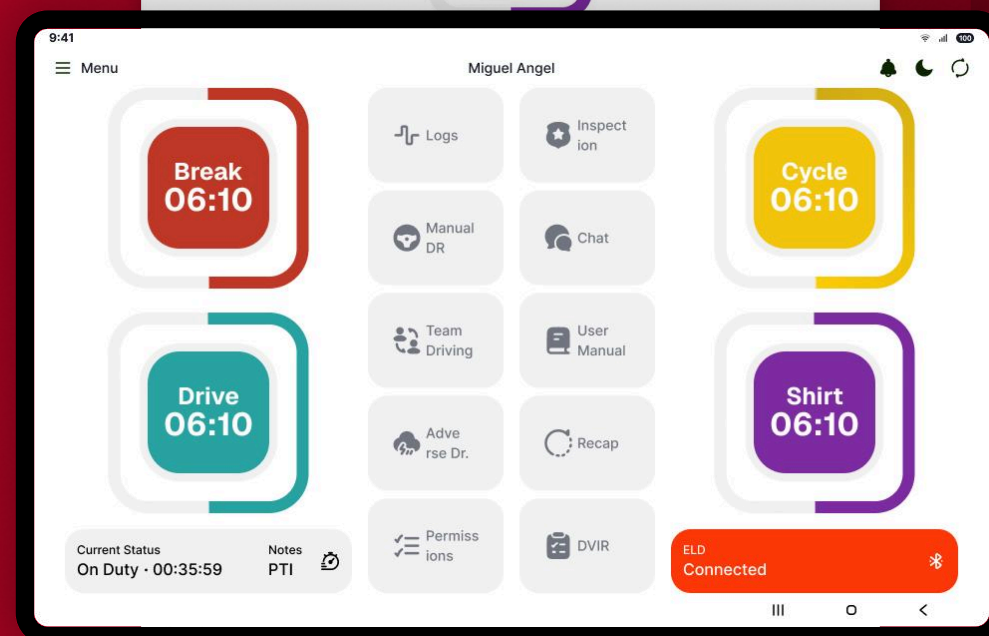
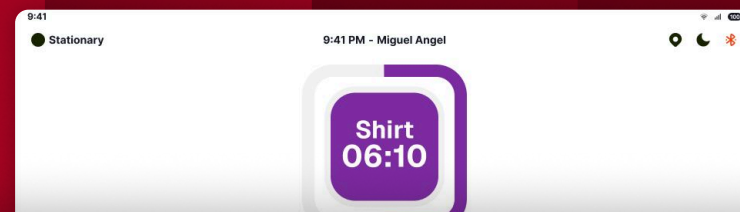


USER GUIDE

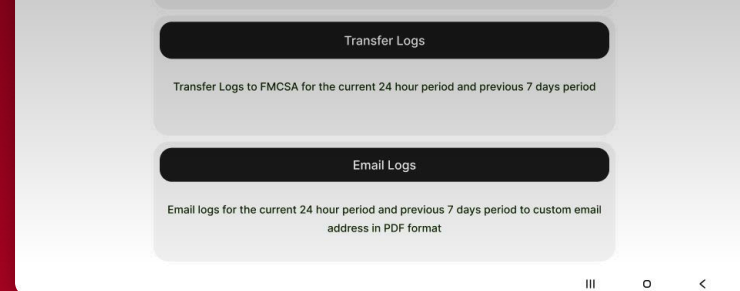


Application Manual

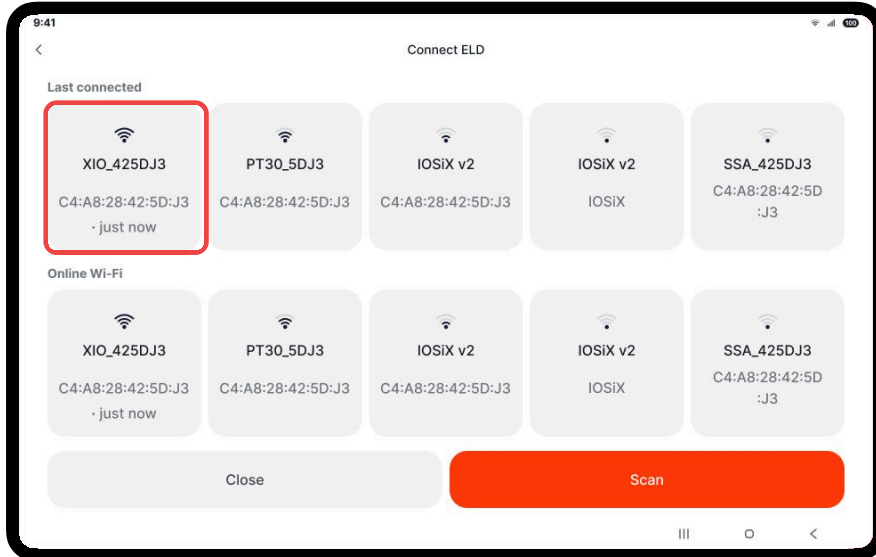

Select your ELD device


Select your ELD from the available devices using the displayed signal strength.

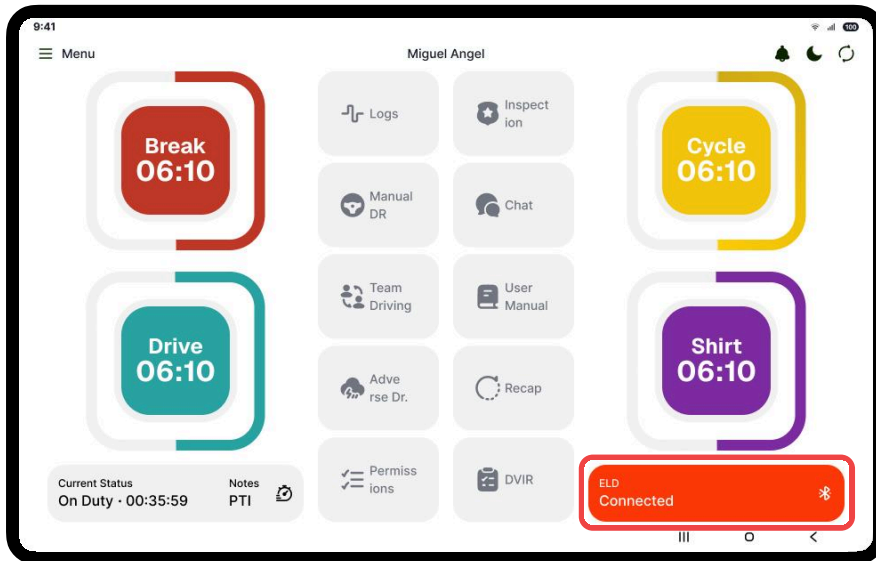

Your ELD is now connected

A green 'Connected' indicator on the instrument panel confirms that your ELD is paired and ready for use.


Using ELD while driving

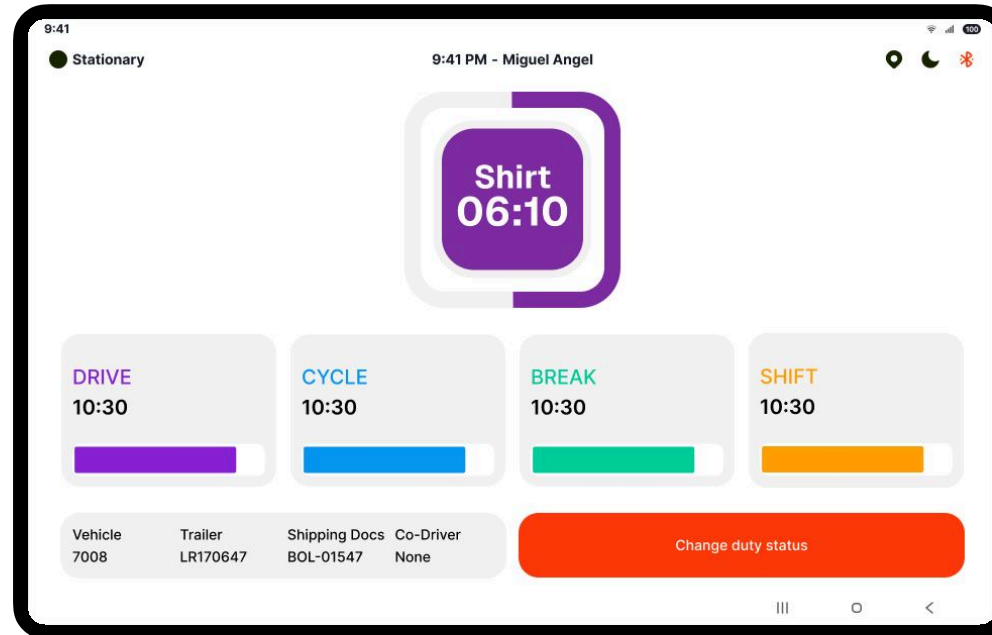

Automated tracking of driving time.


Your driving time is recorded automatically once your ELD is connected. Your status changes to "Driving" when your speed reaches 5 mph or higher. If your speed falls below 5 mph, your status switches to "On Duty" after you've been stopped for 6 minutes.

Using ELD while driving

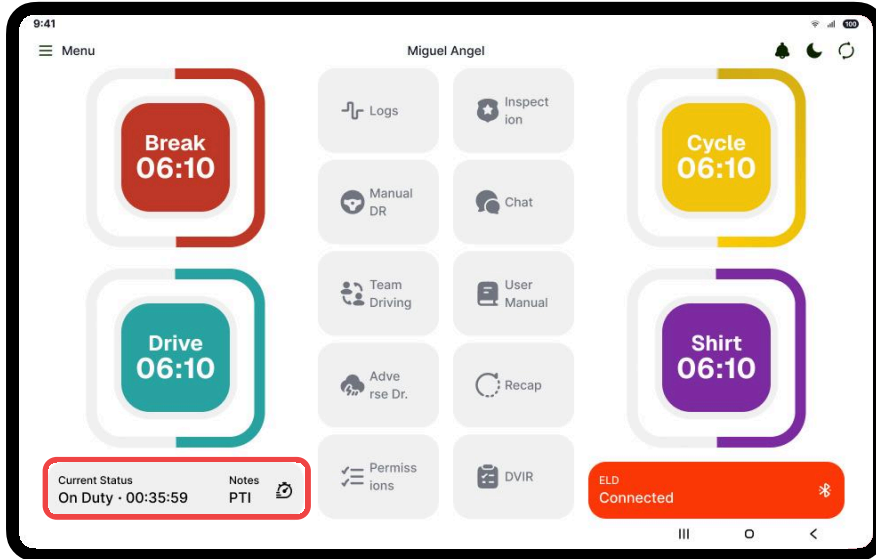

Updating Your Duty Status.


Tap the status bar on your dashboard to update your duty status. Select Off Duty, Sleeper, On Duty, Yard Move, or Personal based on your current activity.

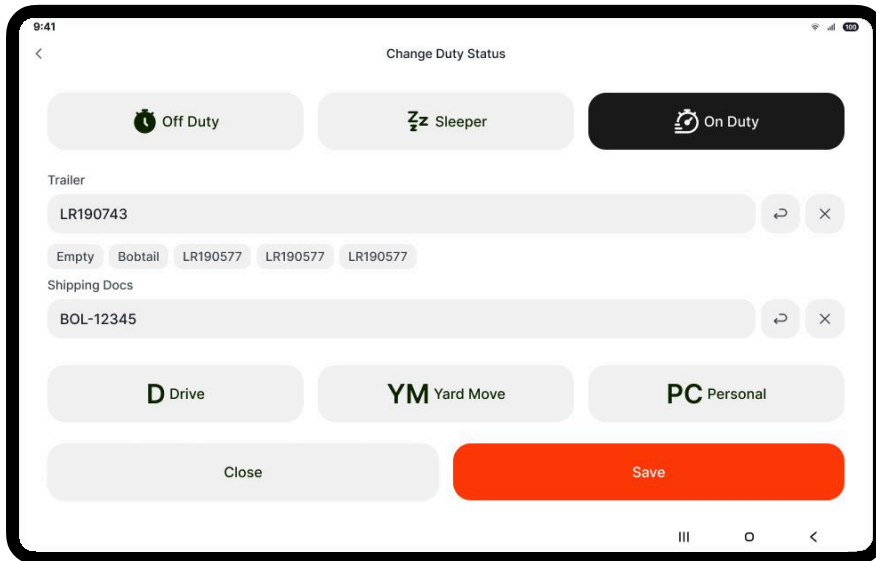

Entering Trip Details.


Enter your Trailer, Shipping Documents, Location, and Notes. Use the quick-select buttons for common entries like "PTI" or "Delivery," or enter them manually. If the Location field is left blank, it will be filled in automatically.

Review your ELD logs

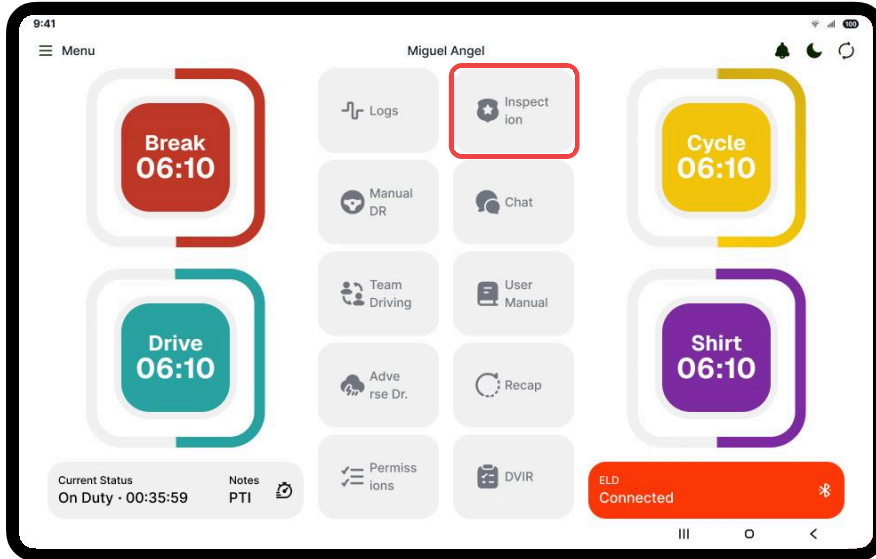

Use these instructions to show your records to the officer

Select "Inspection" from the dashboard or the menu.

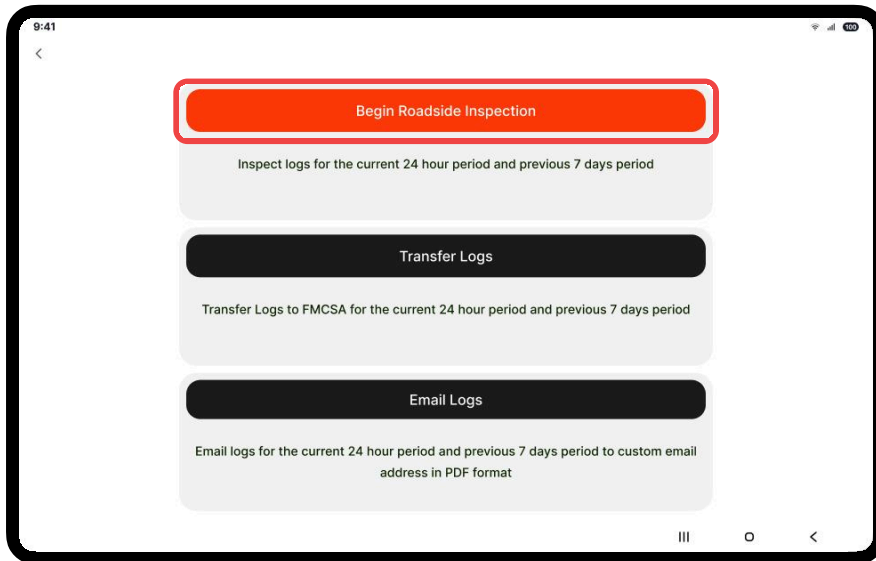

Starting a Roadside Inspection.

Then, tap "Begin Roadside Inspection" to display your eight-day logbook summary for the officer.

Driver's daily log

DRIVER'S DAILY LOG




Sunday, March 12, 2026
USA property 70 hour / 8 day

Driver Name	Miguel Ángel	Driver ID	3859204
Driver's License State	USA-NO	Driver's License Number	S4928371
Co-Driver's Name		Co-Driver ID	
Carrier			
Main Office Location	12915 Foothill Blvd, Rancho Cucamonga,...	Home Terminal Location	12915 Foothill Blvd, Rancho Cucamonga,...
Driver's Certification Status	No		
Trailers Owned	2016	Shipping Documents	81777
Exempt Driver Status	No, not exempt	Unidentified Driver Records	0 Records
Malfunction Indicators	Yes	Data Diagnostic Indicators	No
Current Location			
Time Zone Offset	PST (UTC-8)	24-Hour Start Time	12:00 AM (Midnight)
ELD Identification Number		ELD Provider Name	

Displaying your logs.

Hand your device to the officer to display your eight-day logbook summary. The screen shows your Driver's Daily Log with all required information.

Transfer ELD records to authorized safety officer for inspection.

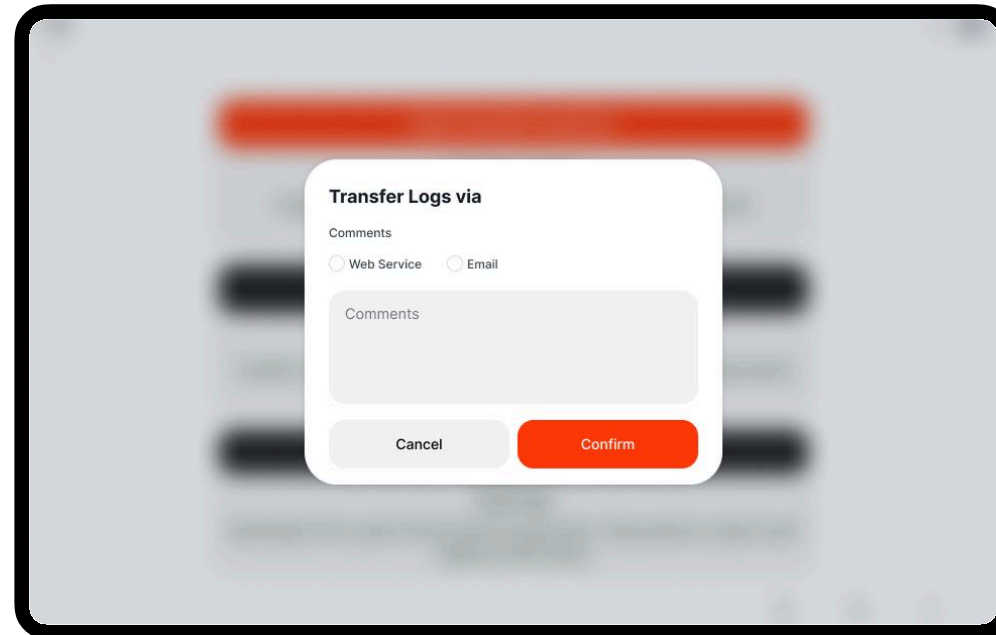A screenshot of a web application interface showing a modal dialog box titled "Transfer Logs via". The dialog box has a "Comments" section with two radio buttons: "Web Service" and "Email". Below the radio buttons is a text input field labeled "Comments". At the bottom of the dialog box are two buttons: "Cancel" and "Confirm". The background of the dialog box is blurred, showing a list of logs.

Choose "Web Service" or "Email," add a comment if needed, and press "Confirm" to send your logs to the officer

Confirm that your documents comply with the required guidelines before submitting them to the office.

Ensure you follow the guidelines when presenting your documents to the office.

ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions", table 4:

P – "Power compliance" malfunction, E – "Engine synchronization compliance" malfunction, T – "Timing compliance" malfunction, L – "Positioning compliance" malfunction, R – "Data recording compliance" malfunction, S – "Data transfer compliance" malfunction, O – "Other" ELD detected malfunction.

P – "Power compliance" malfunction,
E – "Engine synchronization compliance" malfunction,
T – "Timing compliance" malfunction,
L – "Positioning compliance" malfunction,
R – "Data recording compliance" malfunction,
S – "Data transfer compliance" malfunction,
O – "Other" ELD detected malfunction

A motor carrier must ensure that its drivers possess an ELD information packet containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions. The following instructions are in accordance with the guidelines set forth in 395-34.

The following instructions are in accordance with the guidelines set forth in 395-34.

395.22 Motor carrier Responsibilities.



KeepDriving