



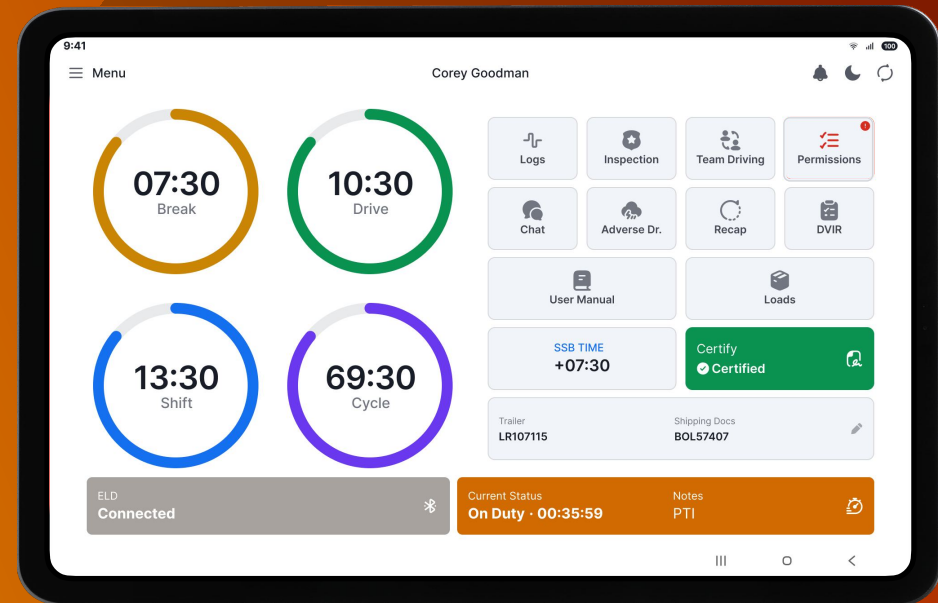

User Guide



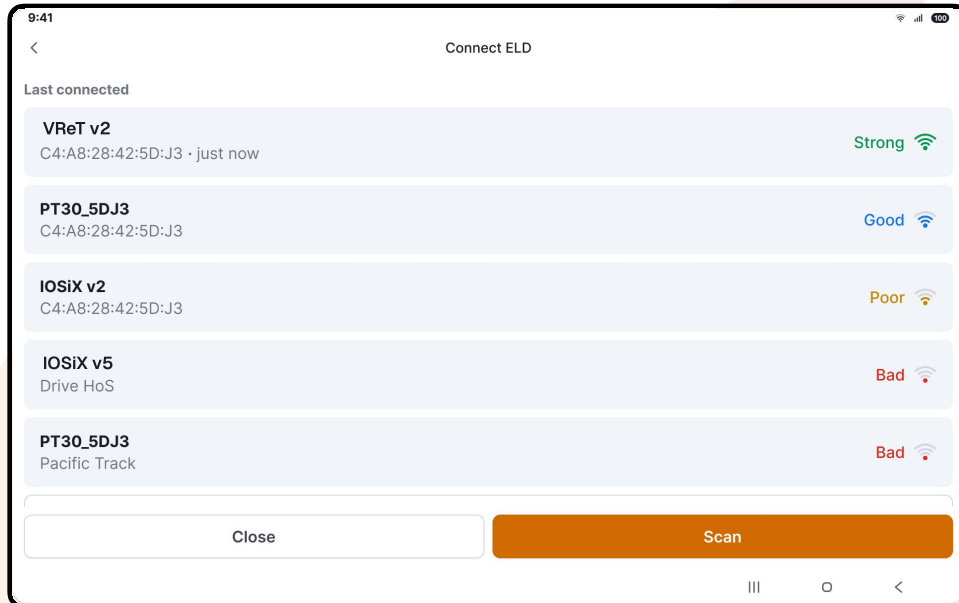


1 Select your ELD device.

Choose your ELD from the list of available devices, each showing its signal strength.

2 Your ELD is now connected


A green "Connected" light on the dashboard indicates that your ELD is successfully linked and ready for operation.

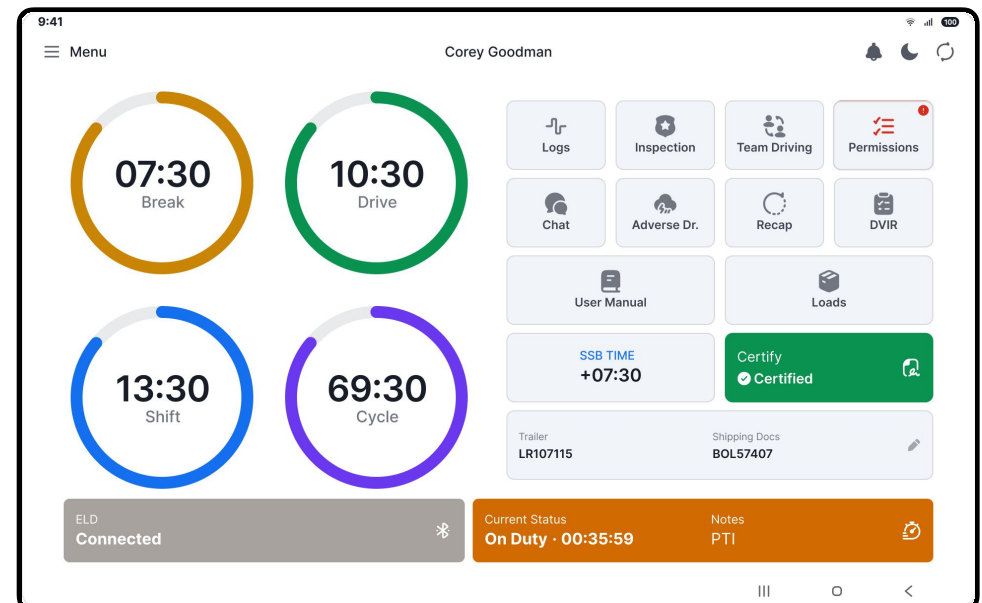

Using ELD while driving

1 Automated tracking of driving time.

Your driving time is automatically recorded when your ELD is connected. When you reach speeds of 5 mph or more, your status changes to "Driving." If you drop below 5 mph, it will switch to "On Duty" after being stationary for 6 minutes.

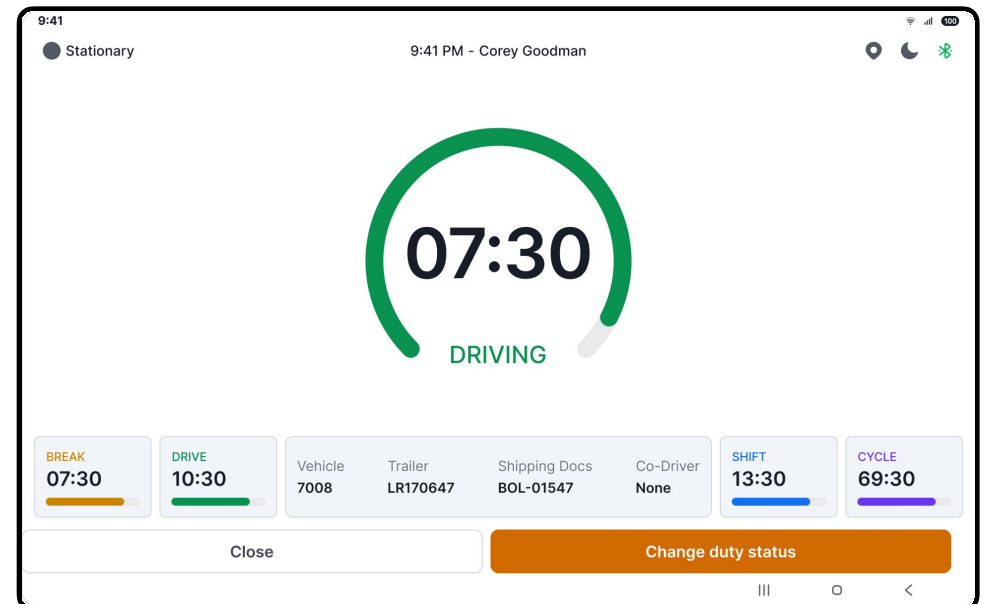


Using an ELD while driving

1 Entering Trip Details

Input your Trailer, Shipping Documents, Location, and Notes. You can use quick select buttons for common notes like "PTI" or "Delivery," or enter them manually. If you leave the location blank, it will be filled in automatically.

The screenshot shows the 'Change Duty Status' screen. At the top, there are six buttons for duty status: Off Duty, Sleeper, On Duty (highlighted in green), Drive, Yard Move, and Personal. Below these are input fields for Trailer (LR190743), Shipping Docs (BOL-12345), Location (1.2mi WSW of Delaware, OH), and Notes (PTI;). There are also quick select buttons for common notes like PTI, Pick-up, Delivery, Fuel, Scale, and DOT In. At the bottom, there are 'Close' and 'Save' buttons.

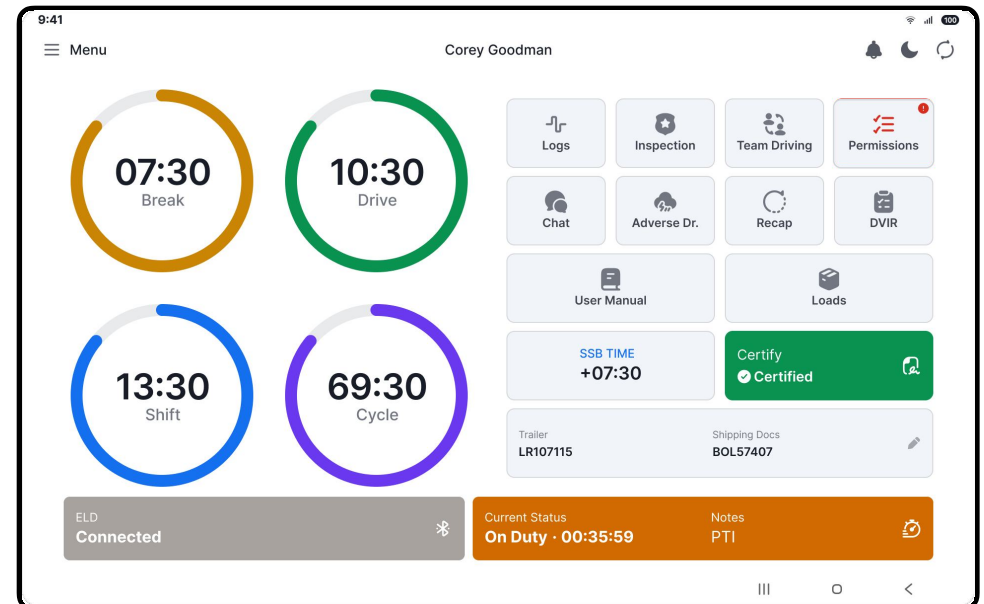

2 Updating Your Duty Status



To change your duty status, tap the bar showing your current status on the dashboard. Select from Off Duty, Sleeper, On Duty, Yard Move, or Personal based on your situation.

Ensure you follow the guidelines when presenting your documents to the office.

Review your ELD logs.

1 Starting a Roadside Inspection.

Next, tap "Begin Roadside Inspection" to display your eight-day logbook summary to the officer.

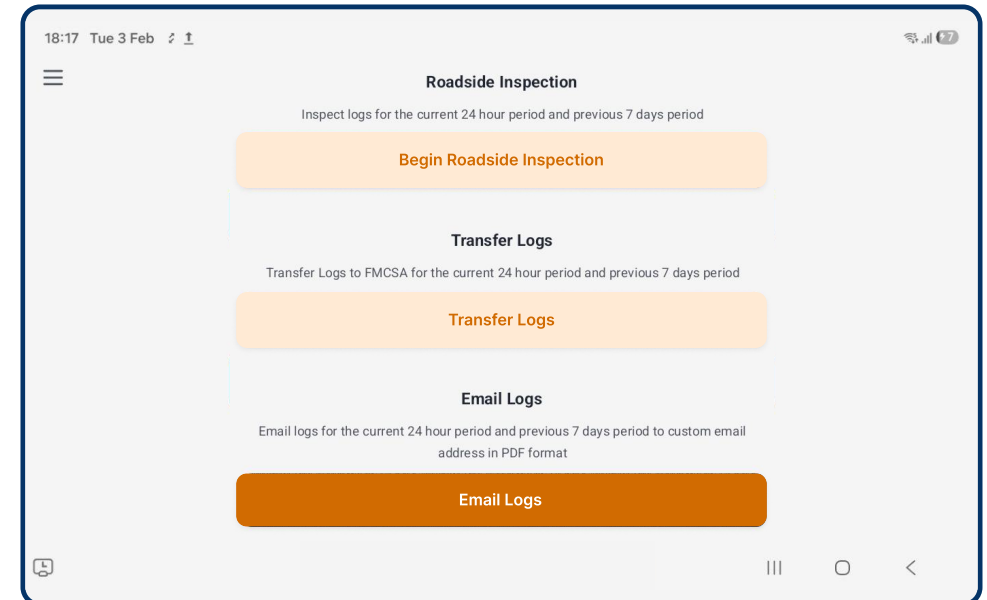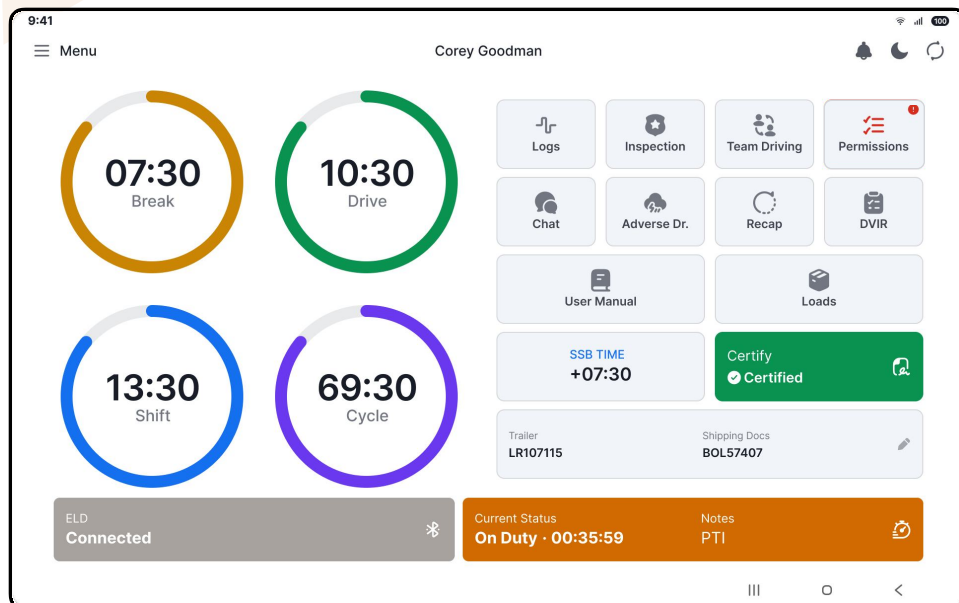

2 Use these instructions to show your records to the officer.

Select "Inspection" from the dashboard or menu.

Driver's daily log

1 Displaying your logs.

Hand your device to the officer to display your eight-day logbook summary. The screen will show your Driver's Daily Log with all required details.

DRIVER'S DAILY LOG

Sunday, March 12, 2026

USA property 70 hour / 8 day




Driver Name	Jose Carlos Capitán	Driver ID	
DL State	USA-NO	DL Number	78595789
Co-Drivers Name	Jose Carlos Capitán	Co-Drivers ID	
Carrier			
Main Office	3081 Rose Avenue,New Orleans 70127	Home terminal	3081 Rose Avenue,New Orleans 70127
Driver Certified	Yes		
Trailers	2018	Shipping Doc	81777
Exempt Driver Status	No	Unidentified Driver Records	0
Trailers	2018	Shipping Doc	12232
Current location	Location		
Time Zone offset	PST (UTC-8)	24 hour Start Time	Midnight
ELD ID		ELD Provider	

Ensure you follow the guidelines when presenting your documents to the office.

Transfer ELD records to authorized safety officer for inspection

1 Submitting Your Records

Choose "Web Service" or "Email," add a comment if needed, and press "Confirm" to send your logs to the officer.

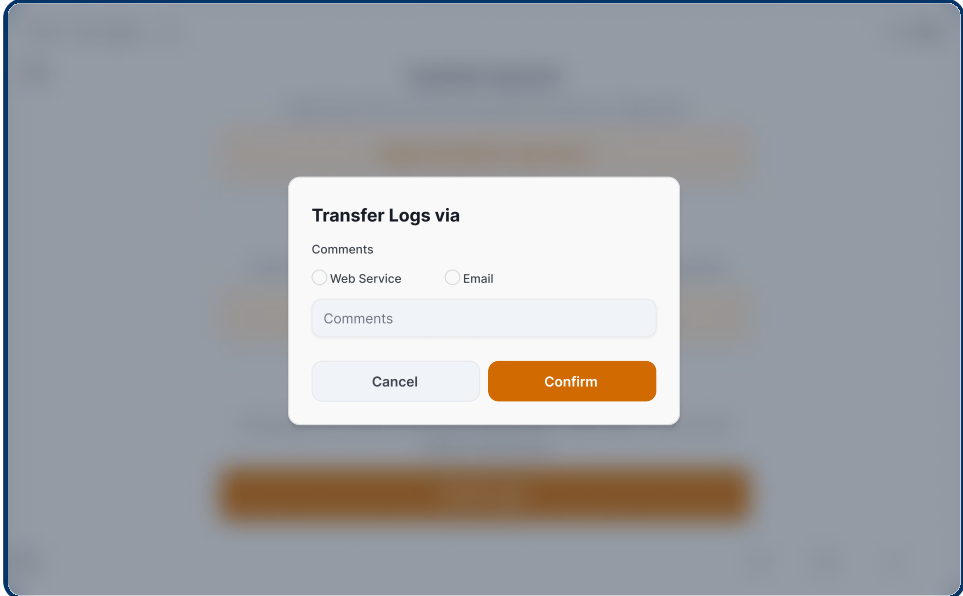A screenshot of a mobile application interface showing a dialog box titled "Transfer Logs via". The dialog box has a white background and rounded corners. It contains two radio buttons: "Web Service" and "Email". Below the radio buttons is a text input field labeled "Comments". At the bottom of the dialog box are two buttons: "Cancel" and "Confirm". The "Confirm" button is orange, while the "Cancel" button is light blue. The background of the application is a blurred grey.

Ensure you follow the guidelines when presenting your documents to the office.



HUNTER ELD

ELD COMPANY FOR LOGISTICS

ELD Malfunctions

395.22 Motor carrier Responsibilities

A motor carrier must ensure that its drivers possess onboard a commercial motor vehicle and an ELD information packet containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions. The following instructions are in accordance with the guidelines set forth in 395-34

The following instructions are in accordance with the guidelines set forth in 395-34

ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions", table 4:

- P – "Power compliance" malfunction,
- E – "Engine synchronization compliance" malfunction,
- T – "Timing compliance" malfunction,
- L – "Positioning compliance" malfunction,
- R – "Data recording compliance" malfunction,
- S – "Data transfer compliance" malfunction,
- O – "Other" ELD detected malfunction

Ensure you follow the guidelines when presenting your documents to the office.