

ORIENT ELD



ELD System

ORIENT ELD ensures FMCSA compliance and delivers superior safety and productivity for any fleet

orienteld.com

ORIENT ELD - Electronic Logging Device

Main Features

ELD Compliance and much more

Automatic HOS

Automatic hours of service calculation and violation alerts.
Automatic recording of driving time, miles and locations.



Compliance Monitoring

Monitor your drivers' hours of service logs and DVIRs.
Receive alerts to prevent violations.

DOT Inspection Mode

Simply show logs on your phone or tablet.
No printer needed.



Fleet Tracking

Track your vehicles in real time and view their location history.

Multiple HOS Rules

Compliant with multiple HOS rules including Property/Passenger 60-hour/7-day & 70-hour/8-day.



IFTA reporting

Automatic IFTA state mileage reporting saves you time and money.

Electronic DVIR

 
Vehicle inspection reports are created and submitted in seconds.



Access Permissions

Manage permissions for fleet managers, compliance officers, drivers, accountants, brokers and customers

ORIENT ELD Inspection Mode

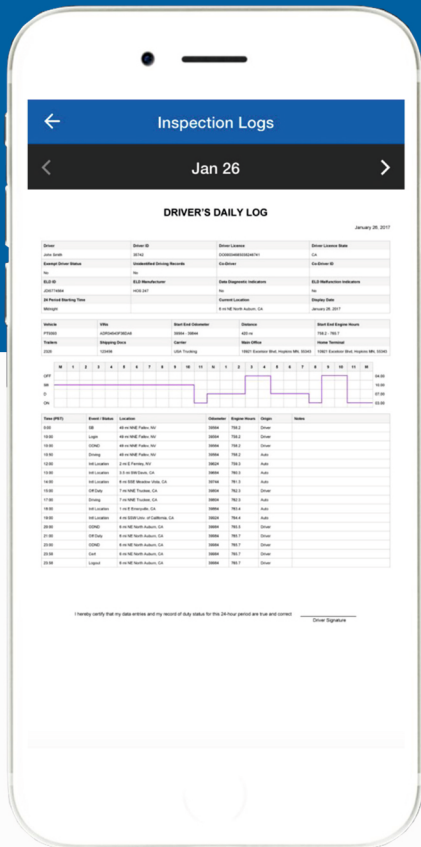

- ✔ Change your status to ON DUTY, tap "Reports" in the menu & press Inspect logs. Let an officer to view your logs directly from your mobile device. Show this instruction card if requested.
- ✔ An inspector may press arrows to view previous or next day's logs.
- ✔ An inspector may view the log form, the log graph and the log events with notes.
- ✔ Exit the inspection mode by pressing back arrow in the left top corner of the app.

Send Logs

ORIENT ELD is capable of producing and transferring the ELD records via telematics transfer methods: Wireless Web services and Email. In order to send the ELD records via Web services a driver must change status to ON DUTY, press "Reports" menu item, enter an ID code provided by an authorized safety official and then press "Send logs" button. In order to send the ELD records via Email a driver must change status to ON DUTY, press "Reports" menu item, press "Email Logs", enter an email provided by an authorized safety official and press "Save" button.

ORIENT ELD Malfunction Manual



In accordance with the guidelines set forth in 395.34

✔ Malfunction indication

Immediately contact the support if LED light on the device is off when the device is plugged into the diagnostic port or if the malfunction reported by the app.

✔ Note the malfunction

Note the malfunction and provide a written notice to your fleet within 24 hours.

✔ Switch to paper logs

Keep a paper log for that day and until the device is repaired or replaced. In the event of an inspection, display the previous 7 days from the app.

✔ 8 days rule

In the event of an ELD malfunction, the motor carrier must take actions to correct the malfunction within 8 days of discovery.

ELD Components

Things You Need To Stay Compliant

Logging Device



Simply plug Electronic Logging Device into a vehicle ECM port and start recording driving hours and miles automatically.

Logbook App



Logbook app connects to Electronic Logging Device via bluetooth and displays recorded driving time to a driver.

Tablet/Smartphone



ELD & App work great with most tablets and smartphones. Use your own or purchase devices and data plans from us.

Install & Connect ELD

ELDs are installed within minutes



✓ Locate ECM (diagnostic) port

Locate ECM (diagnostic) port inside of your vehicle. Look for 9-pin or 6-pin circular ports in heavy duty vehicles. Look for OBDII port in light/medium duty vehicles.

✓ Install ELD

Simply plug the provided cable into a vehicle ECM (diagnostic) and attach the other end to the ELD device. The dual fastener is provided for dash mounting.

 
✓ Log into ELD Logbook App

Log in to ELD Logbook App on your tablet/smartphone with a username and password created during a sign up process or provided by a fleet manager.

✓ Connect ELD

Select a vehicle from a list of available vehicles and your device will attempt to connect to ELD via Bluetooth. Green Bluetooth indicator at the top right corner means you are ready to start using ELD.

Driving with ELD

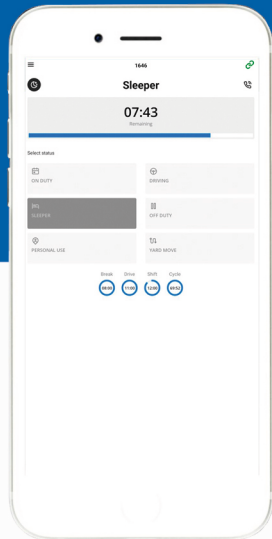

- ✓ Once ELD connected, your driving time will be captured automatically.
- ✓ Once your vehicle is moving at 5 mph or more, your duty status is switched to Driving.
- ✗ Your logs and others features are not available while in Driving mode due to safety reasons.
- ✓ Once your vehicle is stopped, you may change your duty status by tapping on the status circle. The app will remind you to make a selection in 5 minutes. If no selection is made, your duty status will be switched to On Duty.



Hours

Available driving hours, required breaks, on-duty limits and required off-duty time are calculated automatically

 


Warnings

Visual notifications and sound warnings help you to avoid hours of service violations and stay compliant

Duty Status

Set duty status with just two-clicks. Status is updated automatically when driving starts or stops, Easy-to-use interface allows drivers to spend less time doing paperwork and more time driving. ELD simplifies training and prevents log errors.

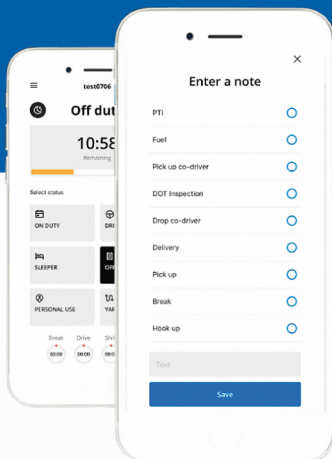

Current Status

Current duty status is always displayed on Status page along with available or reset hours.



Change Status

Select your current status and choose note from modal window



Personal/Yard

Personal Use Off-duty and Yard Move On-Duty statuses must be configured and allowed by a fleet manager.

Logs

Managing logs has never been easier

Today's Log

Tap on TODAY's log to view & manage your current log.



 
Logs History

View past logs & violations if any. Tap on a log you would like to view or edit.



Graph Grid

Similar to paper logs, view your hours or service on the graph grid.

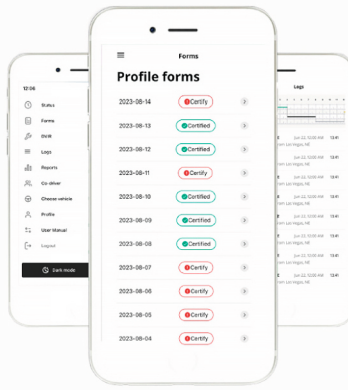

Statuses/Events

Tap on a specific status in the events section to view location and notes.



Edit/Insert Status

Press on "Pencil" to edit or "+" to insert a past duty status.



Certify Log

Tap "Certify" and sign your log when your shift ends.



DVIRs

Paper-free DVIRs save time for drivers

Add DVIR

Tap "+" to add pre-trip or post-trip inspection report



 
Defects

Select defects (if any) from the list and sign DVIR



Correct Defects

Notify mechanic if defects need to be corrected

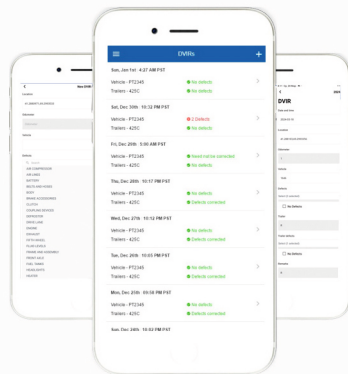

Review last DVIR

Tap on DVIR to review and to confirm the issues have been resolved



DVIRs History

Review past DVIRs to prevent compliance errors



 
Edit DVIR

Tap on created DVIR report to edit and to fix any errors




Easy to Use & to Navigate

Driver-friendly ELD Logbook interface

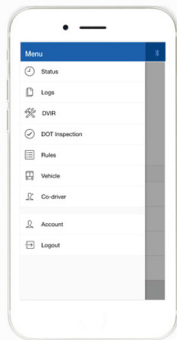

Easy-to-Navigate & Simple Menu

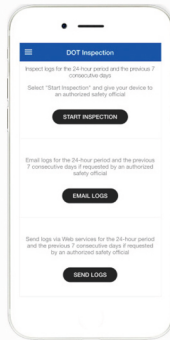 

Tap "Start Inspection" for DOT Mode

Compliance Dashboard

Make sure your drivers stay compliant and productive

Current Status

View current statuses and locations of your drivers. Click on a driver to see details.



 
Real-Time Hours

View real-time hours to avoid violations and regulatory fines



Violations

Monitor violations in real time and mitigate compliance risks

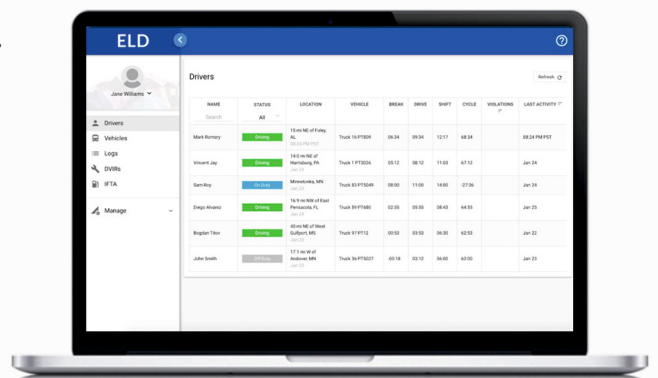

Vincent Jay Edit Refresh

355-545-2343 [j@hcs287.com](mailto:jay@hcs287.com) USA Property 70 hour / 8 day Last Update: JAN 21 8:00 PM EST

Hours of Service

STATUS	DATE	VEHICLE	LOCATION	BREAK	DRIVE	SHIFT	CYCLE
DRIVING	JAN 11 4:00 PM EST	Truck 29 - PT2929	14.0 mi NE of Harrisburg, PA	05:12	08:12	11:03	67:12

> Recap
> Map

Logs

Recent Log

DATE	HOURS DRIVE	DISTANCE	VIOLATIONS & ERRORS
11 Jan 2017	2 hours	376 mi	

Least 14 Days More

DATE	HOURS DRIVE	DISTANCE	VIOLATIONS & ERRORS
10 Jan 2017	10	321 mi	
11 Jan 2017	10	427 mi	
12 Jan 2017	10	368 mi	
10 Jan 2017	10	310 mi	
11 Jan 2017	10	321 mi	
12 Jan 2017	10	382 mi	
10 Jan 2017	10	361 mi	
11 Jan 2017	10	476 mi	

Driver Details

Everything about the driver in one place

Hours of Service

View current status and real-time hours. Available and reset hours are calculated automatically.

Driver Logs

View current log graph grid and last 14 logs. Click on a log to see log details. Click "More" to view historical logs.

Violations & Errors

Monitor violations and errors in real time. View past violations and mitigate compliance risks.

Details

View driver contact information, current or last known vehicle and location.

Logs

Make sure your drivers stay compliant and productive



View logs

View all current and past logs up to six months



Filter

Filter by date or driver



Violations

Monitor violations in real time

Log Details

Log form and events

Tue Jan 24, 2017 01/24/2017 John Smith USA Property 70 hour / 8 day Certified No Violations

Log Form

Driver	John Smith	Co-Driver	
Driver ID	35742	Co-Driver ID	
Driver Licence	D000034685038246741	ELD S/N	JD15774564
Driver Licence State	CA	ELD Malfunction Indicators	No
Exempt Driver Status	No	Data Diagnostic Indicators	No
Underserved Driving Records	No		

Vehicle & Trailer

VEHICLE	VIN	START END ODOMETER	DISTANCE	START END ENGINE HOURS
PT9395	ADR34543F36D46	99564 - 39844	420 mi	758.2 - 745.7

TRAILERS	SHIPPING DOCS	CARRIER	MAIN OFFICE	HOME TERMINAL
2202	123456	USA Trucking	10921 Excelsior Blvd, Hopkins MN, 55343	10921 Excelsior Blvd, Hopkins MN, 55343

Log

Log Events

TIME (PST)	EVENT/STATUS	LOCATION	ODOMETER	ENGINE HOURS	ORIGIN	NOTES
0:00	SB	49 mi NNE Fallon, NV	39564	758.2	Driver	
10:00	Login	49 mi NNE Fallon, NV	39564	758.2	Driver	
10:00	OCND	49 mi NNE Fallon, NV	39564	758.2	Driver	
10:50	OCND	49 mi NNE Fallon, NV	39564	758.2	Auto	
12:00	Driving	2 mi E Fenley, NV	39624	759.3	Auto	
13:00	Intl Location	3.5 mi SW Davis, CA	39684	760.3	Auto	

Log Form

Form and manner errors are displayed automatically.

Vehicles & Trailers

View vehicle & trailer information. Check shipping documents numbers.

Log Events

Check log events. Click on event to suggest an edit. Click "+" to suggest to add an event.

Log Date

Click on a calendar in the top right corner to change a date or click "<->" to switch between logs,