


MOON

USER GUIDE




CUSTOMER
SUPPORT CONTACT

 (913) 562-4789  info@mooneld.com

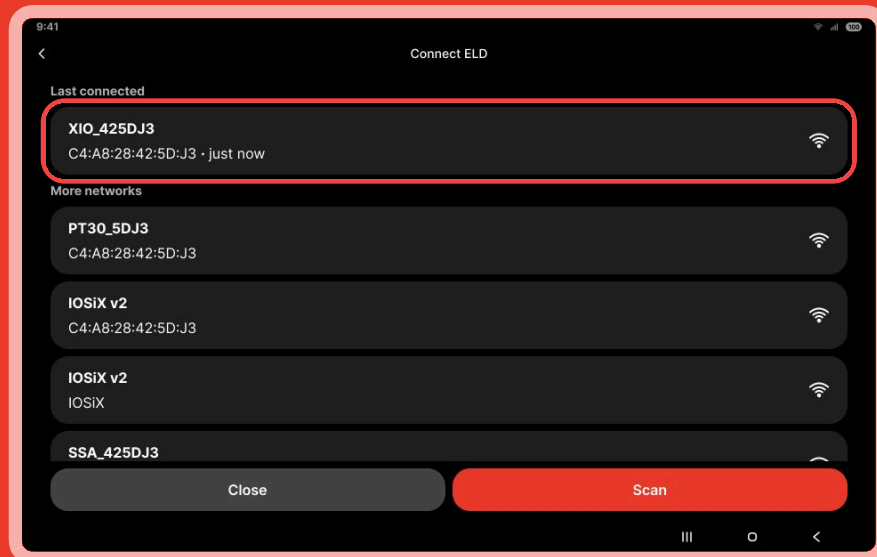

1 Pick your ELD device.


Select your ELD from the list of reachable hardware based on the shown signal strength.

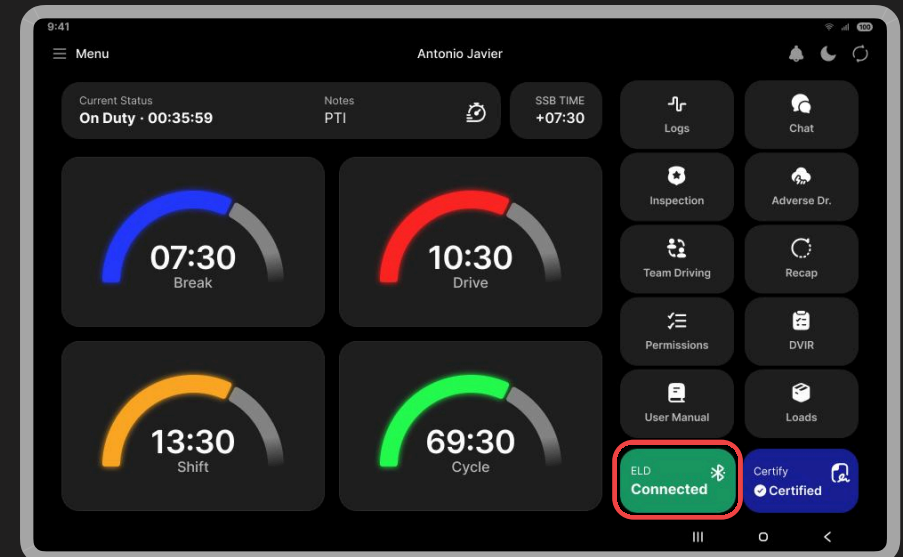

2 Your ELD is now paired.

A green "Connected" light on the dashboard signals that your ELD is linked and set to go.


Using ELD while driving.

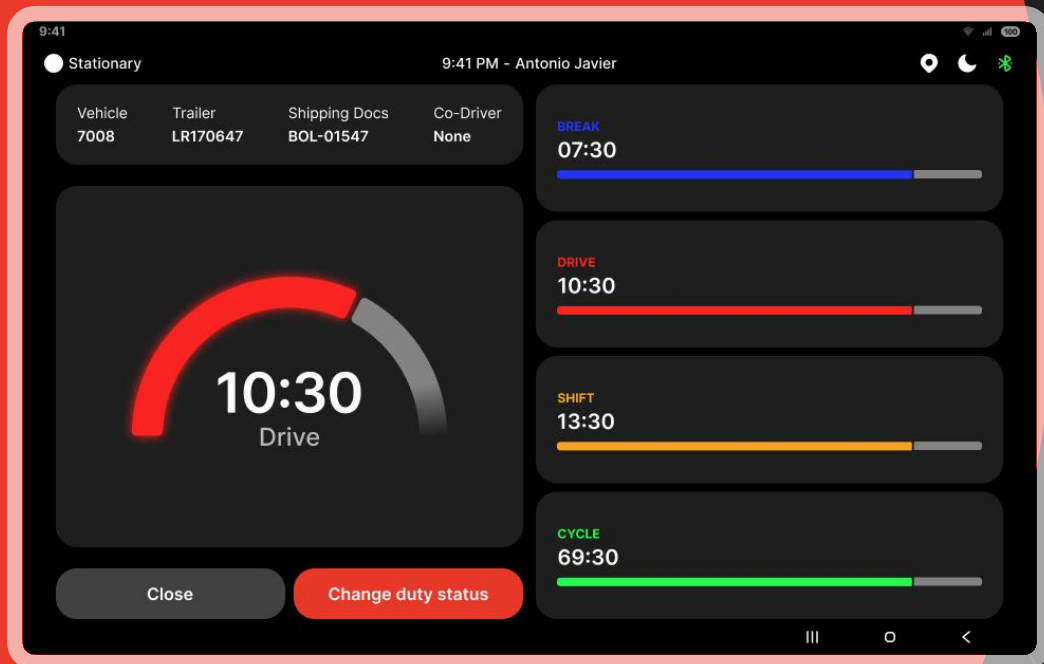

1 Hands-free recording of driving hours.


Your driving hours record automatically the moment your ELD pairs. Your status transitions to "Driving" when you hit a speed of 5 mph or higher. If you fall under 5 mph, it changes to "On Duty" after you stay still for 6 minutes.

Using an ELD while driving.

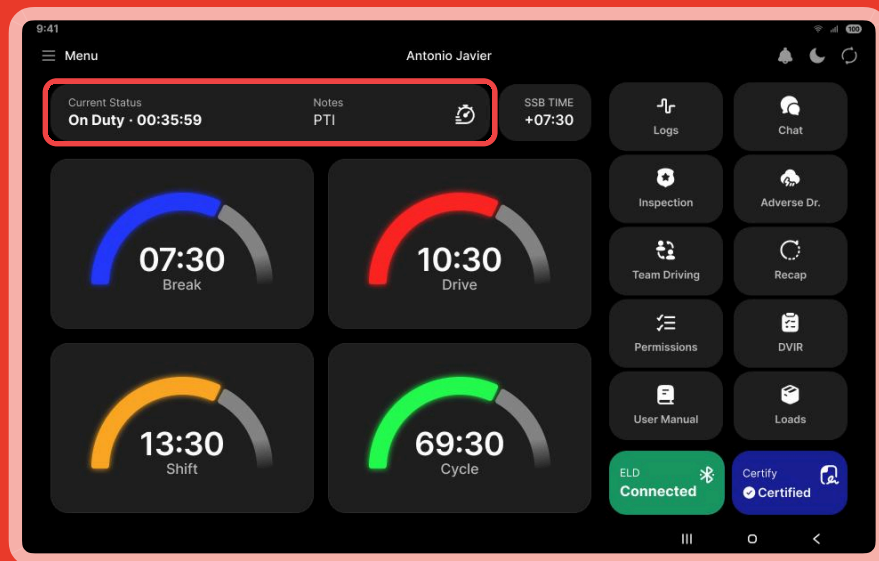

1 Logging Journey Particulars.

Supply information for your Trailer, Shipping Documents, Location, and Notes. Press quick select keys for common entries like "PTI" or "Delivery," or type them manually. The application fills in the location automatically if left empty.

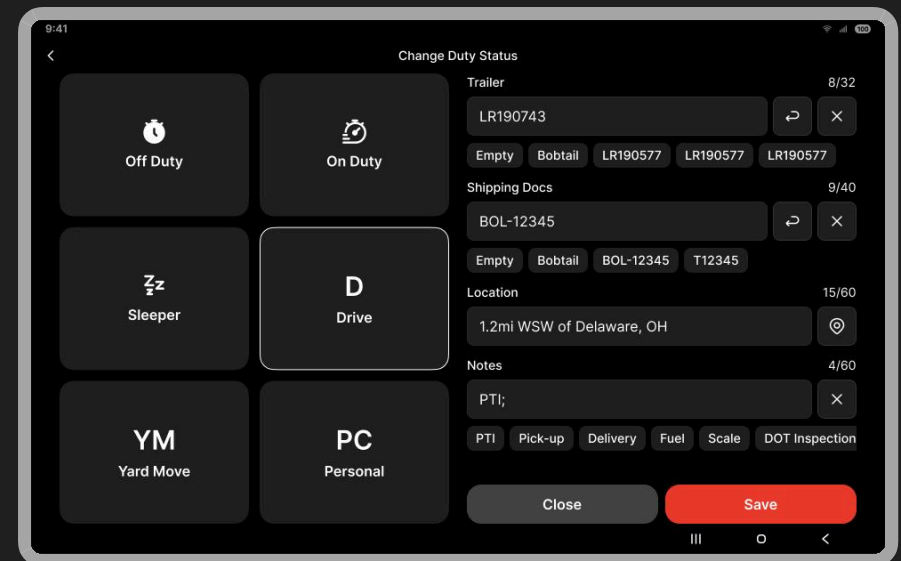


2 Changing Your Duty Status.

Select the status bar on your dashboard to modify your duty status. Choose Off Duty, Sleeper, On Duty, Yard Move, or Personal depending on your current situation.


Ensure you follow the guidelines when presenting your documents to the office.

Review your ELD logs.

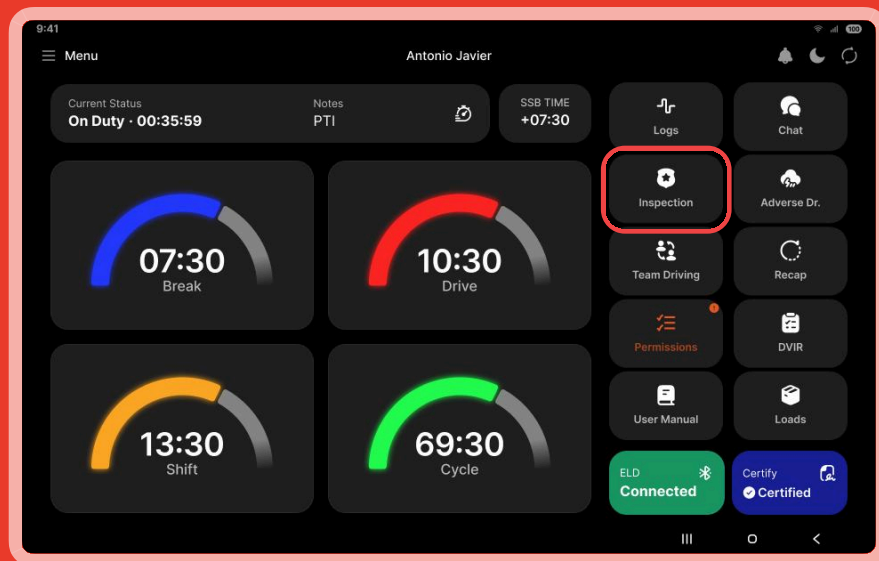

1 Apply these guidelines to present your documents to the officer.

Select "Inspection" from the dashboard or menu.

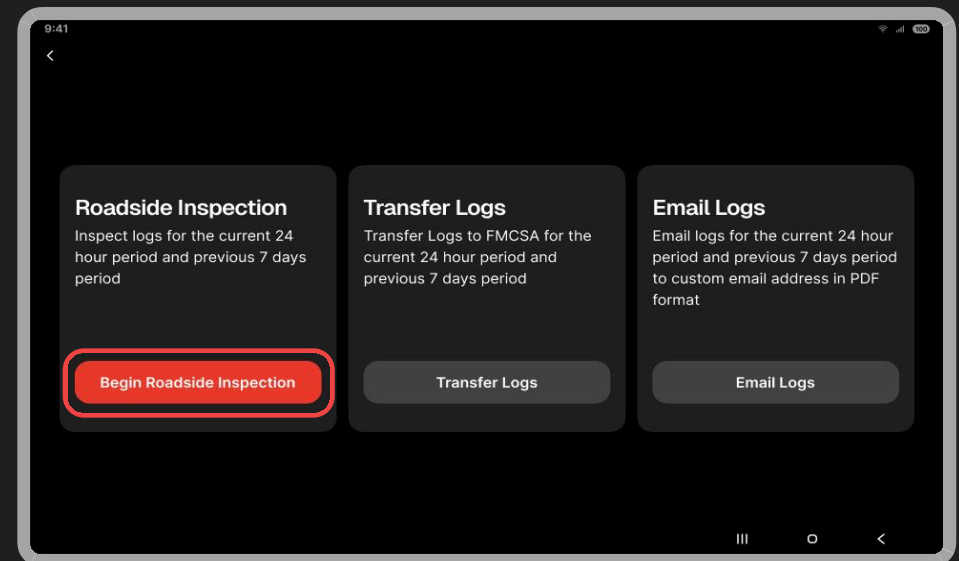

2 Commencing a Roadside Inspection.

Following that, press "Begin Roadside Inspection" to show your eight-day logbook summary to the officer.

Driver's daily log.

Presenting your logs

Sunday, February 19, 2026

USA property 70 hour / 8 day




Driver Name	Antonio Javier	Driver ID	2748391
Driver's License State	USA	Driver's License Number	M4827364
	Ricardo Miguel	Co-Driver ID	6501927
Carrier			
Main Office Location	2130 S 18th Ave, Bozeman, MT 59715	Home Terminal Location	2130 S 18th Ave, Bozeman, MT 59715
Driver's Certification Status	No		
Trailers Owned	2018	Shipping Documents	897451
Exempt Driver Status	No, not exempt	Unidentified Driver Records	0 Records
Malfunction Indicators	Yes	Data Diagnostic Indicators	No
Current Location			
Time Zone Offset	PST (UTC-8)	24-Hour Start Time	12:00 AM (Midnight)
ELD Identification Number		ELD Provider Name	

1 Exhibiting your logs.

Hand your device to the officer to share your eight-day logbook summary. The screen displays your Driver's Daily Log with all mandatory details.

Ensure you follow the guidelines when presenting your documents to the office.

Transfer ELD records to authorized safety officer for inspection.

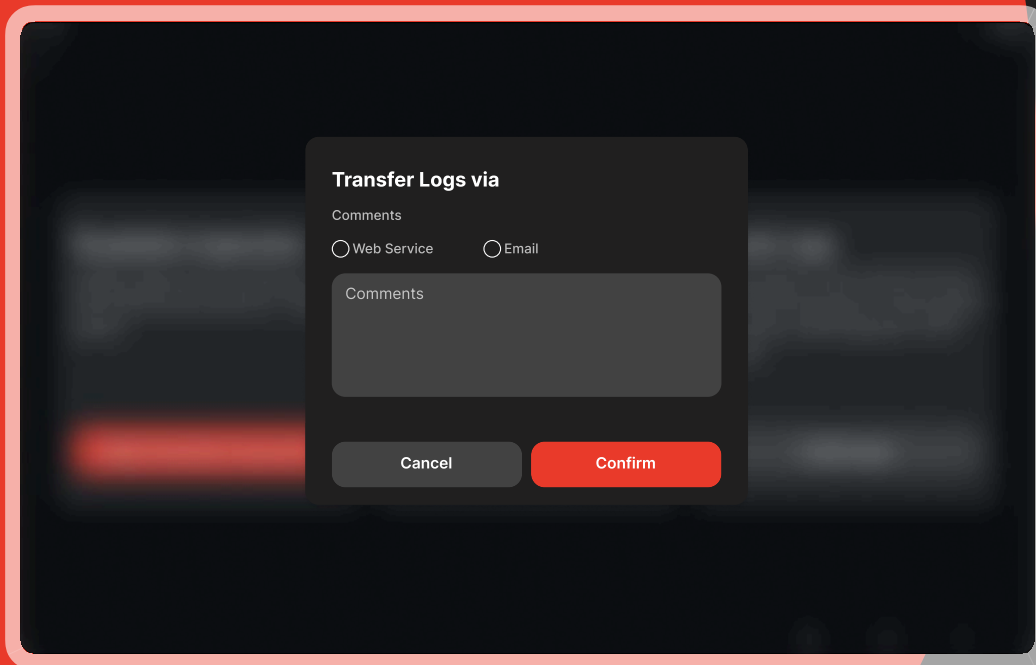A screenshot of a mobile application interface showing a 'Transfer Logs via' dialog box. The dialog box is dark gray with white text. It has a title 'Transfer Logs via' and a subtitle 'Comments'. Below the subtitle are two radio buttons: 'Web Service' and 'Email'. Below the radio buttons is a text input field labeled 'Comments'. At the bottom of the dialog box are two buttons: 'Cancel' and 'Confirm'. The background of the application is dark gray with a large red curved shape on the left side.

- 1 **Select "Web Service" or "Email," input a remark if necessary, and hit "Confirm" to transmit your logs to the officer.**

Verify that you comply with the instructions when delivering your documents to the office.

Ensure you follow the guidelines when presenting your documents to the office.

ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions", table 4:

P – "Power compliance" malfunction, E – "Engine synchronization compliance" malfunction, T – "Timing compliance" malfunction, L – "Positioning compliance" malfunction, R – "Data recording compliance" malfunction, S – "Data transfer compliance" malfunction, O – "Other" ELD detected malfunction.

P – "Power compliance" malfunction,
E – "Engine synchronization compliance" malfunction,
T – "Timing compliance" malfunction,
L – "Positioning compliance" malfunction,
R – "Data recording compliance" malfunction,
S – "Data transfer compliance" malfunction,
O – "Other" ELD detected malfunction

A motor carrier must ensure that its drivers possess an ELD information packet containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions. The following instructions are in accordance with the guidelines set forth in 395-34.

The following instructions are in accordance with the guidelines set forth in 395-34.



ELD System Drivers Rely On
Every Day