




TruckX Wired ELD Tablet

Driver User Manual

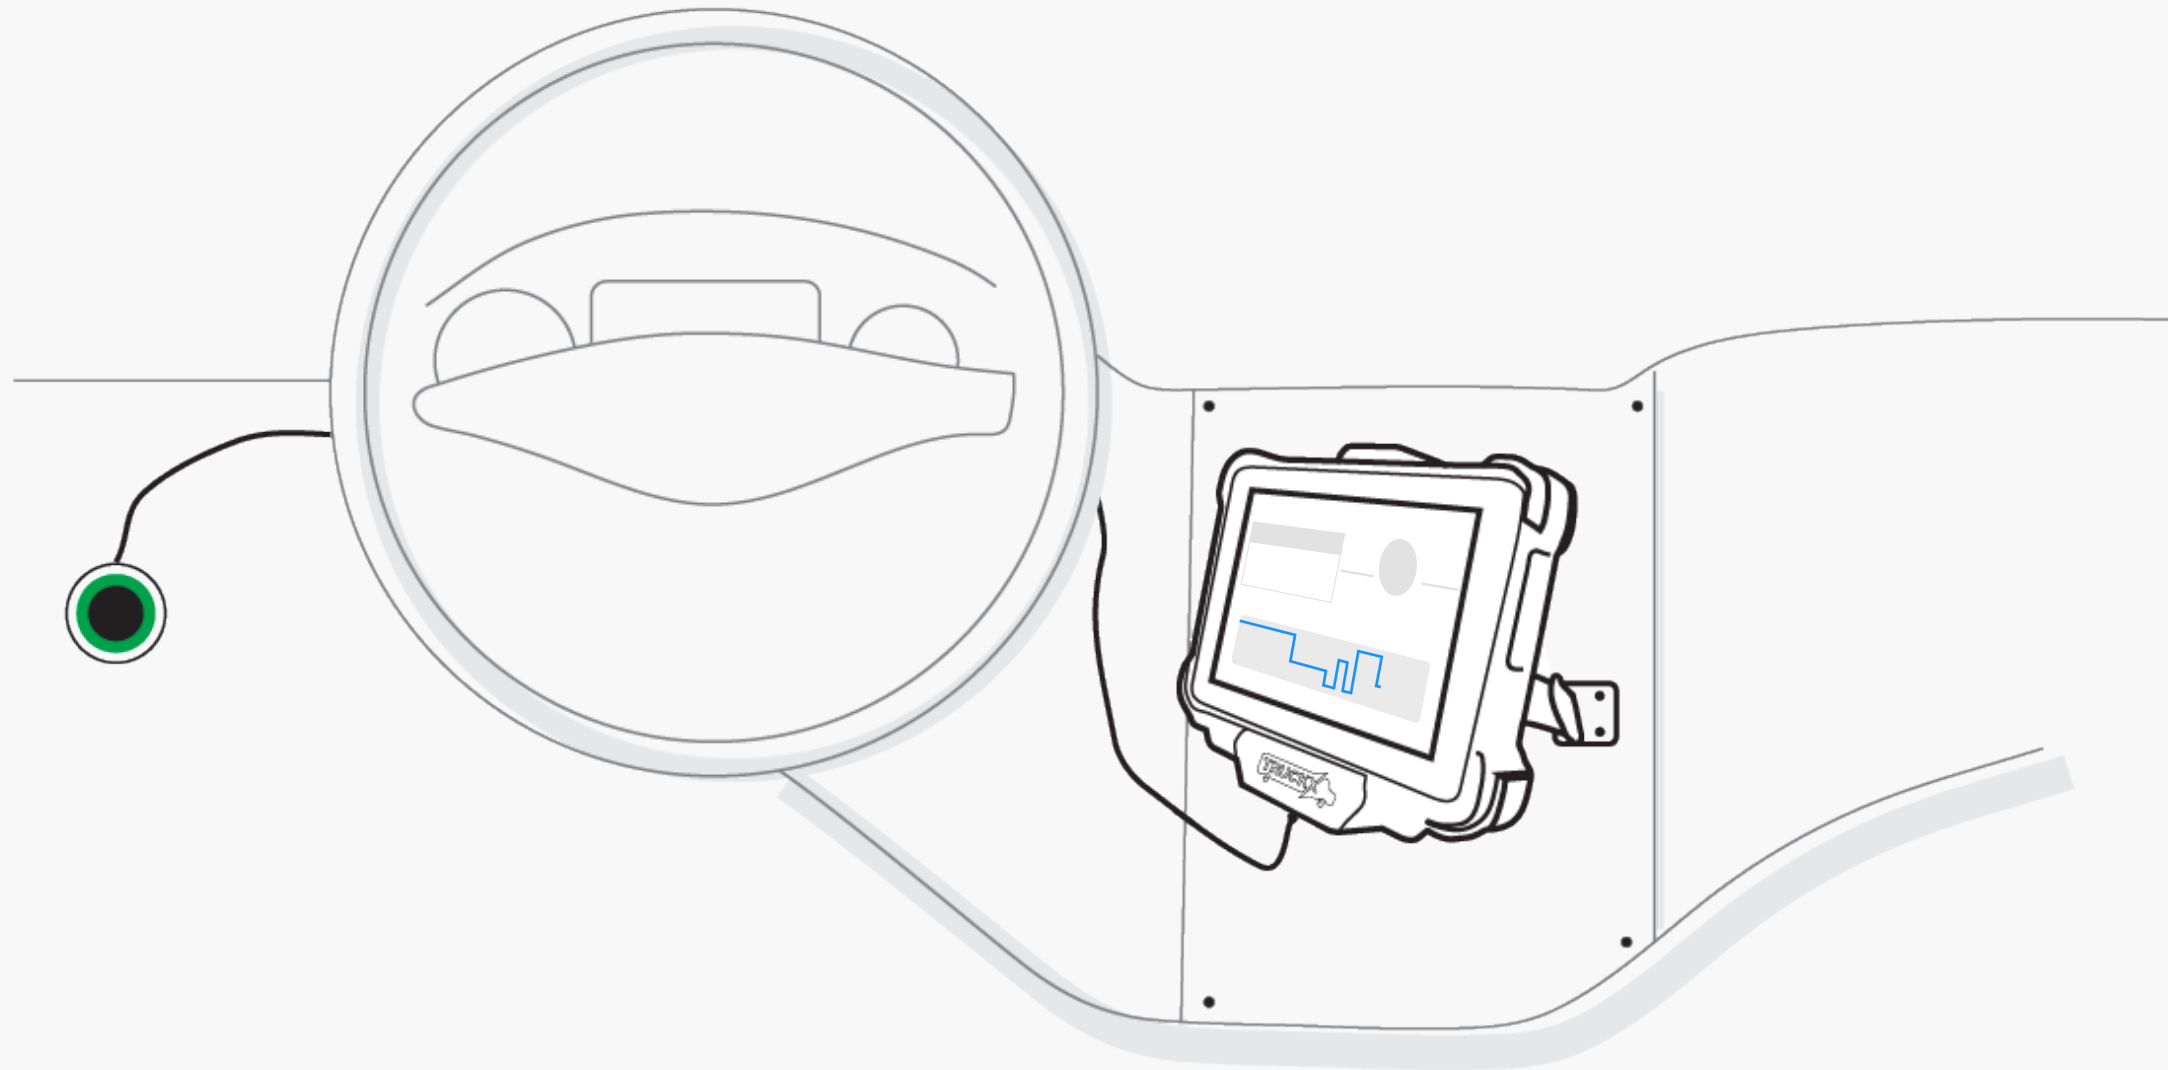

Need Help?

Contact TruckX support at support@truckx.com, +1(650) 600-0008, and live chat at www.TruckX.com

Get Wired ELD Tablet

- Contact TruckX Inc to get your ELD device
- Reach us at sales@truckx.com or www.TruckX.com
- We will ship one of these devices


NOTE: We provide both Bluetooth and Wired ELD. This handbook is for Wired ELD



Connect ELD to Your Vehicle

- Find the diagnostic port
- Plug in the device to the 9-pin connector
- If you have a different connector, TruckX will provide with adapter cables.


NOTE: Newer Volvo/Mac or pickup trucks will have 16-pin OBD2 connector

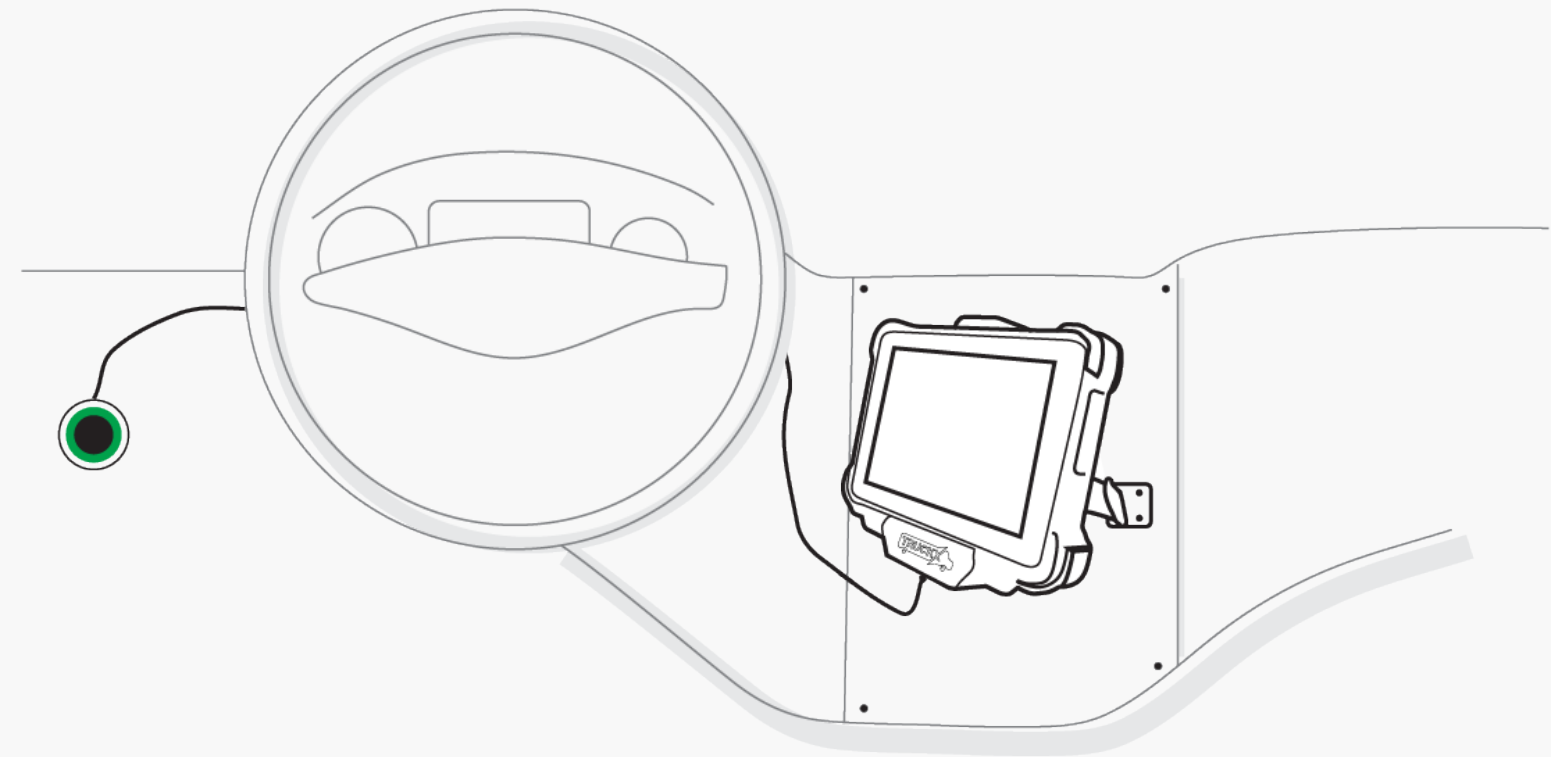

Driver Login

- Download and Open the TruckX application
- Enter driver cell phone to login
- Hit "Continue" and a text will be sent with login code

NOTE: Driver has to added by the dispatcher before they can login to the ELD

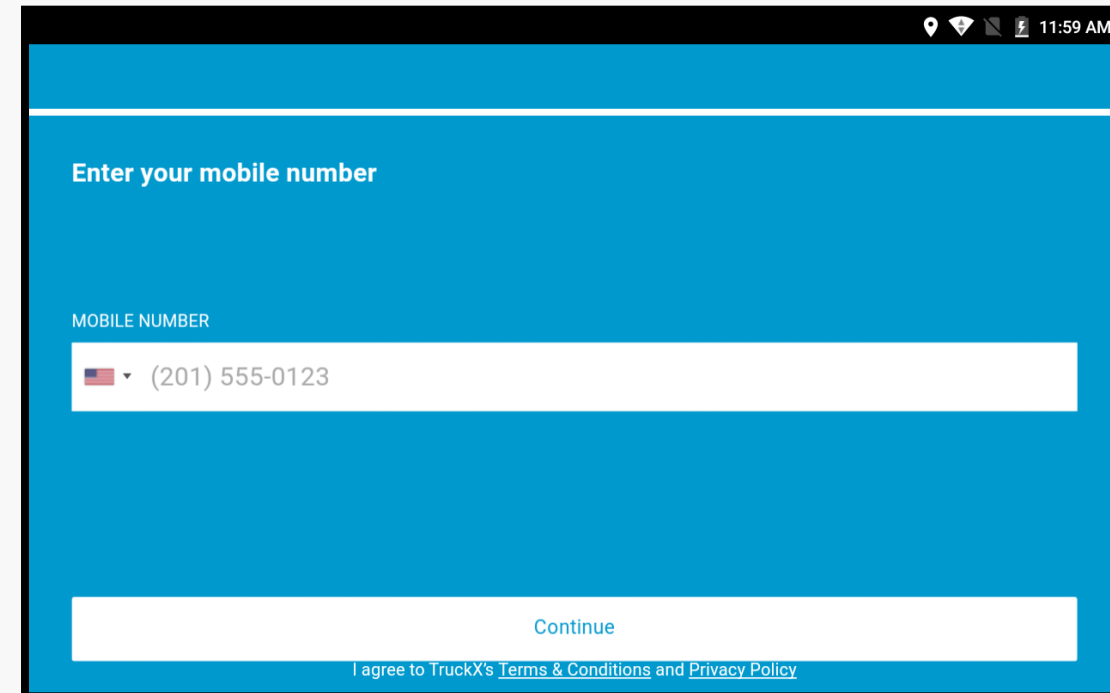

Enter your mobile number

MOBILE NUMBER



(201) 555-0123

Continue

I agree to TruckX's [Terms & Conditions](#) and [Privacy Policy](#)


Driver Login Complete

- Enter PIN received via text
- Hit Continue when done
- TruckX will synchronize and setup your logbook on the phone/tablet
- At this time driver has to set their own PIN for future logins

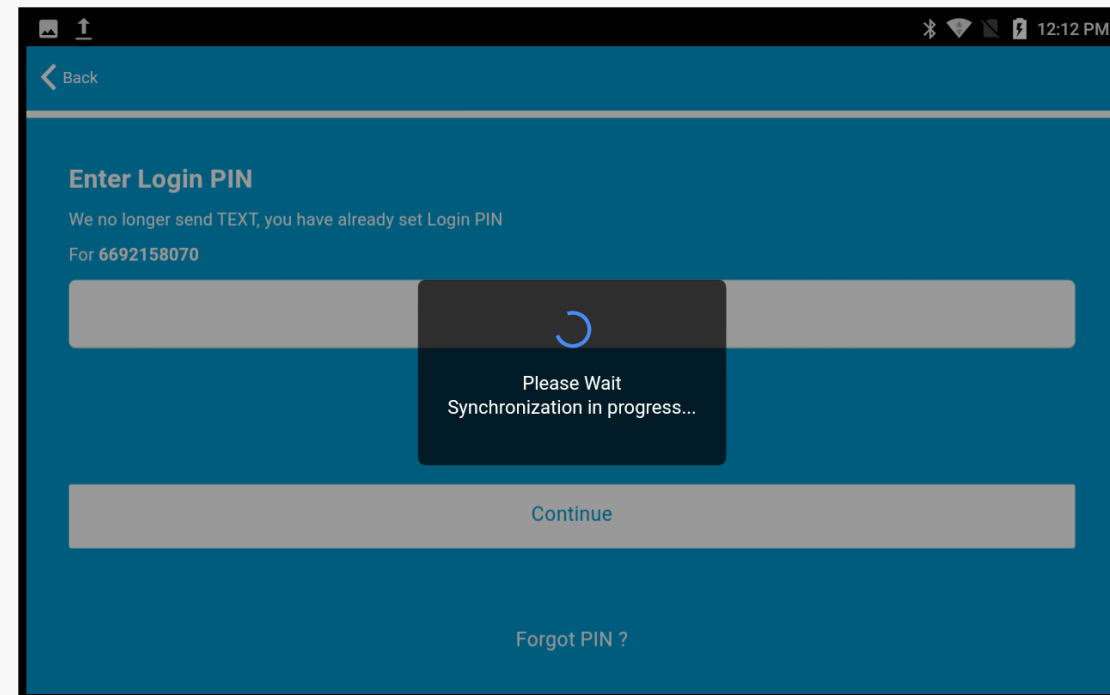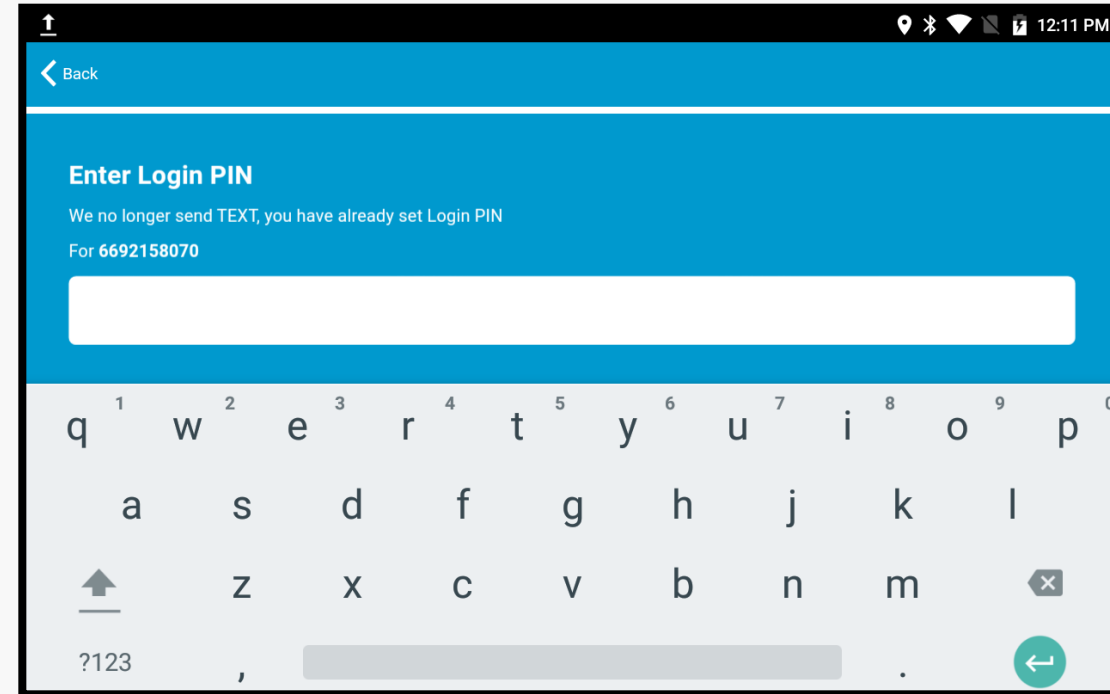

Login Complete

- Once Login is complete, driver can look into the logbook screen
- It shows current Duty Status at the top
- HOS information in the tile below
- 7-14 days logbook graphs below

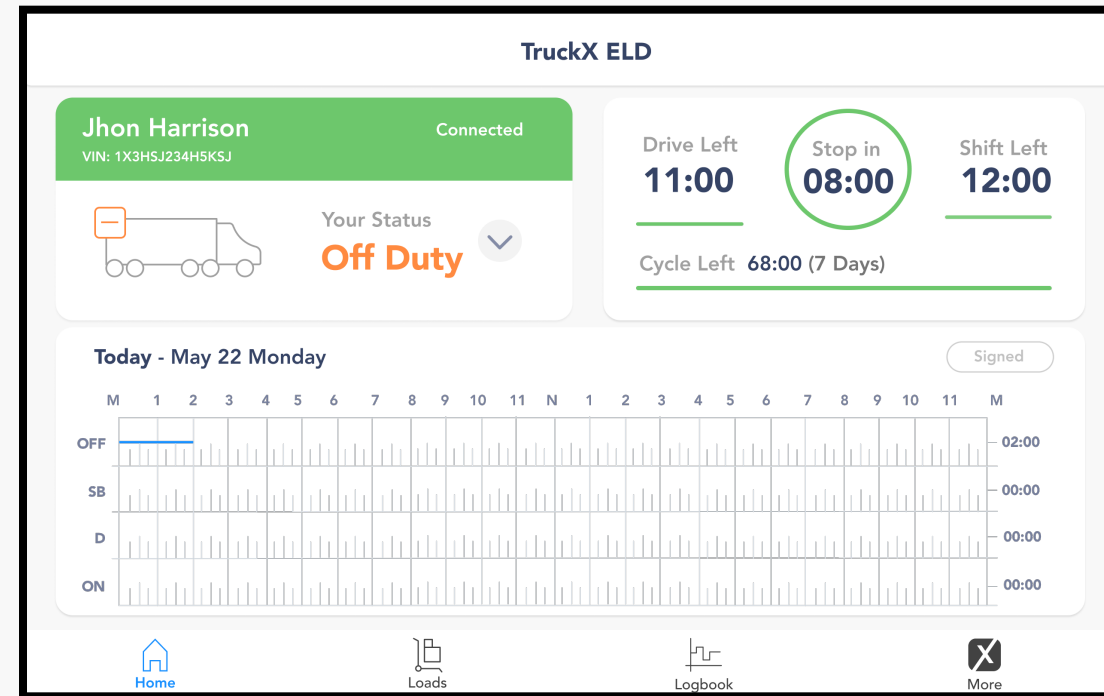


Verify ELD is Connected

- Driver name section will turn **GREEN**





- You will see the truck VIN number

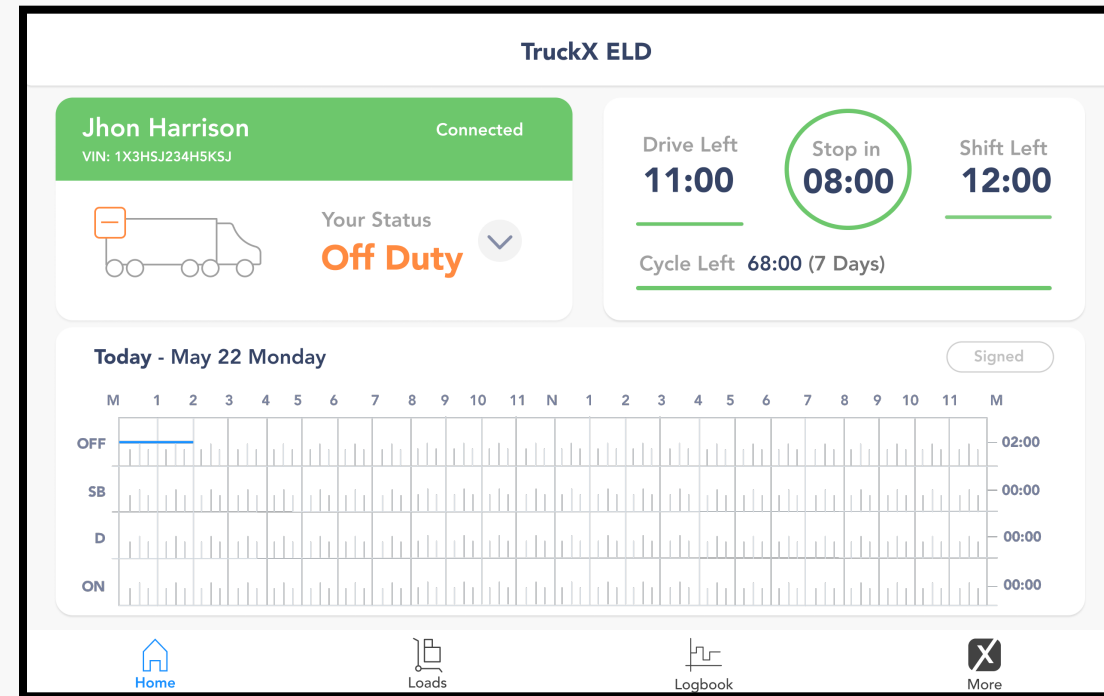


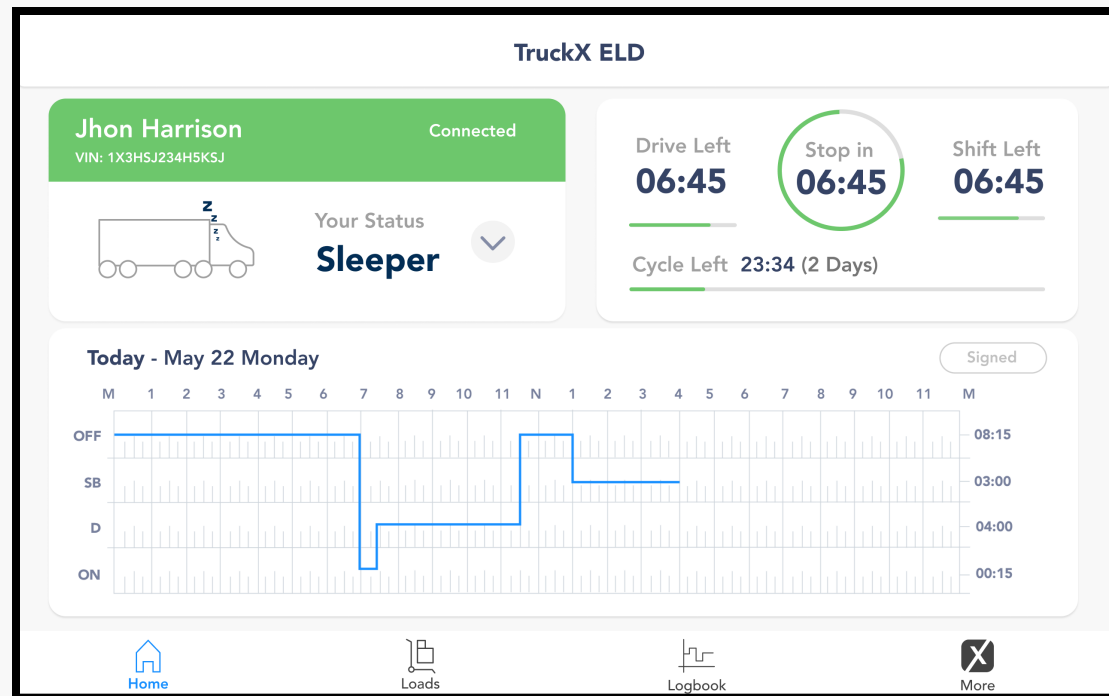
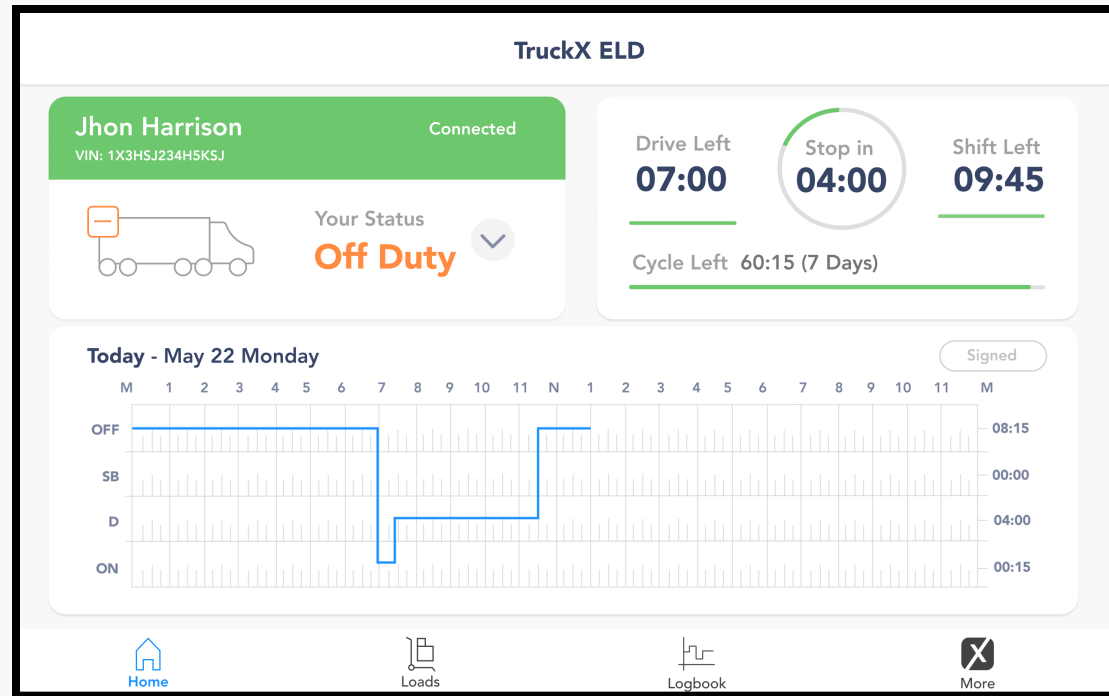
Driving/On Duty with Wired ELD Tablet

- Start driving the truck with device connected
- Driver state will automatically change to **“Driving”** when speed is more than 5MPH
- Will switch back to **“On DUTY”** when vehicle is stopped

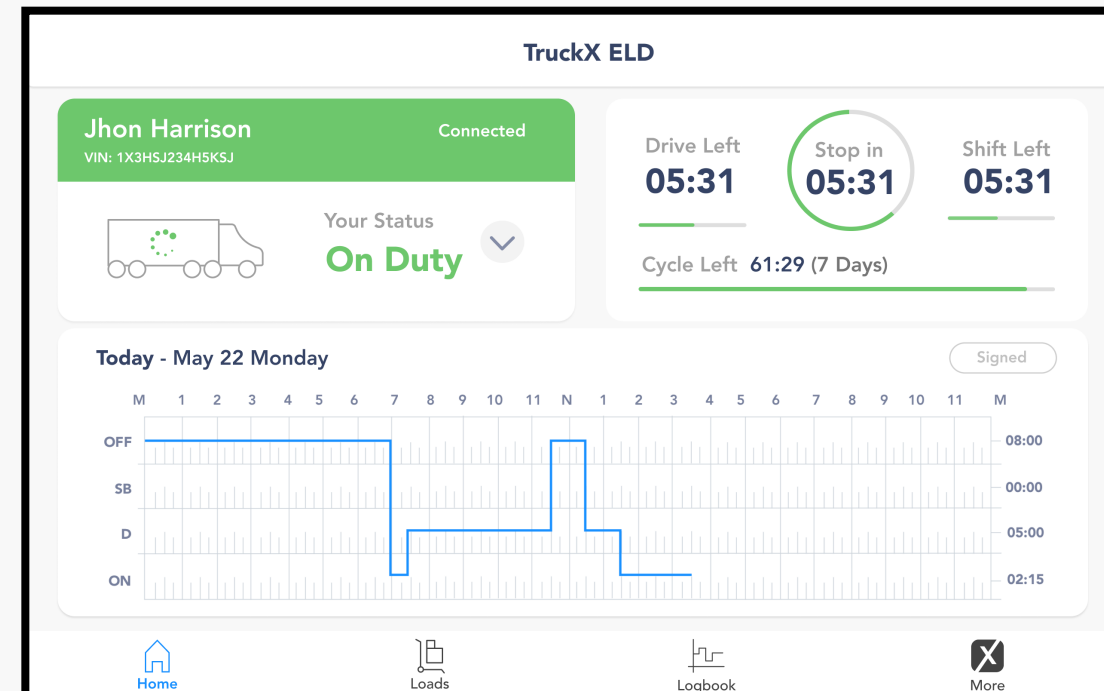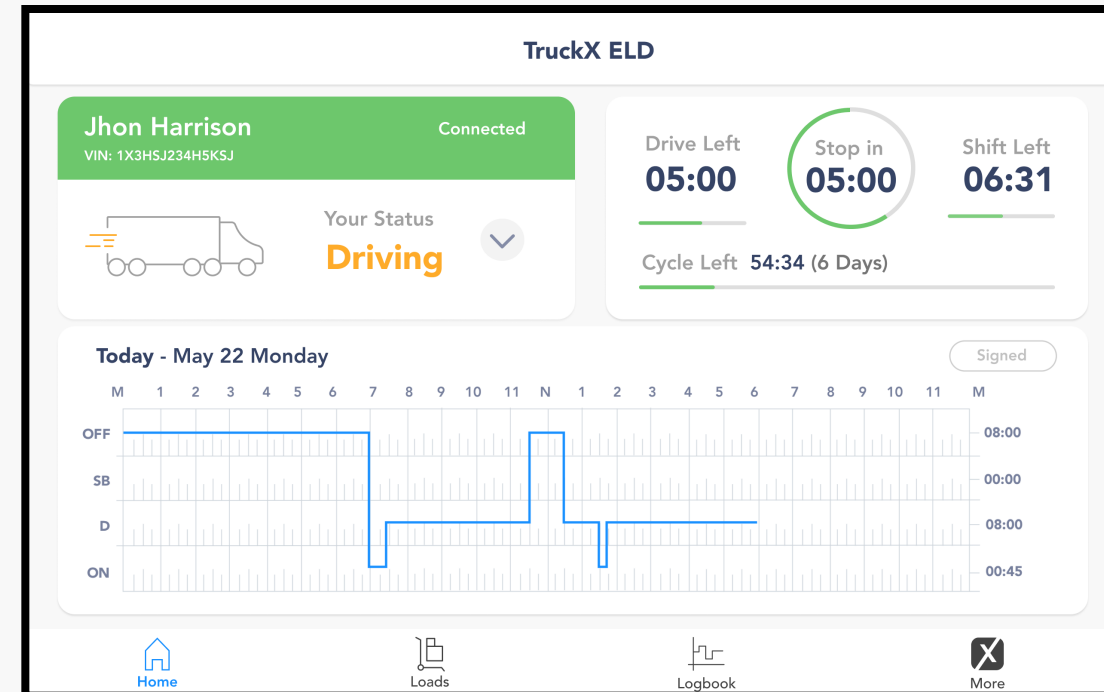


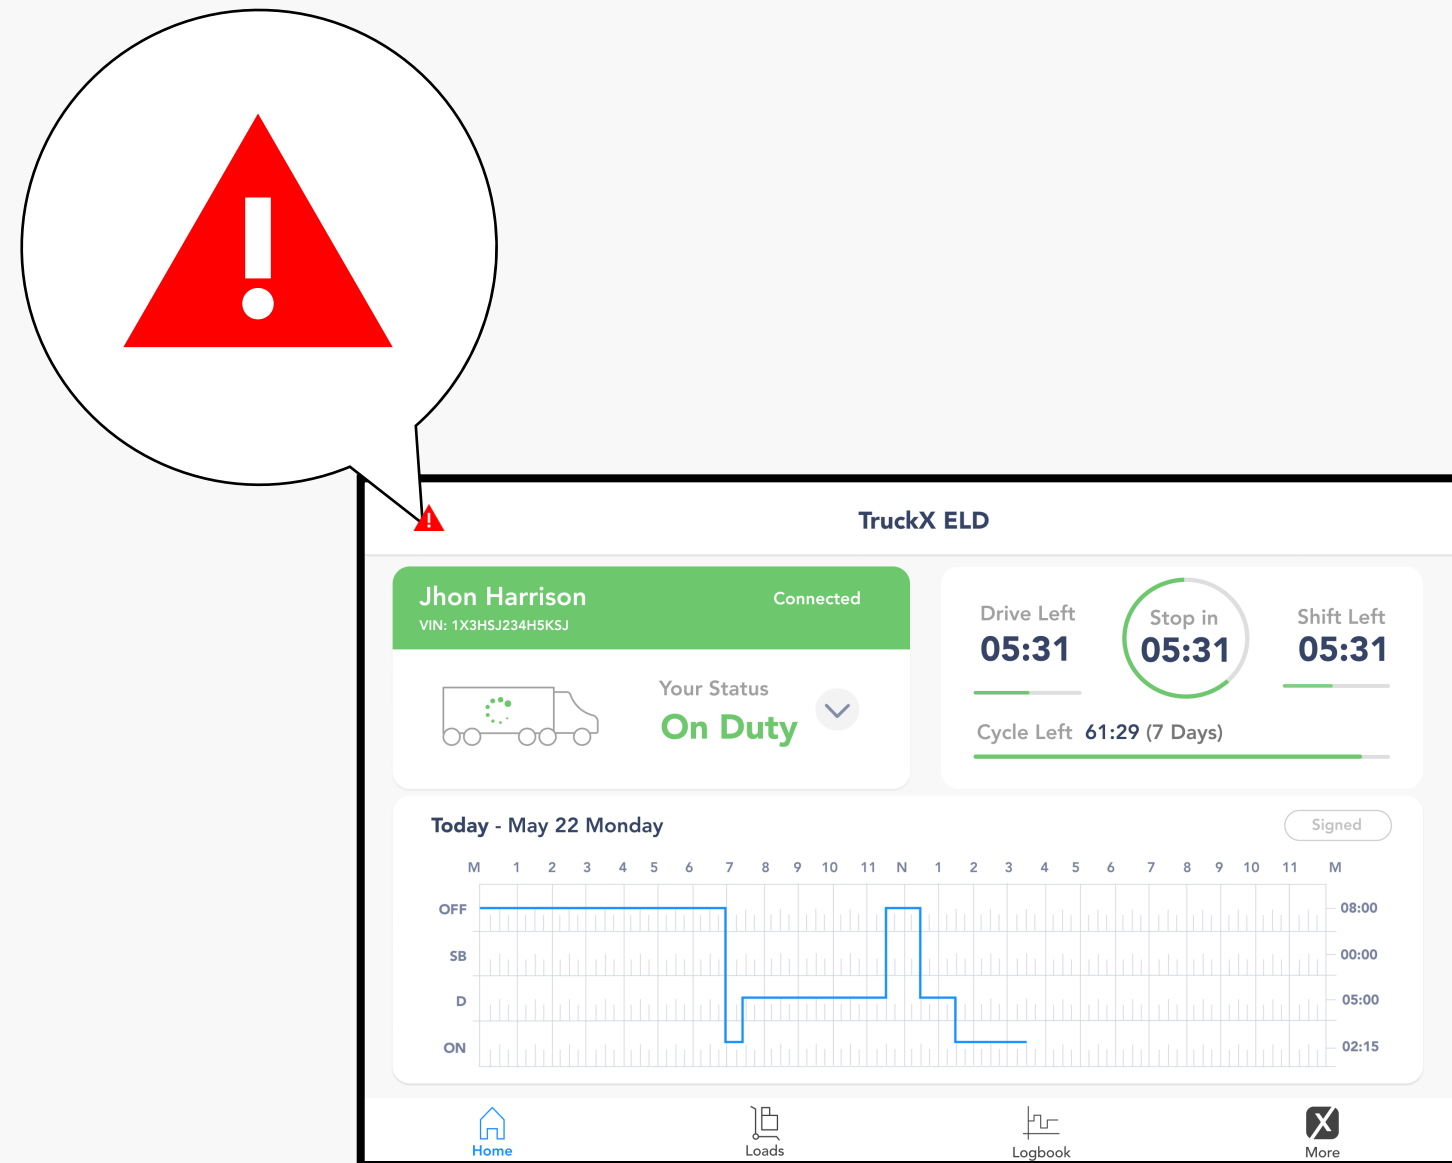
Switch to OFF/SB When Done

- Click drop-down() button next your status
- Tile with expand with options
- Choose the desired status **"Off Duty"** or **"Sleeper"**





ELD Malfunction


- RED error icon () is shown on every screen when ELD malfunction is detected
- Malfunctions are collected per Table 4 of the ELD mandate rule
- Driver is required to contact their company within 24 hours
- Driver needs to re-generate paper logs for past 7 days when this happens
- Continue maintaining paper logs until the time ELD is serviced
- Company can create inspection report and send it to TruckX for diagnostic



See Violations and Notifications

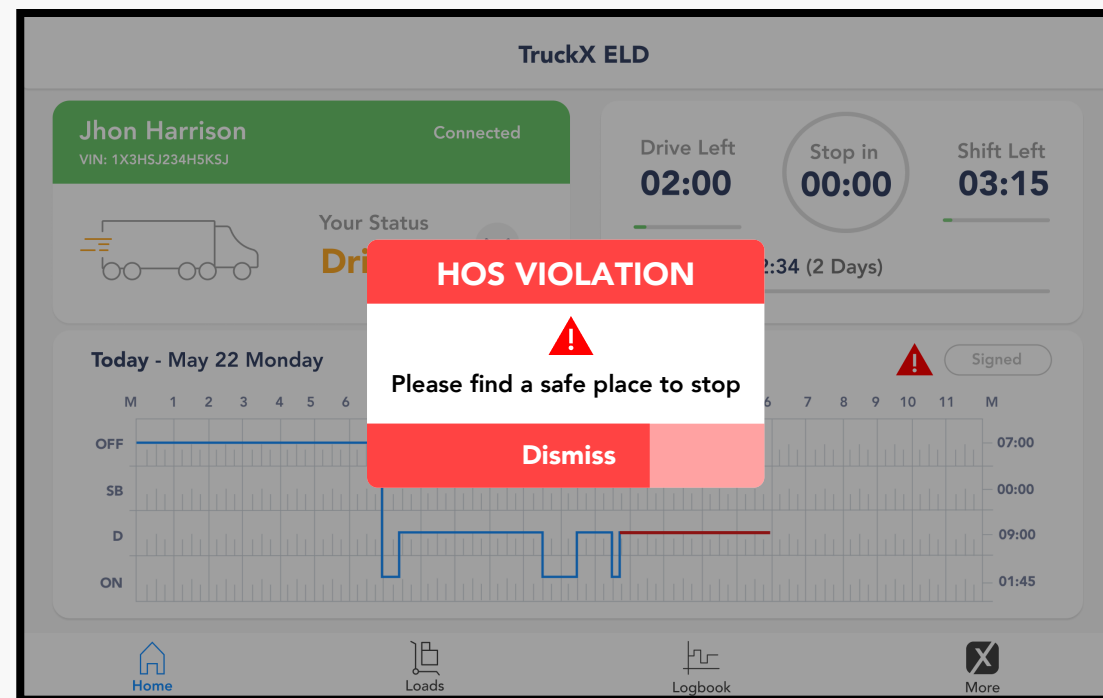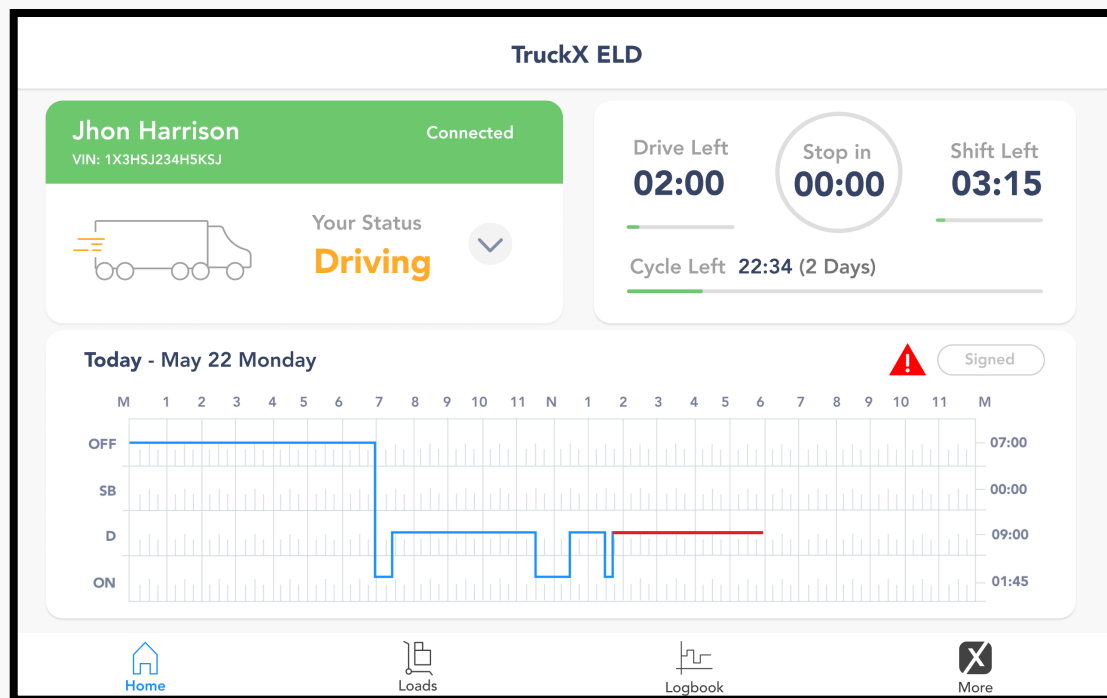

Complete Daily Logbook Information

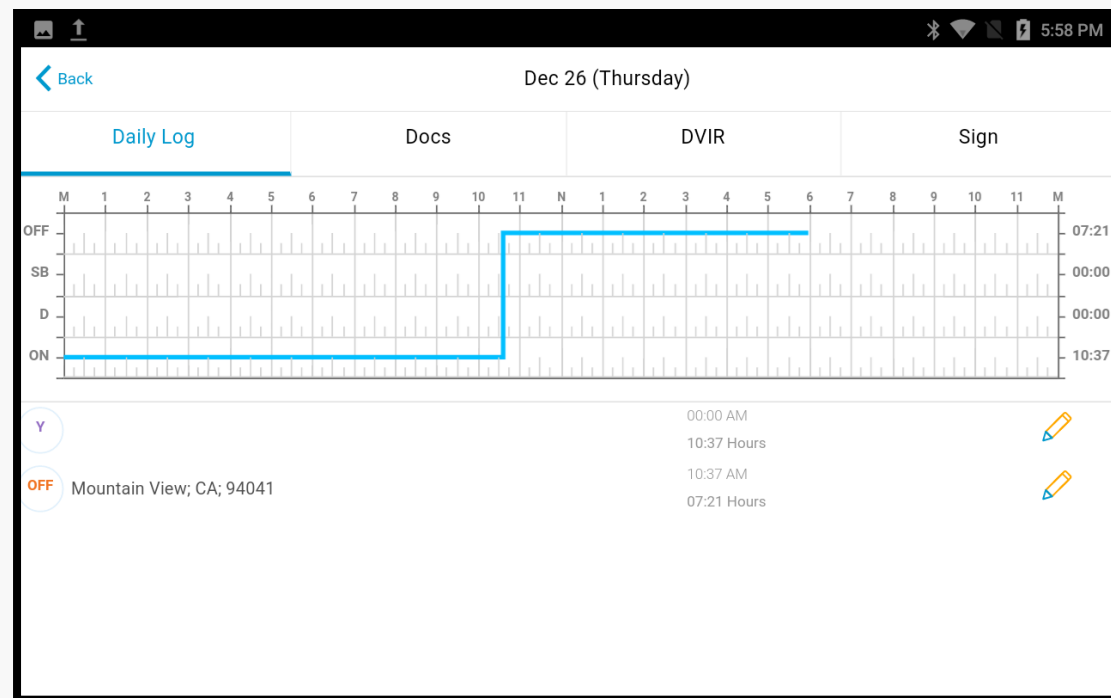

Dec 26 (Thursday)

Daily Log Docs DVIR Sign



Vehicle Details

Unit Number	Trailer Numbers
G141046	HSGSK 268

Trip Details


Miles Driven	DOT
0	1234123498765
Start Odometer	
0	

Sign Driver Logbook Daily

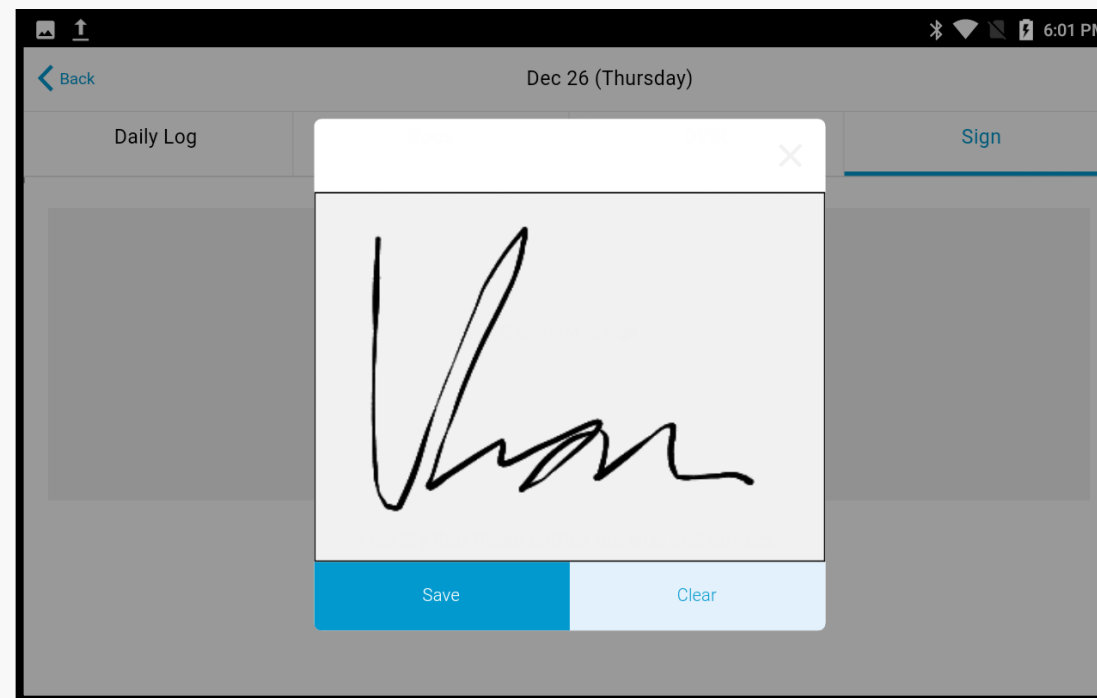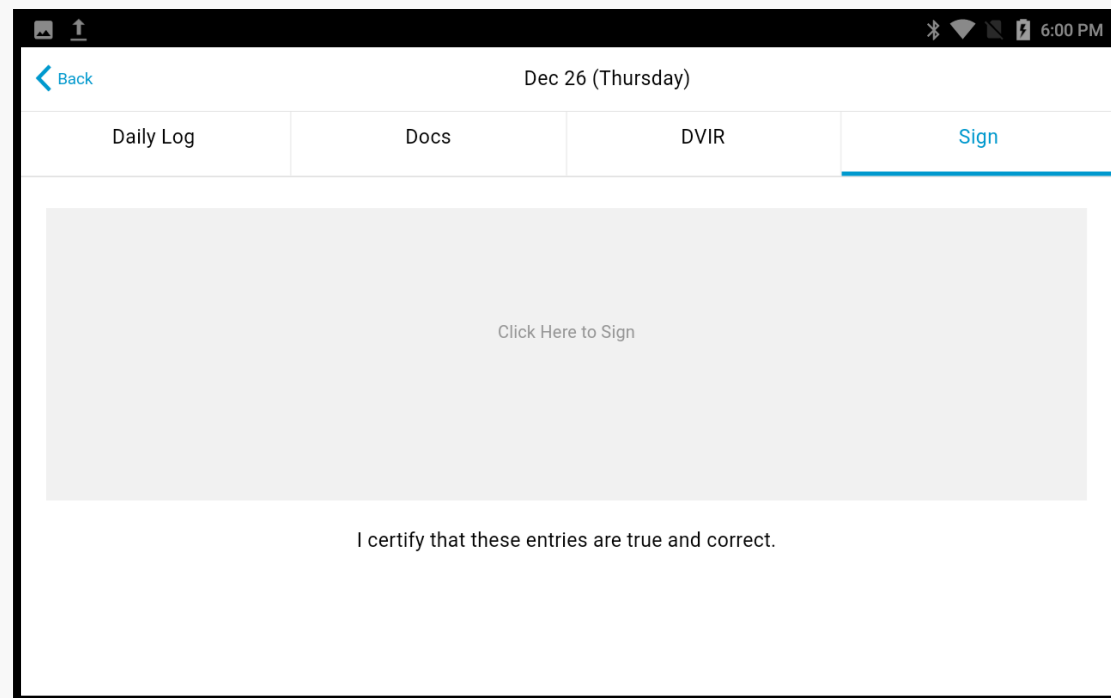


Roadside Inspection

Download Inspection Card: <https://truckx.com/wp-content/uploads/2019/12/Wired-ELD-DOT-Inspection-Card.pdf>

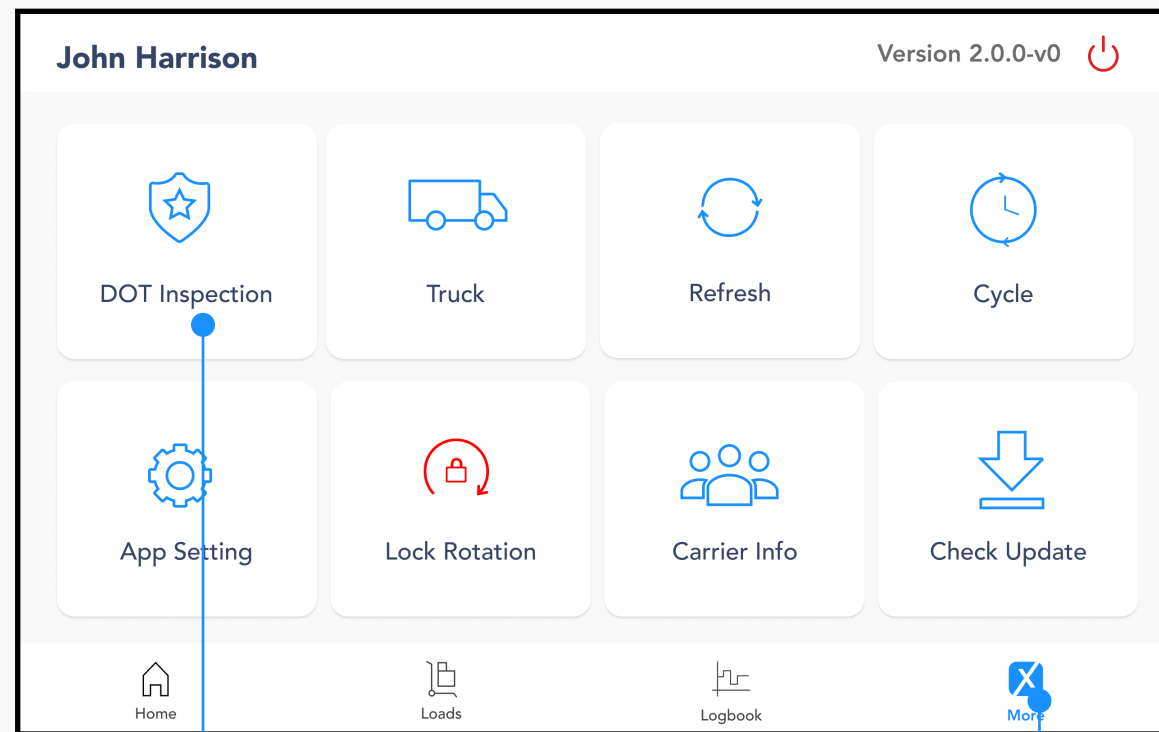

To view driver logs details

Click to reach here from any pages

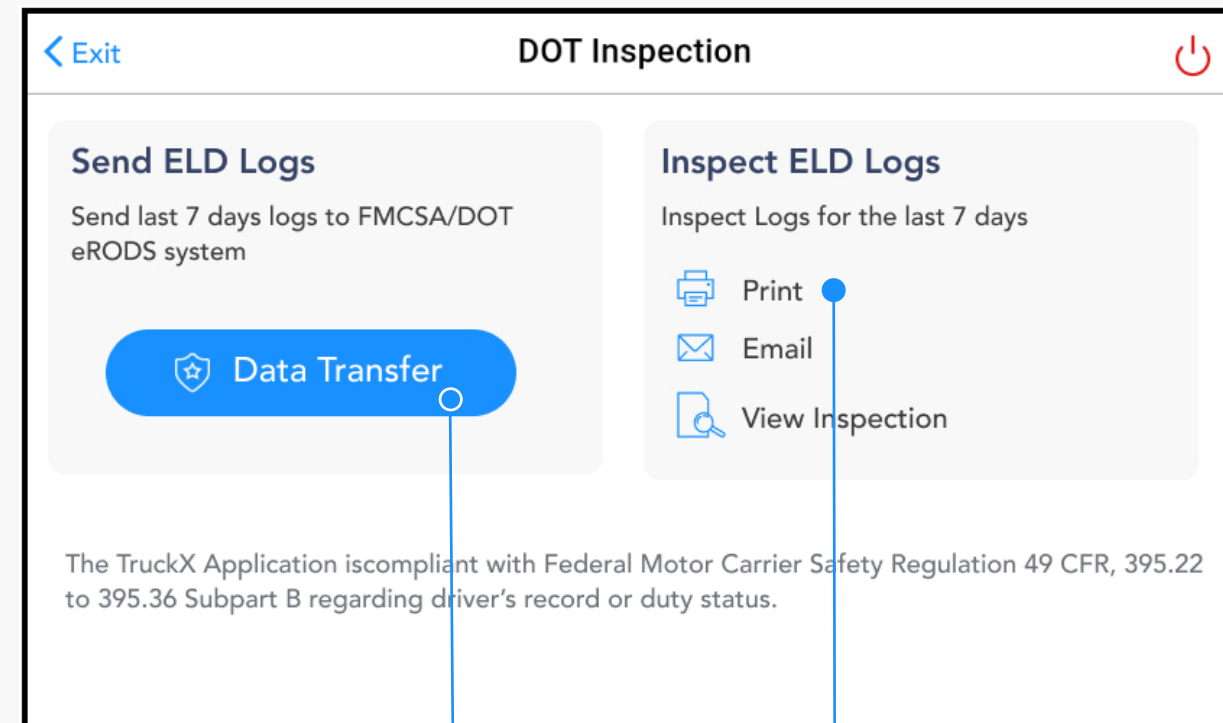


Click here to transfer logs details to officer


Print Inspection Report

Roadside Inspection

Download Inspection Card: <https://truckx.com/wp-content/uploads/2019/12/Wired-ELD-DOT-Inspection-Card.pdf>

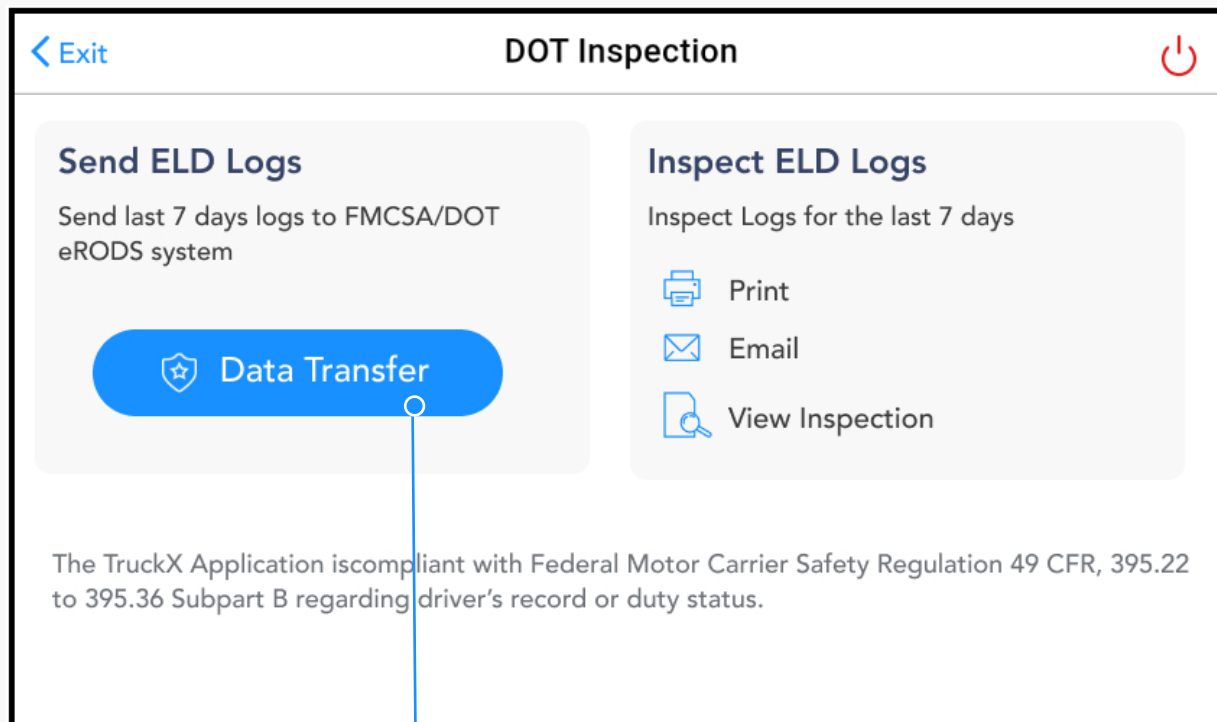

Click here to transfer logs details to officer

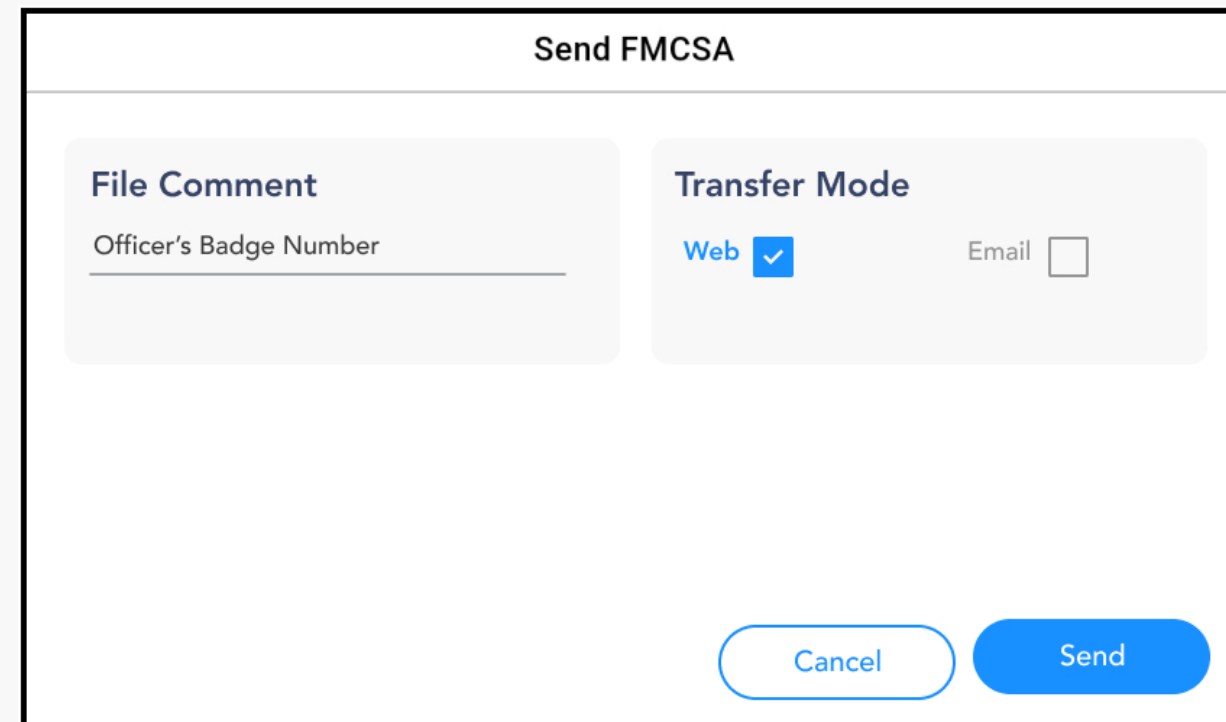



Need Help?

Contact TruckX support at support@truckx.com,
[+1\(650\) 600-0008](tel:+16506000008), and live chat at www.TruckX.com