


USER MANUAL

Update Duty Statuses

Review your ELD logs

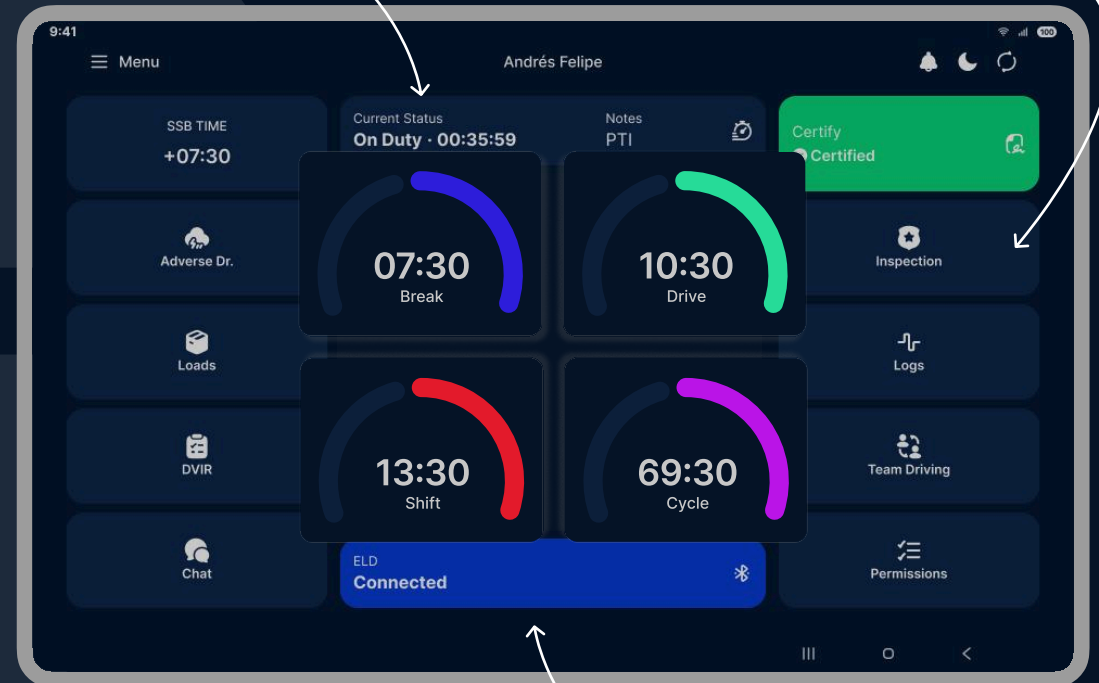



Connect your ELD

1

Application Manual

Select your ELD device

Select your ELD from the available devices using the displayed signal strength.

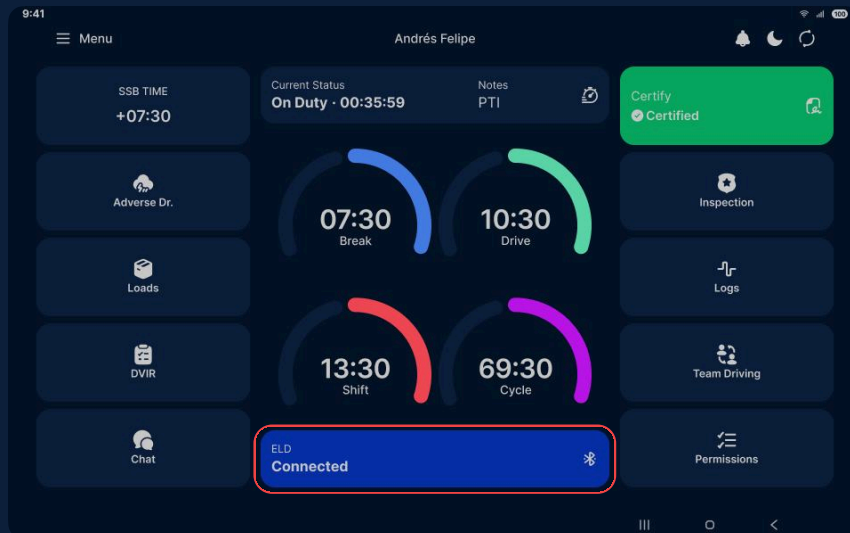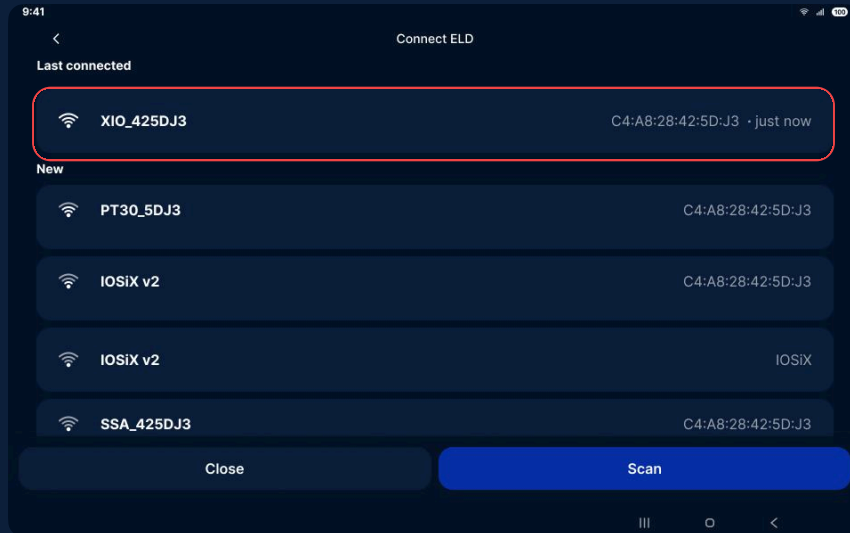


Your ELD is now connected


A green 'Connected' indicator on the instrument panel confirms that your ELD is paired and ready for use.

Using ELD while driving

Automated tracking of driving time.

Your driving time is recorded automatically once your ELD is connected. Your status changes to "Driving" when your speed reaches 5 mph or higher. If your speed falls below 5 mph, your status switches to "On Duty" after you've been stopped for 6 minutes.

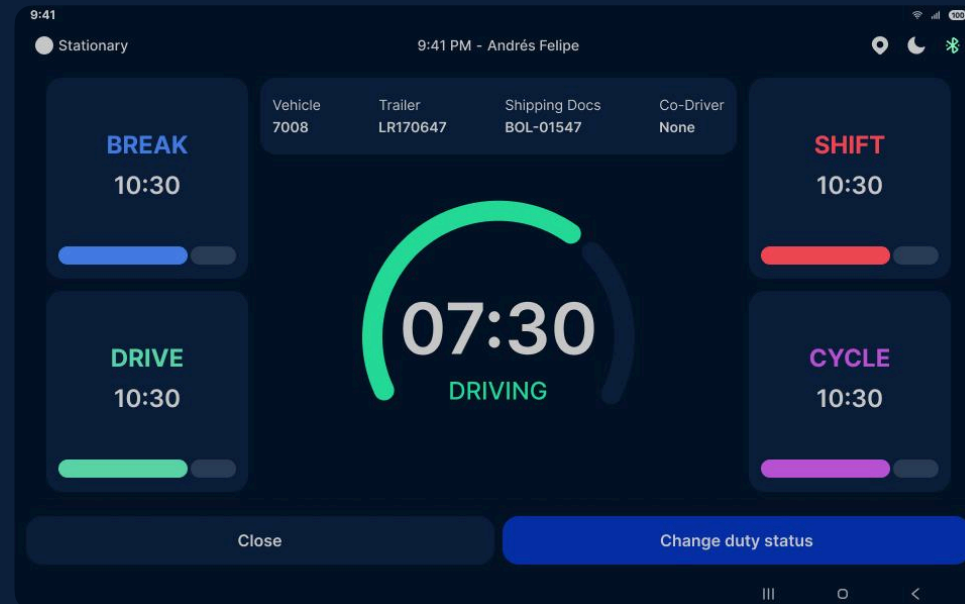


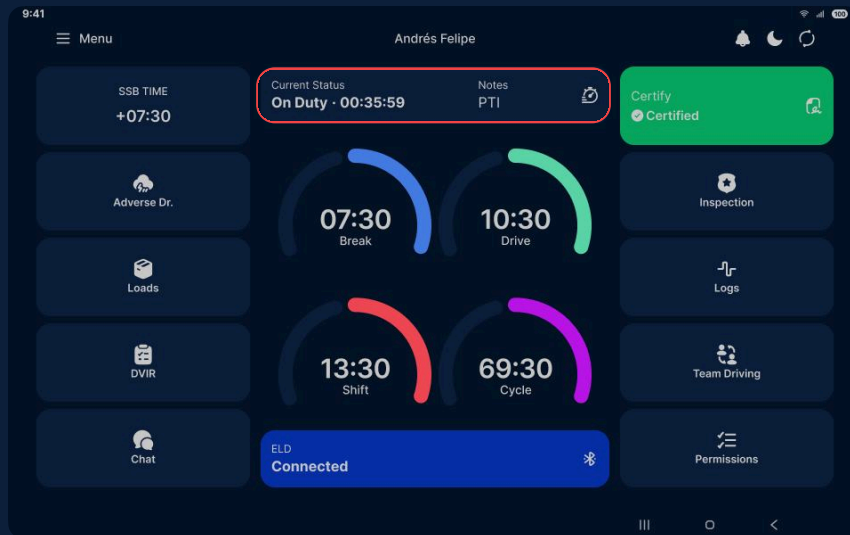

Using ELD while driving


Updating Your Duty Status.

Tap the status bar on your dashboard to update your duty status. Select Off Duty, Sleeper, On Duty, Yard Move, or Personal based on your current activity.

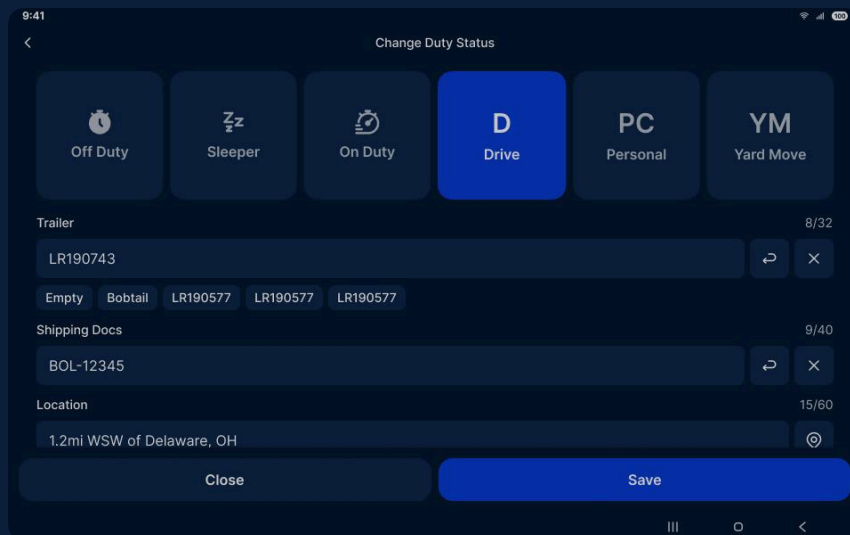

Entering Trip Details.


Enter your Trailer, Shipping Documents, Location, and Notes. Use the quick-select buttons for common entries like "PTI" or "Delivery," or enter them manually. If the Location field is left blank, it will be filled in automatically.

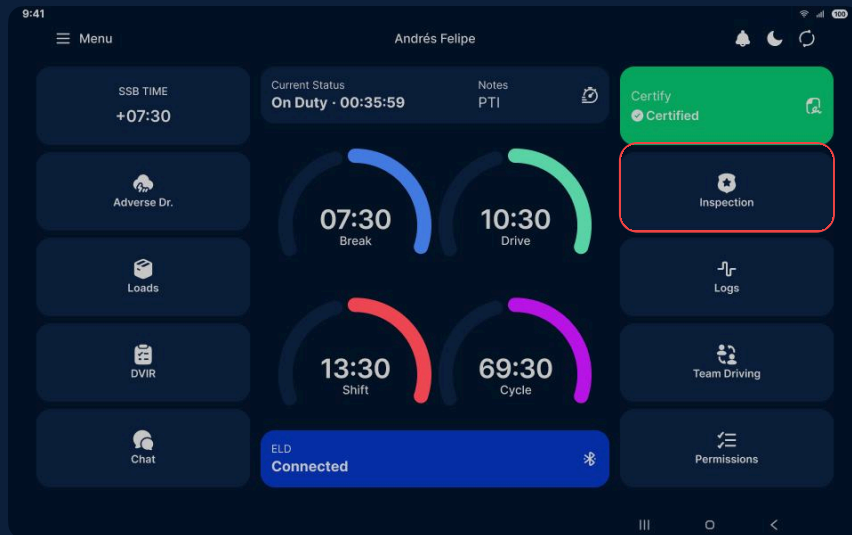

Review your ELD logs

Use these instructions to show your records to the officer

Select "Inspection" from the dashboard or the menu.

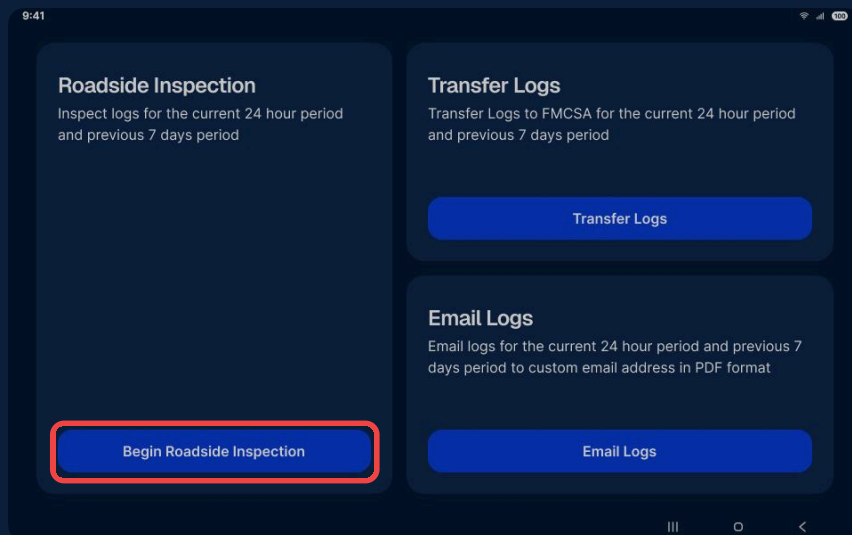

Starting a Roadside Inspection.

Then, tap "Begin Roadside Inspection" to display your eight-day logbook summary for the officer.

Driver's daily log

Displaying your logs.

Hand your device to the officer to display your eight-day logbook summary. The screen shows your Driver's Daily Log with all required information.

DRIVER'S DAILY LOG


Sunday, March 12, 2026


USA property 70 hour / 8 day

Driver Name	Andrés Felipe	Driver ID	6284917
Driver's License State	USA-NO	Driver's License Number	B7392046
Co-Driver's Name	Julian Mateo	Co-Driver ID	3059728
Carrier			
Main Office Location	12610 Ridgedale Dr, Minnetonka, MN 553...	Home Terminal Location	12610 Ridgedale Dr, Minnetonka, MN 553...
Driver's Certification Status	No		
Trailers Owned	2016	Shipping Documents	81777
Exempt Driver Status	No, not exempt	Unidentified Driver Records	0 Records
Malfunction Indicators	Yes	Data Diagnostic Indicators	No
Current Location			
Time Zone Offset	PST (UTC-8)	24-Hour Start Time	12:00 AM (Midnight)
ELD Identification Number		ELD Provider Name	

Transfer ELD records to authorized safety officer for inspection.

Choose "Web Service" or "Email," add a comment if needed, and press "Confirm" to send your logs to the officer

Confirm that your documents comply with the required guidelines before submitting them to the office.

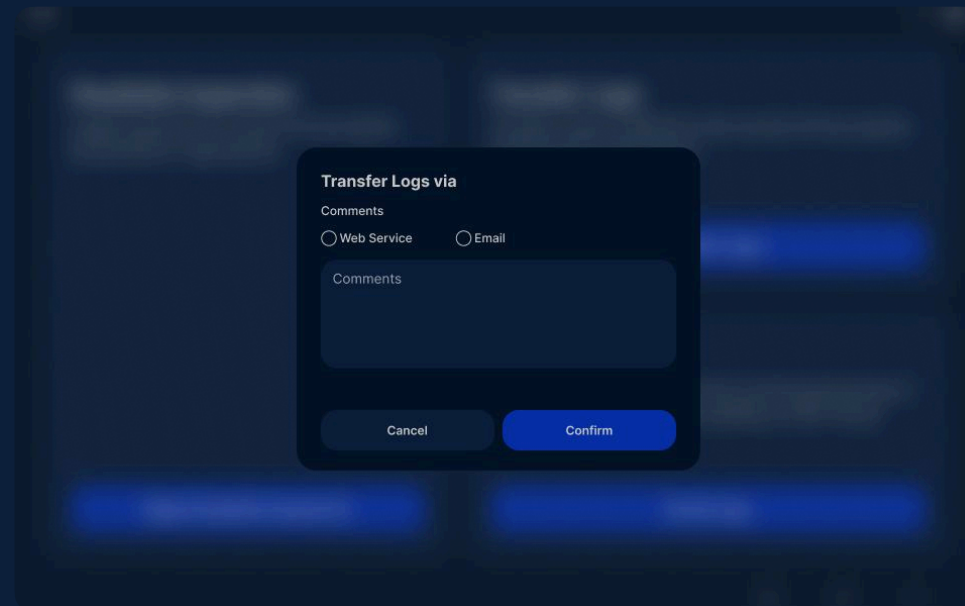

The screenshot shows a mobile application interface with a modal dialog box titled "Transfer Logs via". The dialog box contains a "Comments" label, two radio buttons for "Web Service" and "Email", a text input field for "Comments", and two buttons at the bottom: "Cancel" and "Confirm". The background is a blurred view of the application's main screen, which appears to show a list of logs or records.

Ensure you follow the guidelines when presenting your documents to the office.

ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions", table 4:

P – "Power compliance" malfunction, E – "Engine synchronization compliance" malfunction, T – "Timing compliance" malfunction, L – "Positioning compliance" malfunction, R – "Data recording compliance" malfunction, S – "Data transfer compliance" malfunction, O – "Other" ELD detected malfunction.

P – "Power compliance" malfunction,
E – "Engine synchronization compliance" malfunction,
T – "Timing compliance" malfunction,
L – "Positioning compliance" malfunction,
R – "Data recording compliance" malfunction,
S – "Data transfer compliance" malfunction,
O – "Other" ELD detected malfunction

A motor carrier must ensure that its drivers possess an ELD information packet containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions. The following instructions are in accordance with the guidelines set forth in 395-34.

The following instructions are in accordance with the guidelines set forth in 395-34.

395.22 Motor carrier Responsibilities.

