



Version

8

TRACKEASE INC

TRACKEASE Eld (Electronic Logging Device)

Compliant with the Technical Standard
for Electronic Logging Devices

Driver, Support Personnel And Back-Office Guide

Android Operating System ELD: APL21CAN

Version	Date	Author	Reviewer
1	01/05/2021	David Seijo	Aurelio Espantoso
2	02/15/2021	David Seijo	Liana Shatova
3	7/30/2021	Aurelio Espantoso	David Seijo
4	2/17/2022	Aurelio Espantoso	David Seijo



TRACKEASE

Table of Contents

Configuring the ELD before operation.....	1
Local Support Account (initial ELD configuration)	3
Configuring the ELD with the right asset	3
Establishing ECM Connection	4
Reinstalling the ELD app	6
ELD Driver Operation.....	7
Driver Authentication	7
Selecting a vehicle profile (assets)	8
Engine Synchronization (ECM connection)	9
ELD Diagnostics	10
Driver Profile (Preferences)	12
Personal Use (PU) and Yard Moves (YM)	12
ELD Main Operation Screen	14
Interactions.....	14
Changing Duty Status	15
Time Remaining	16
Recap	16
Deferral	Error! Bookmark not defined.
Possible Violations	16
Annotations & Remarks	17
Fuel Purchase Capture (IFTA report).....	18
Co-Driver Operation (authentication & remarks)	18
Roadside Inspection Mode	19

 



Certifying your records and Log Edits	22
Assumption of Unidentified Logs	26
Motor Carrier Suggestions	28
ELD Exports	Error! Bookmark not defined.
Printout or Display	Error! Bookmark not defined.
Exporting the ELD output file ...	Error! Bookmark not defined.
ELD general messages and notifications	31
ELD Diagnostics and Malfunctions (Resolution).....	35
Driver Vehicle Inspection Reports (DVIR).....	38
Shipments (connecting to brokers, shippers, receivers & carriers).....	.. 41
Index.....	... 46




Configuring the ELD before operation

Read this chapter before operating the ELD! Confirm you have received all required component, make sure your account was created and you have access to the ELD online portal.

 To save time in the future, we recommend you print a copy of this document and keep it inside the cab. This document contains critical information to properly operate your ELD and a list of malfunctions and how to resolve them. It is also recommended to write down your ECM device's identifier (shown below) on a separate location in case you lose this document.

-  Important information
-  Take notes
-  Online support account
-  Appears on Logbook

In some instances, this manual uses Icon Keys to direct your attention to specific and important information. See the different icons on the left.

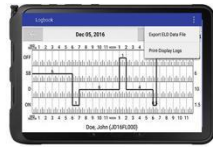

Mobile Device



ECM + Adapter



Harness



Access to the ELD online portal

Your mobile device (where the ELD app is running) must a) have Bluetooth enabled and b) be connected to the internet either with a cellular data plan or connected to a hot spot.

Installing the ECM device:

Please plug the ECM device to the vehicle's diagnostic port. In some cases, you might need to use the ECM adapter to plug the device on J1939 port.


Locate the diagnostic port (see image below for possible locations depending on vehicle's make, model and year).

% For the ELD to remain compliant, it must remain connected to the ECM device and read engine data. Engine data is only available when the vehicle's engine is turned on.



Local Support Account (initial ELD configuration)

The initial configuration is only required right after installing the ELD app for the first time and it is no longer needed after. The objective is to initially configure a vehicle profile (tractor number, VIN number) and connect/test the ECM device connection.

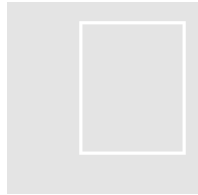

Configuring the ELD with the right asset

The ELD has to be linked to a carrier asset (vehicle). Please tap on the truck or trailer image to pick from the asset list downloaded during login (see list below) or to manually enter (if allowed) a new truck or trailer. Once you select a tractor or trailer from the downloaded list the ELD will always use the VIN number, license

plate and registration state displayed on the list:



% Important: dashboard's odometer (twice) in order for to adjust


Enter the vehicle's value the ELD

discrepancies between dashboard and engine odometer.


Establishing Connection ECM

Before a driver can operate an ELD, the ELD must be synchronized to the vehicle's engine using what is known as an Engine Synchronization Module (ECM) which is very common on GPS trackers.

Before scanning and connecting to an ECM device, make sure your ELD has Bluetooth functionality enabled:

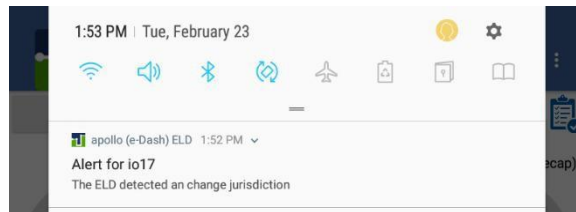

- ! We highly recommend installing a label or decal on the vehicle's dashboard with the ID of the ECM device installed on the vehicle. Also, write down this ECM ID.


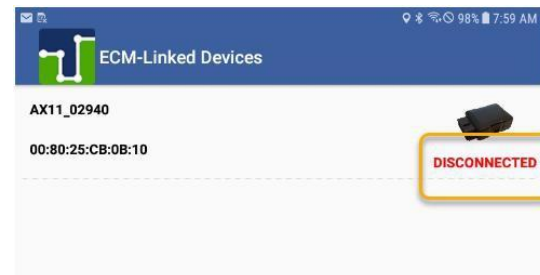


To connect to the ECM device, tap on Scan Devices, wait for the device to show up (make sure the correct ECM ID shows up)


% For the ECM device to work properly and the ELD to be able to connect to the device and read engine data, the engine must be turned on. Keep

this in mind when operating the ELD. Duty status changes, as an example, require engine parameters when generated. Make sure the engine is still running when making duty status changes. Some ELD configurations locks an ELD to a specific

ECM device, in which case the Scan Devices screen is not shown and the ELD will automatically run the diagnostic.

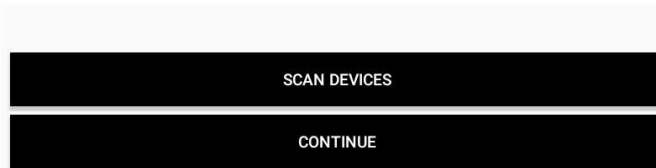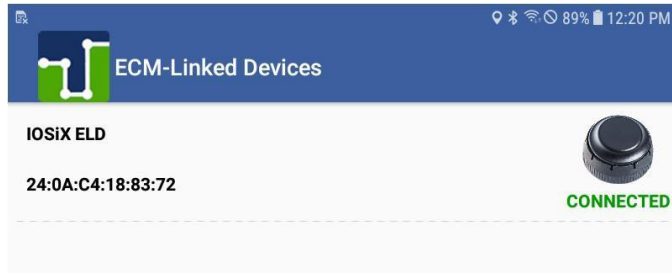

A diagnostic is performed to make sure the ELD is fully compliant and ready for driver operation.

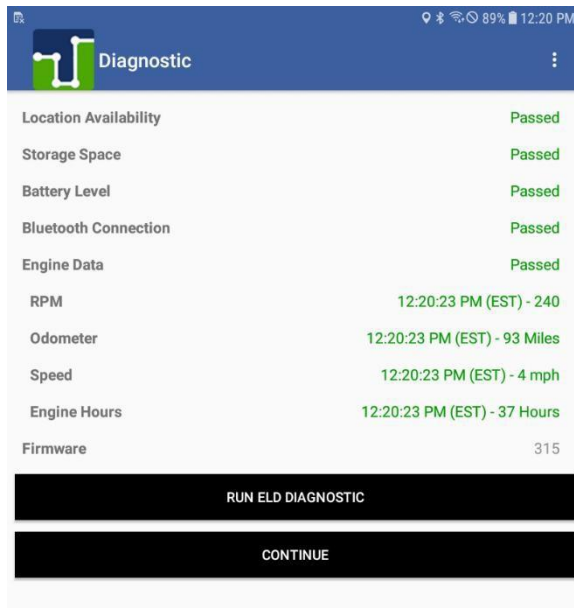

Reinstalling the ELD app

If you need to reinstall the ELD app (or install it on a different device), please search the iOS app Store for “apolloELD” and install the app. When you open the ELD app for the first time, you need to approve the following permissions:


Use camera




Use location




You also need to give permission for the app to show over other apps:

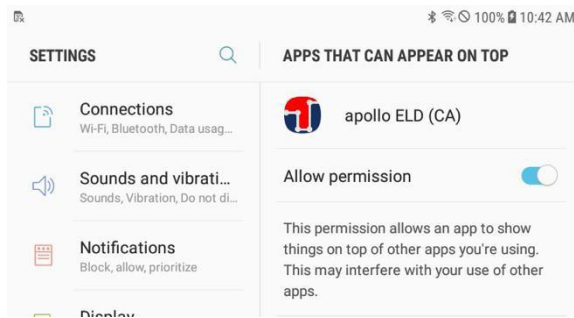

 You also need to synchronize the ELD with the portal at least once. Tap on **CONFIGURE**:



 Wait until the ELD is synchronized with the server and the following message is received:



ELD Driver Operation

Driver Authentication

The ELD has three different accounts:

Driver: Unique, per-driver account used by drivers Hours of Service and ELD regulations. This account records duty status changes (RODS) and allows the export of driver's records for printout, display and agent output file generation.

Support: Account used by the carrier and ELD manufacturer to setup, configure, update and troubleshoot the ELD. No duty status changes are recorded with this account and no access to driver's record of duty status changes is permitted under the support account.

Non-authenticated: All operation of a commercial motor vehicle (CMV) is recorded under this account (a.k.a Unidentified Driver) if no driver has logged into the ELD. Non-authenticated records (vehicle movement and on-duty time) are stored on the ELD as well as the carrier and should be assumed by a driver account.

Log in using your driver's credentials. Login IDs, and the driver's license associated with the login ID, cannot be duplicated and are unique in the ELD system.

% Each driver using the system will have a unique login ID.

% This login name and password is for the specific driver's use only and must not be shared with any other person (driver or not). The login name belongs to the driver and is linked to the driver's personal information (e.g. driver's license, etcetera). If the driver changes carrier and is now driving for a different carrier, the login name, under certain circumstances, will remain the same and it is the driver's obligation to ask the home base carrier to update the carrier name and DOT number on the system.


The driver is restricted to be logged on to only one ELD at any time. In order for the driver to logon on a different mobile device, the driver must change to off duty status and logout from the previous device.

Driver's unlock. In an event the driver is still logged on a ELD, but the device ceased to function or gets lost, the driver must call the home base carrier and

ask for his login name to be unlocked. The unlock process will change the driver's status to off duty at the time the driver solicited the login unlock.

Selecting a vehicle profile (assets)


Before driver's logs can be exported and shared with an authorized agent, the driver must update the correct vehicle information. Please tap on the truck or trailer image to pick from the asset list

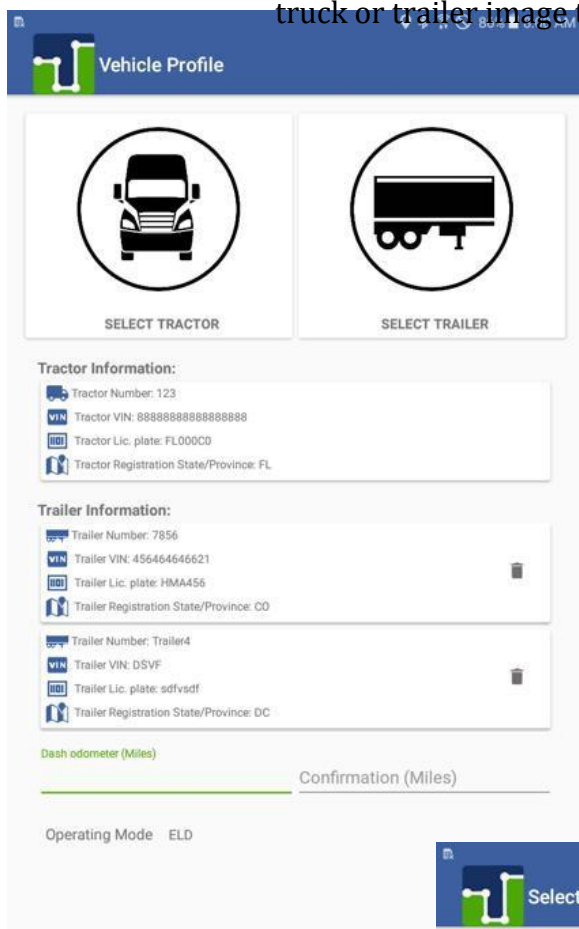

to pick from the asset list downloaded during the login (see list below) or to manually enter (if allowed) a new truck or trailer. Once you select a tractor or trailer from the downloaded list the ELD will always use the VIN number, license plate and registration state displayed on the list.

% Important: Enter your vehicle's dashboard's

odometer value (twice) in order for the ELD to adjust discrepancies between the dashboard and engine odometer.

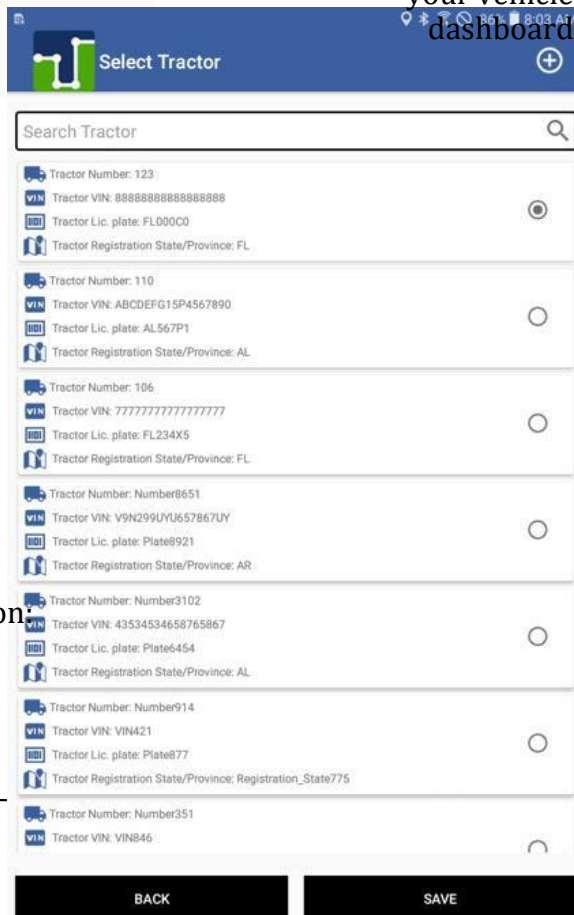

Make tractor and trailer selection:

Tractor Information:

Tractor Number: _____

VIN Tractor VIN: _____

Tractor Lic. plate: _____

Tractor Registration State/
Province: _____

CANCEL OK

Tractor Number: Number429

You can also add a new tractor or trailer (if allowed by your carrier) by selecting the + button located on the top right of the screen:

% Once a new asset is created on the ELD, the asset information is broadcasted to the ELD portal and other ELDs operating under the same carrier.

Engine Synchronization (ECM connection)


To connect to the ECM device, tap on Scan Devices, wait for the device to show up
(make sure the correct ECM ID shows up)

% For the ECM device to work properly and the ELD to be able to connect to the device and read engine data, the engine must be turned on. Keep

this in mind when operating the ELD. Duty status changes, as an example,
require engine

parameters when generated. Make sure the engine is still running when making duty status changes. Some ELD configurations lock an ELD to a specific ECM device, in which case the Scan Devices screen is not shown and the ELD will automatically run the diagnostic.

%

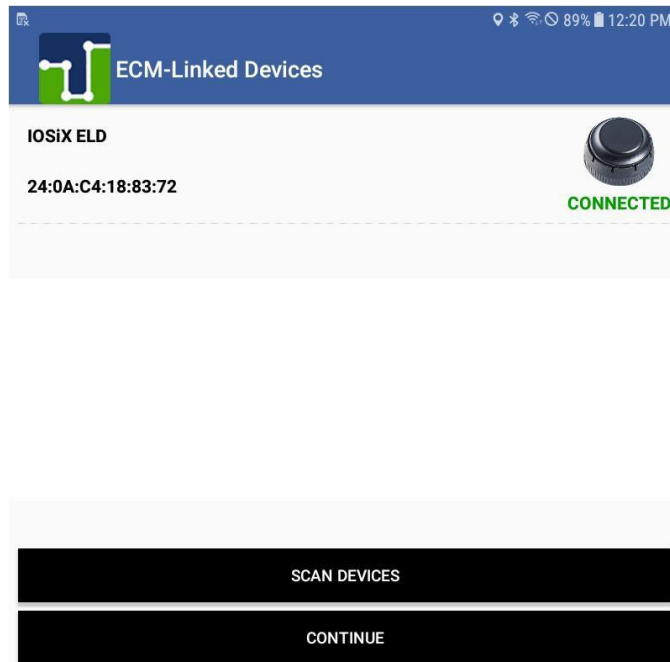


Note

Some ELD configurations lock an ELD to a specific ECM device, in which case, the Scan Devices screen is not shown and the ELD will automatically run the diagnostic.

ELD Diagnostics

Once connected to the ECM device you can run an ELD diagnostics (accessible from the top-right menu). The diagnostic checks critical components on your ELD and all areas must pass the test in order for you to remain complaint.

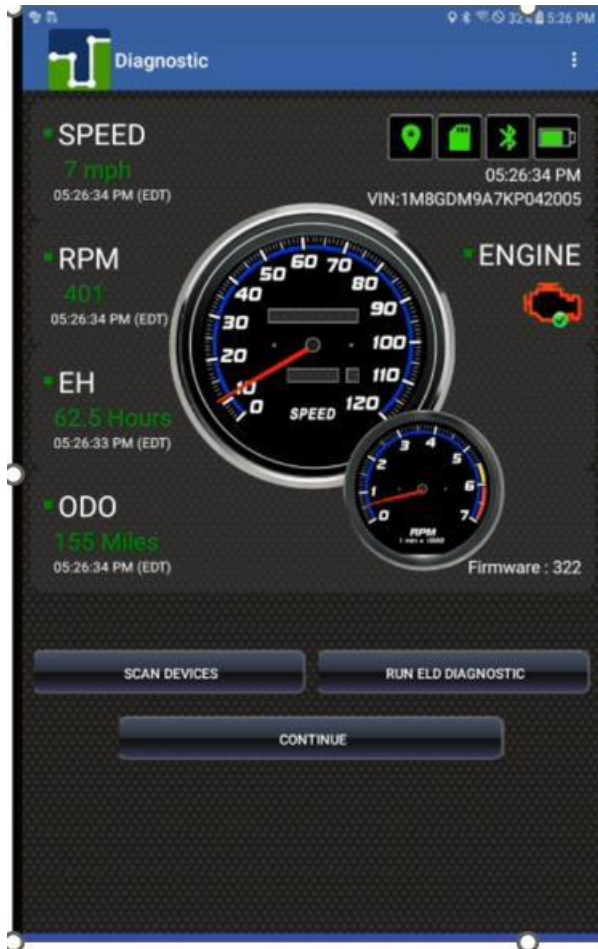

Bluetooth and ECM connection status: The ELD must be able to read engine data at all times. Make sure the Bluetooth and ECM connection indicators remain green. If the indicator turns red, please go to Scan Devices and connect to the ECM-linked device.



Driver Profile (Preferences)

We recommend verifying the driver's profile. Please make sure the information is correct: carrier name, your rule set (60-hour or 70-hour) and the home base time zone. Select the ruleset drop-down to change rule set from 60h to 70h and vice versa. Select the units of measurement (miles, gallons, kilometers or liters). Starting 24h time is set by your carrier but could be changed at any time. Just keep in mind that the new 24h starting time will take effect on your next cycle (after the 36h restart).


Field	Value
Name	John Smith
ID	JD16FL222
Carrier Name	CTIA Trucking
Carrier ID	163453803
Home Base	apollo NY
Time Zone	Pacific
License State	FL
License Number	P500101894490
Operating Mode	ELD
Rule Set	60 Hours/7 Days
Distance/Volume	Miles/Gallons
Starting 24h time	Midnight

Personal Use (PU) and Yard Moves (YM)

As a driver, current regulations allow up to 75 Km of driving for personal use. This provision allows you to, for instance, drive to the nearest rest area, drive home among other reasons. The ELD will prompt you to add a pre-defined remark or type a different reason.

! The ELD must be connected to the ECM device in order for the Personal Use provision (button) to be available.

Once you have reached the 75 Km limit you will receive a notification and you will be automatically switched to Driving duty status:

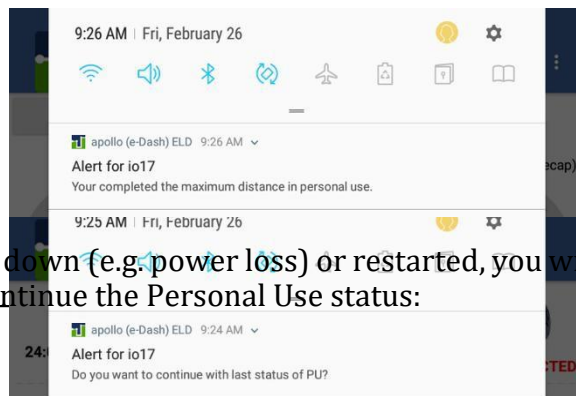


If the ELD shuts down (e.g. power loss) or restarted, you will be prompted to either exit or continue the Personal Use status:

The ELD also allows you to drive the vehicle inside a yard. Please, switch to Yard Move (YM button) before putting the vehicle in motion. If the vehicle's speed exceeds 32 Km/h you will be switched (automatically) to Driving duty status.

Same as Personal Use, if the ELD is restarted, you will be prompted to either remain in the Yard Move status or exit such a status.

ELD Main Operation Screen
Interactions

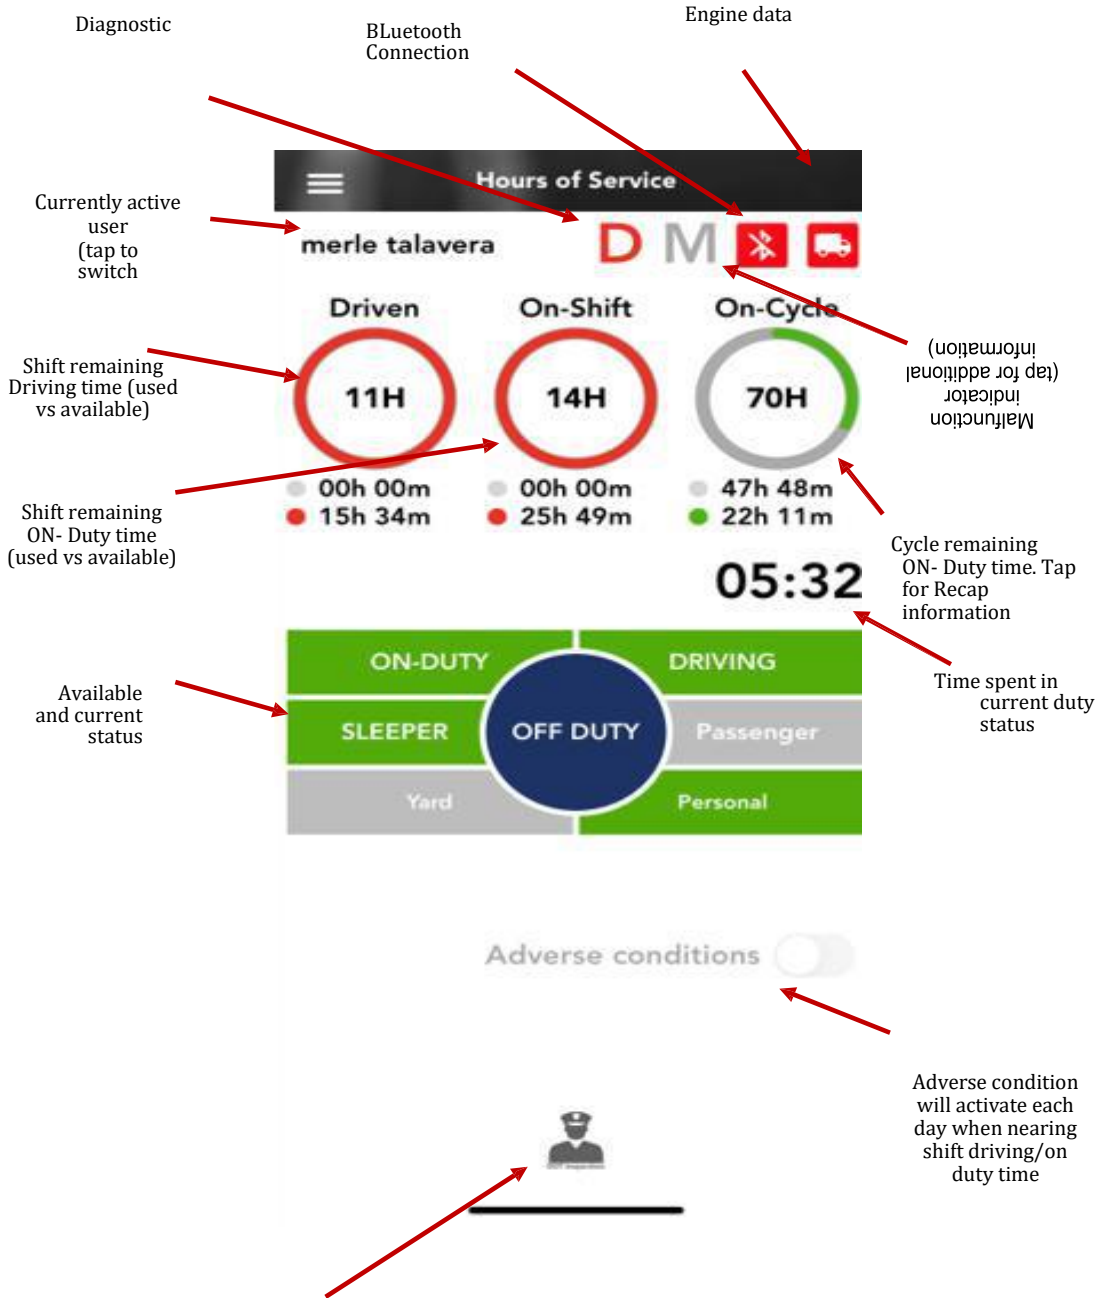

Roadside Inspection Mode

Changing Duty
Status

To change the duty status tap on the desired duty status button. Changing to (and out of) ON-DUTY, YARD and PERSONAL will prompt you to select a pre-defined remark or enter your own remark.


- ! When coming out of ON-DUTY status, you can input the number of gallons fueled into the vehicle which are required for proper IFTA reporting.

Time
Remaining

The three donuts constantly show the actual time spent on each status (driving, ON- Duty and cycle ON-Duty). The corresponding donut will turn yellow or red to indicate proximity to the time limit.

Recap

Tap on the “ON-Cycle (see recap)” donut to see how much ON-Duty time will be removed once the 7th or 14th day is reached. The recap summary message also tells you the day and time when the next available recap will take place. This information has great value for the driver, so you can plan your weekly cycle and be aware of how much time you will get back each day, after the 7th or 14th day (according to the currently selected ruleset).

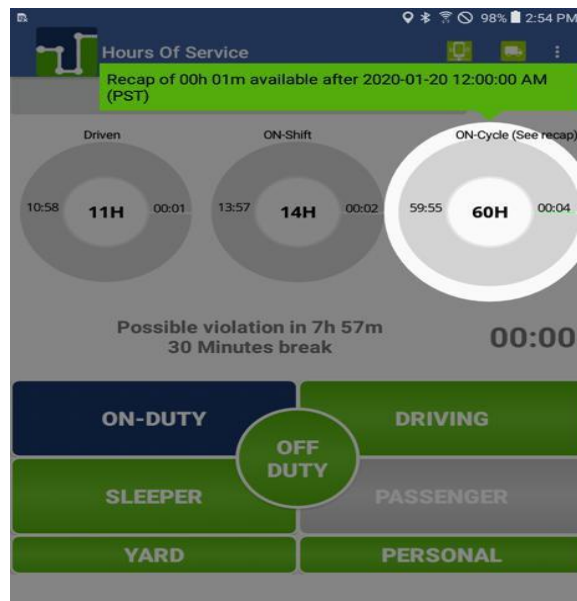


Possible
Violations

This area shows the closest possible violation. It also triggers a notification pop-up one hour before the violation and another one thirty minutes before the next possible violation.


Annotations &
Remarks

When changing to (and out of) ON-DUTY, YARD and PERSONAL duty status, the ELD will show you the pre-defined remarks to simplify the use of the ELD. You can also type your own remark:

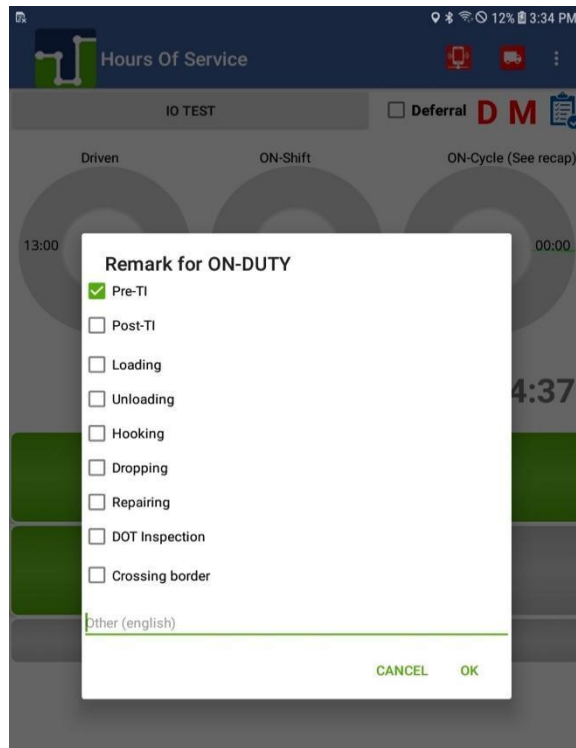

Fuel Purchase Capture (IFTA report)


% Please, enter the number of gallons put in the vehicle (when refueling) for an accurate IFTA report:

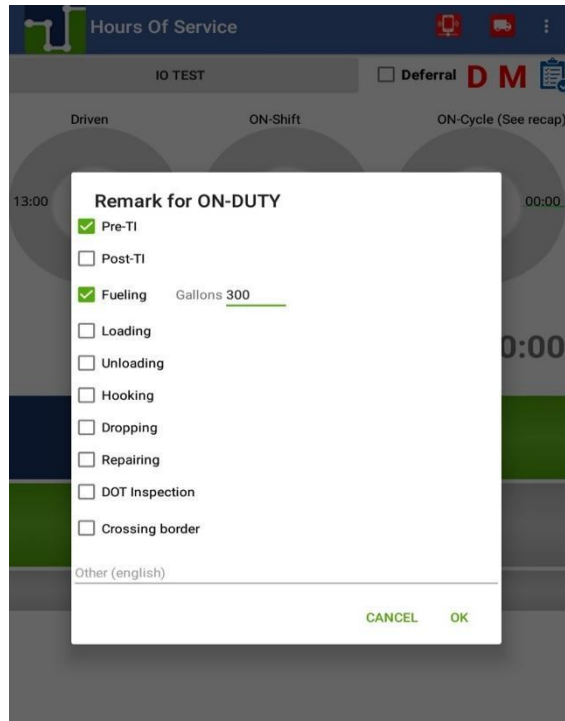


Co-Driver Operation (authentication & remarks)


A co-driver can authenticate by tapping on the currently active driver button (which brings the login screen) or the co-driver can go to the menu and select the Co-Driver Login option.

Roadside Inspection Mode


% If you are stopped on the road, we recommend you to enter the Roadside Inspection Mode by tapping on the button. 

This mode allows you to export the Printout/Display document as well as exporting the ELD data file:

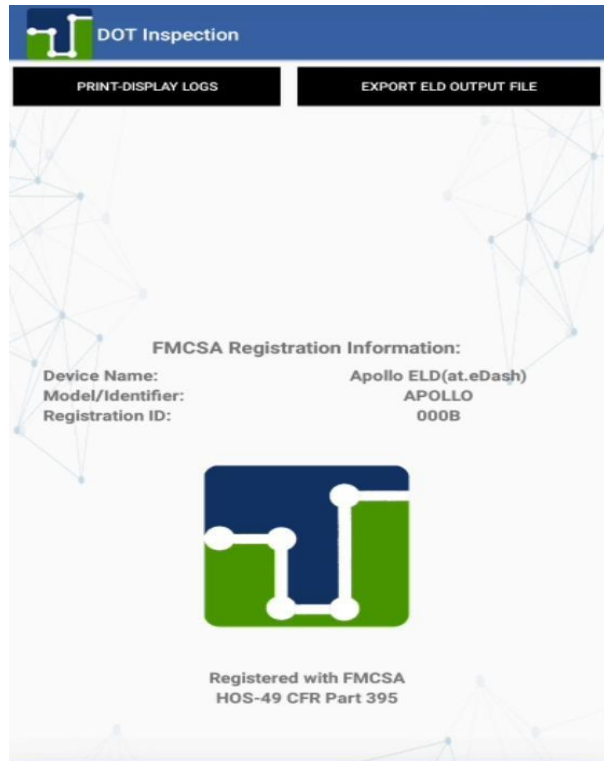

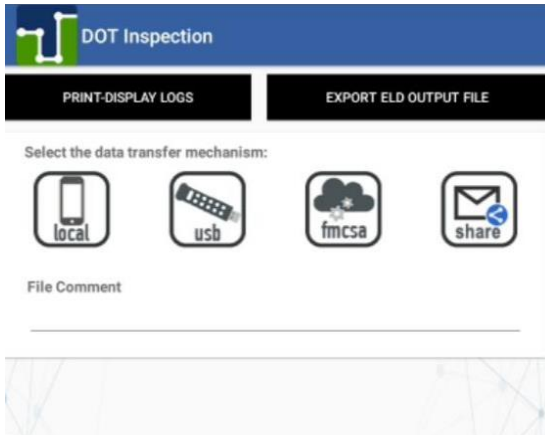


Four Ways To Export Logs

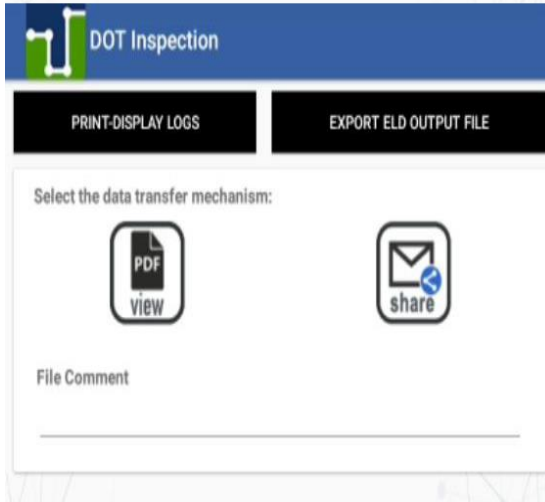

Print display Logs

← talav4067102822-00000000.pdf

Record Date	Vehicle ID	Driver License Number	Device License State	ELD ID	Device ID
2013-12-12	00000000	000000000000000000	TX	0000	0000
Time Zone	Driver Name	Co-Driver Name	ELD Manufacturer	Shipping ID	Device Diagnostic
Device	Device Model	Co-Driver ID	Device ID	Device ID	Device ID
IS Protocol Working Order	Device ID	Co-Driver ID	Device ID	Device ID	Device ID
Device	Device ID	Device ID	Device ID	Device ID	Device ID
Mobile No. (Cell)	Device ID	Device ID	Device ID	Device ID	Device ID
Device Location	Device ID	Device ID	Device ID	Device ID	Device ID
Device Status	Device ID	Device ID	Device ID	Device ID	Device ID
Device Registration State/Province	Device Registration State/Province	Device Registration State/Province	Device Registration State/Province	Device Registration State/Province	Device Registration State/Province
Device Address	Device Registration State/Province	Device Registration State/Province	Device Registration State/Province	Device Registration State/Province	Device Registration State/Province
Device Address	Device Registration State/Province	Device Registration State/Province	Device Registration State/Province	Device Registration State/Province	Device Registration State/Province

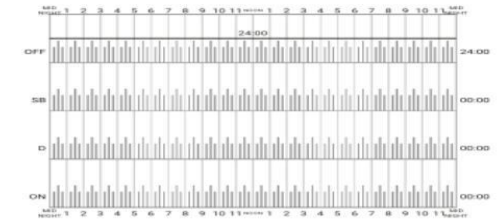


PDF Print Display Logs


Time	Location	Address	Log Status	Event Type/Status	Device
08:00	Cheney, Florida	TX	ON	OFF Data	Device
08:15	Cheney, Florida	TX	ON	Logon	Device
07:45	Cheney, Florida	TX	ON	Logoff	Device
07:00	Cheney, Florida	TX	ON	Logon	Device

Certifying your records and Log Edits

Every duty status change must be certified before exporting the driver's logs. Select the "Certify Logs" option from the menu to list all unverified logs. Select each day and tap on the "Certify" button. At the end of each 24-hour period, the ELD will automatically prompt the driver to certify logs for the last 24 hours period. During the driver login and logout, the driver will be prompted to certify the logs.

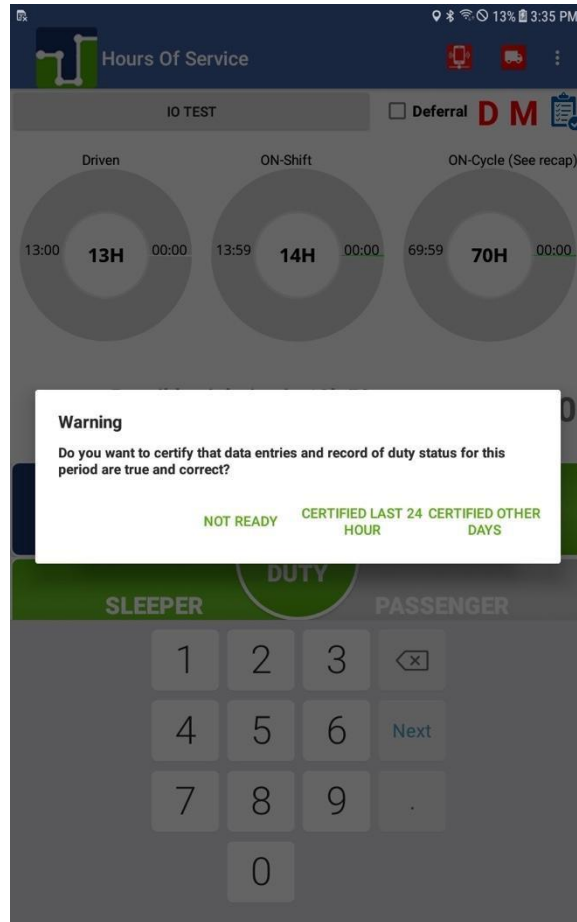


You can also certify your logs at any time by going to the main menu and selecting Certify Logs. Select the day or days you would like to certify:

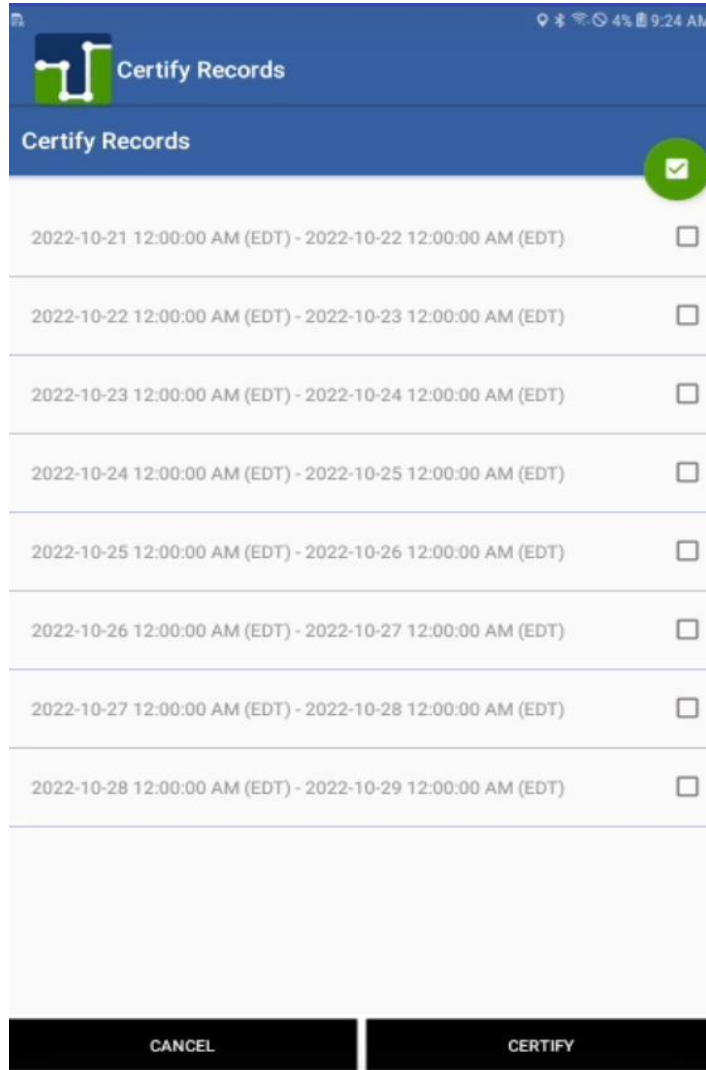

Select the 24-hour period you want to certify then tap on the CERTIFY button. You need to agree to the statement.

To view your Logbook, edit your logs or export Logs/ELD data file, go to the “Logbook” option in the menu.

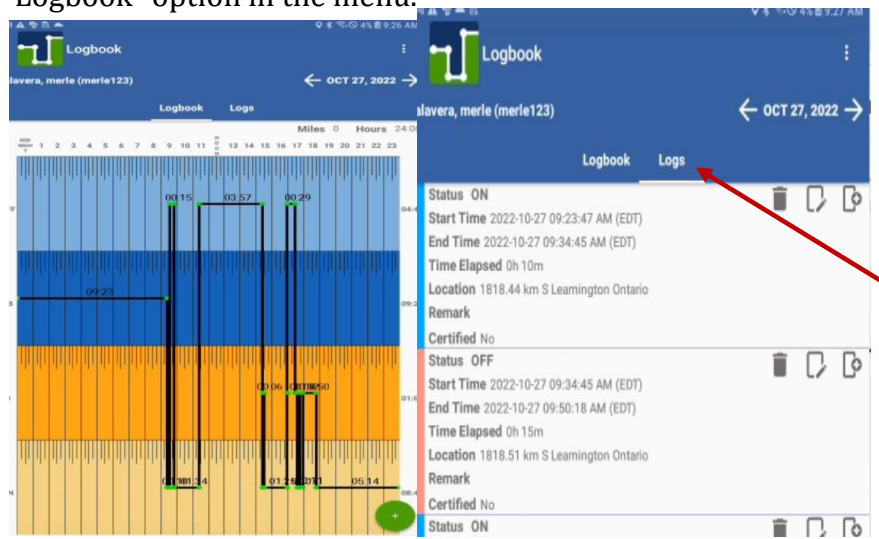

LOGS tab


You can move to a different day by selecting the left and right arrows:



The Logbook tab shows the logbook for the selected day and the Logs tab has a list with all the logs for that day, where you can edit an existing log. You can use the mobile device's swipe option to move between the Logbook and the Logs tabs:


Adding, deleting and editing an existing record (log): On the LOGS tab select the edit icon. Make the necessary changes, input the mandatory remark explaining the reason of the change and then Confirm Changes. Remember, driving time can only be increased, on automatically recorded records; and deleted, reduced or increased on manually recorded records! Your ELD must be synchronized to your tractor's ECU (via ECM device). Failure to read engine values will make you non-compliant.

Daily ON-DUTY, cycle ON-DUTY and possible violations will be calculated according to the new record change.

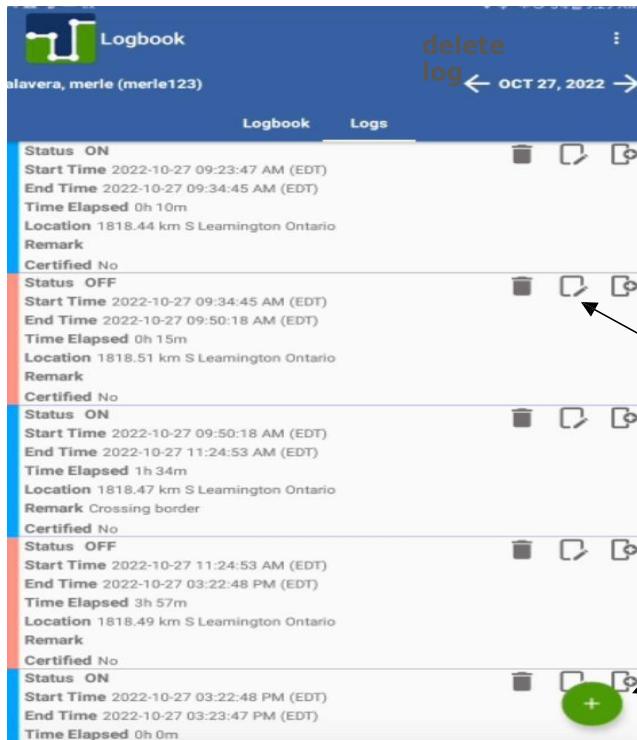

editlog

addanew log

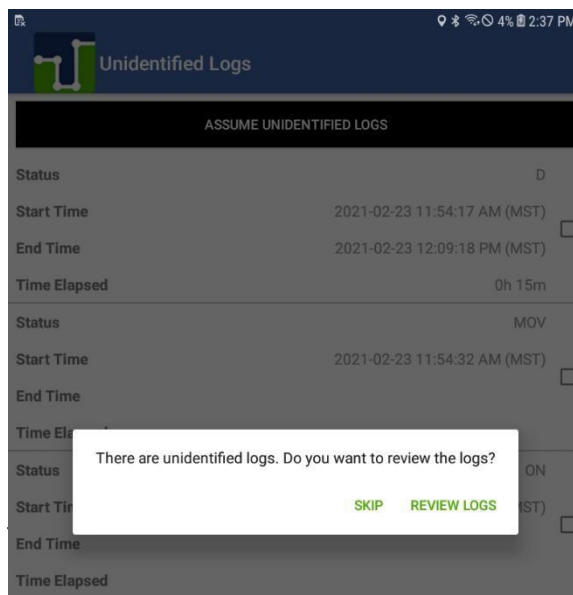

Assumption of Unidentified Logs

During the login process, you will be prompted to review the existing unidentified logs.

If the unidentified logs do not belong to you, just tap on **SKIP**. If some, or all, unidentified logs belong to you select **REVIEW LOGS**, select the checkbox associated to the logs that belong to

you and assume the logs. The carrier can later revert those logs back to the unidentified if needed for which you will be asked to confirm.

Motor Carrier Suggestions

For time to time, the carrier you work with may suggest some changes to your logs. You are responsible for assuming or rejecting those suggestions.

- ! Carrier-proposed edits will show on your ELD at different times. They will show during login and logout process and they will also be shown as a new ELD message on the main screen:



Carrier-proposed log edits are shown during the login, logout and in the message inbox (see image above).

Please make sure:

- You are not driving while attending to carrier-proposed log edits
- You re-certify your ELD records if a carrier-proposed log edit is assumed

Once you tap on the ELD message button a list of carrier-proposed log changes will be shown:

The screenshot shows a mobile application interface titled "Carrier Proposed Edits". At the top, there are two buttons: "REJECT" and "ACCEPT". Below these buttons is a list of three log entries. Each entry has a status bar on the left: blue for the first two and green for the third. The first two entries have checkboxes on the right side. Red arrows point from the "REJECT" and "ACCEPT" buttons to the checkboxes, and from the checkboxes to the text "1) Select the logs you want to accept OR reject". Another red arrow points from the text "2) Select REJECT or ACCEPT to perform the desired action. The action selected will be applied to the selected logs" to the "REJECT" button.

Status	Start Time	Location	Remark	Action
ON	2020-06-16 02:35:02 AM (EDT)	Miami,FL	Pre-TI	<input type="checkbox"/>
YM	2020-06-16 02:35:02 AM (EDT)	Miami,FL	Pre-TI, portal	<input type="checkbox"/>
SB	2020-06-16 02:45:00 AM (EDT)	MiamiFL	portal	<input type="checkbox"/>

2) Select REJECT or ACCEPT to perform the desired action. The action selected will be applied to the selected logs

1) Select the logs you want to accept OR reject


ELD general messages and notifications

Some notifications are shown while operating the ELD. Some of them are errors, warnings or just specific information regarding an operational change. These are the most common notifications:


During authentication:

- You are logged on a different device: A driver can only use credentials to log in to one ELD. The same driver account cannot be used on multiple ELDs. If you lost your ELD while authenticated, contact your company and ask them to Unlock your account. You will be able to log in after your account is unlocked.
- Wrong authentication: Make sure your Username and Password are correct.
Also, make sure you have internet access and good upload/download speed.
- Downloading _____ (e.g. shipments, events, violations, etcetera) error:
Make sure you have internet access and good upload/download speed.


Unidentified Driving: Once the vehicle, to which the ELD is connected to, begins moving a Driving event is created. The ELD will show a visual and audible notification indicating the driver to stop and authenticate on the ELD. The driver could continue to the destination, authenticate later on and review/accept unidentified events.

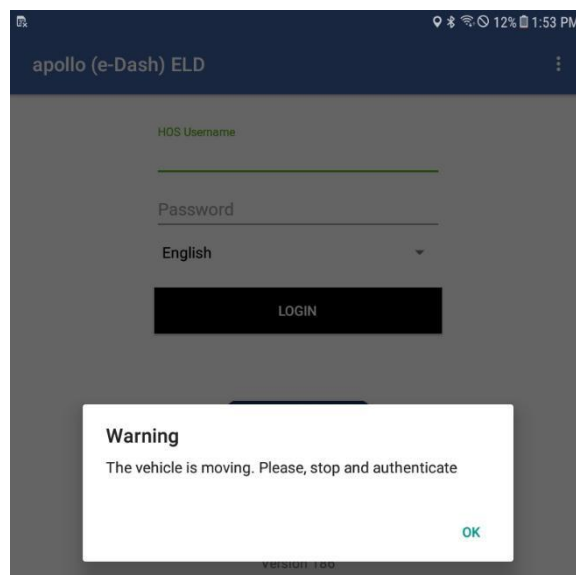


Logs Certification: At the beginning of every 24-hour period, the ELD shows a notification to the driver asking to certify the logs for the previous day or past days. You can select not to certify your logs (yet), certify the previous 24-hour period or all pending logs.

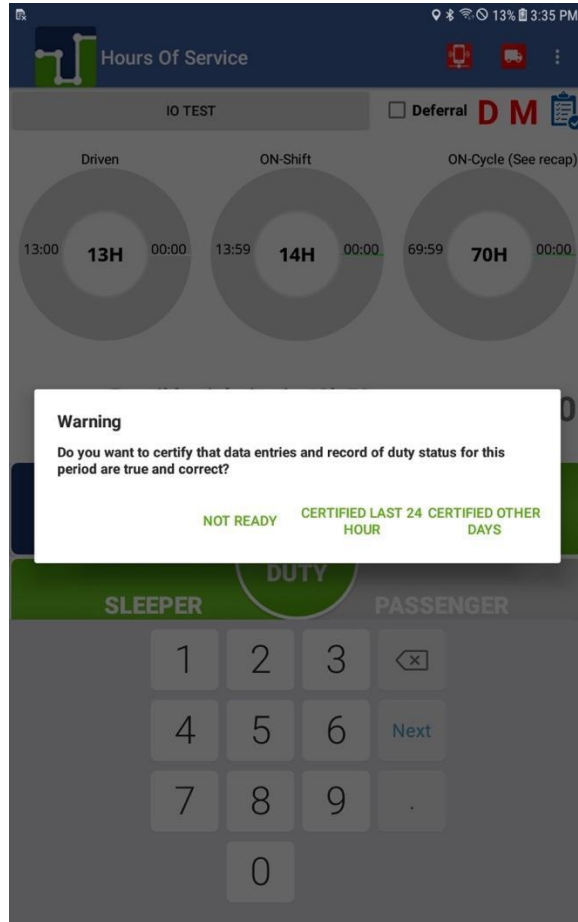

Once you are ready to certify your logs, please agree to the following statement:

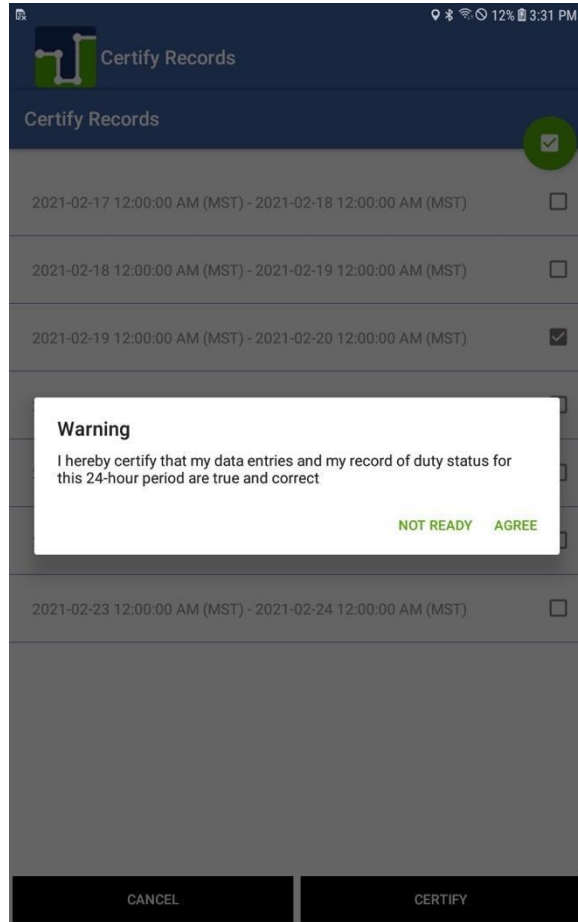

Automatic Driving status with multiple drivers authenticated: If the vehicle moves, there is more than one driver authenticated on the ELD and no driver is on Driving duty status; the ELD shows an audible and visual notification prompting drivers to select the driver currently operating the vehicle.

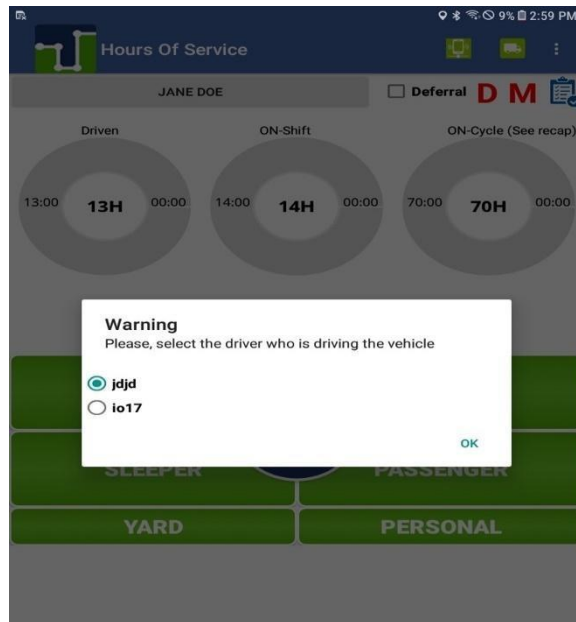

Carrier-proposed log edits: If the carrier's back-office personnel propose a change to the driver's logs, a notification is shown on the ELD. The driver can assume or reject the carrier-proposed edits during login, logout or by tapping on the new message icon.

Notification of carrier-proposed edits during normal ELD operation:



ELD Diagnostics and Malfunctions
(Resolution)

DIAGNOSTICS:

1- **Power Data/Compliance Diagnostic** (ECM parameters must be available within 1 minute of powering the vehicle's engine on)

Resolution: Make sure you are connected to the ECM device. On the menu, go to Scan Devices and select your ECM device. Make sure all engine parameters pass the diagnostics (all green)

2- **Engine Synchronization Data Diagnostic** (not all ECM parameters are available when the ELD records an event e.g. duty status change)

Resolution: Make sure you are connected to the ECM device. On the menu, go to Scan Devices and select your ECM device. Make sure the diagnostic passes all engine parameters (all green)

3- **Missing Required Data Elements Data Diagnostic** (other required data e.g. location, coordinates) not available when recording an event)

Resolution: Make sure the GPS module is enabled on your ELD

4- **Data Transfer Data Diagnostic** (An ELD must verify this functionality at least once every 7 days)

Resolution: Verify that you have an active cellular or wifi connection all the time. Confirm that your logs are always updated on the ELD portal

5- **Unidentified Driving Records Data Diagnostic** (more than 30 minutes of driving without a driver logged on the ELD)

Resolution: You are not logged on the ELD and the vehicle moves for an extended period. Please log in and select your Driving time

6- **Other ELD identified Diagnostic** (ELD provider may implement additional, technology-specific malfunction and data diagnostic detection schemes)

MALFUNCTIONS (most malfunctions relate to a Diagnostic, but a malfunction is generated when the same diagnostic occurs for at least 30 minutes in the last 24 hours):

P- Power Compliance (related to diagnostic 1)

E- Engine Synchronization Compliance (related to diagnostic 2, for instance multiple periods of no ECM data that, when added together are more than 30 minutes in the last 24 hours)

T- Timing Compliance (the time on the ELD, compared to an external time source are different)

Resolution: Make sure the date and time on your mobile device is properly set.
DO NOT (manually) change the date or the time on your ELD

L- Positioning Compliance (no location available, (related to diagnostic 1)

R- Data Recording Compliance (monitor storage capability to store records)

Resolution: Make sure you have sufficient internal storage on your ELD. Delete files if necessary


S- Data Transfer Compliance (ELD records not able to be uploaded)

Resolution: You probably don't have internet access. Restart the ELD (if needed) and confirm you reconnect to the network

Driver Vehicle Inspection Reports (DVIR)

Select the DVIR button on the main screen. Go to the menu and select DVIR to select the applicable region.

A compliant checklist is shown. Select any defect you might have found during your vehicle and trailer inspections. On the last step enter a remark and indicate if the defects were corrected or not.

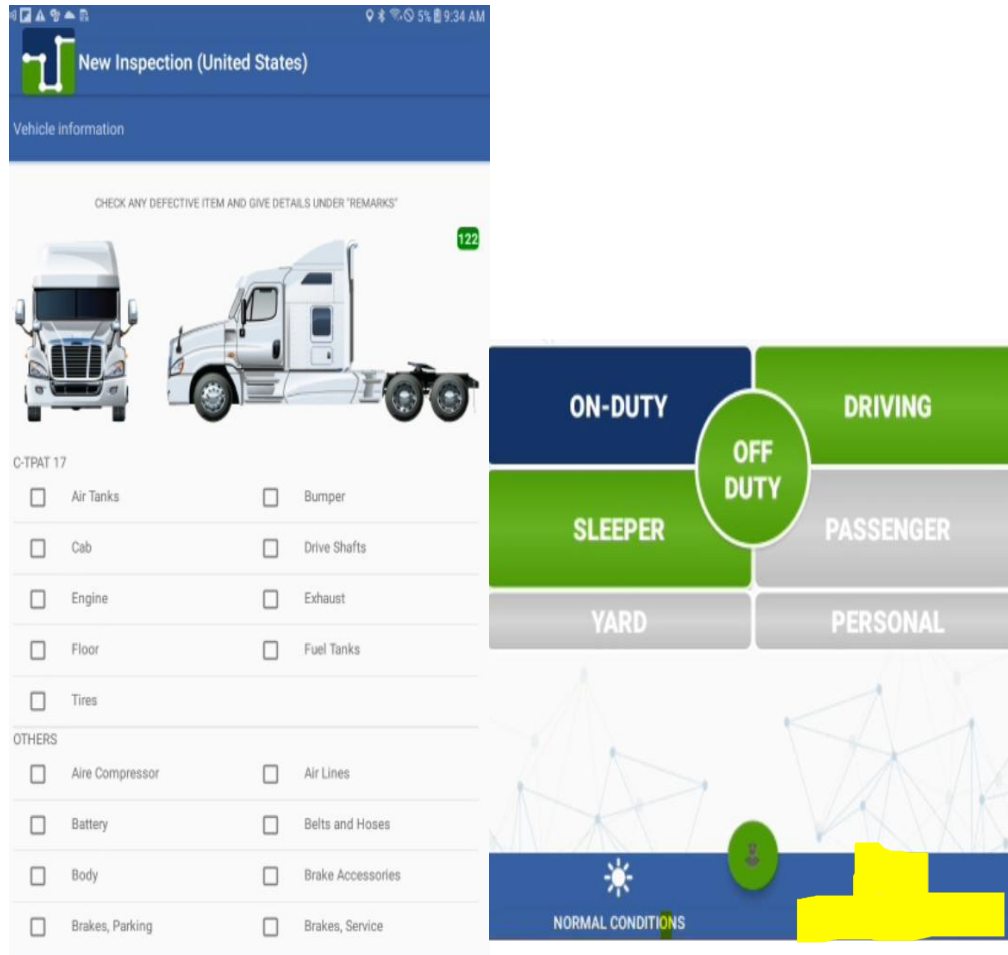

Select the item with defects and tap on NEXT.

New Inspection (United States)

Vehicle information

CHECK ANY DEFECTIVE ITEM AND GIVE DETAILS UNDER "REMARKS"

122

C-TPAT 17

<input type="checkbox"/> Air Tanks	<input type="checkbox"/> Bumper
<input type="checkbox"/> Cab	<input type="checkbox"/> Drive Shafts
<input type="checkbox"/> Engine	<input type="checkbox"/> Exhaust
<input type="checkbox"/> Floor	<input type="checkbox"/> Fuel Tanks
<input type="checkbox"/> Tires	

OTHERS

<input type="checkbox"/> Aire Compressor	<input type="checkbox"/> Air Lines
<input type="checkbox"/> Battery	<input type="checkbox"/> Belts and Hoses
<input type="checkbox"/> Body	<input type="checkbox"/> Brake Accessories
<input type="checkbox"/> Brakes, Parking	<input type="checkbox"/> Brakes, Service

NEXT >

We have separated items under the C-TPAT 17 agreement in order to help you reduce border delays (if applicable) and minimize risks.

Check all. Minor and major, defects accordingly. Take pictures of defects which are uploaded to the ELD portal and could be shared later on.

On the last step, enter the remark and sign the inspection report:


If defects were found and corrected, you can ask the mechanic for a signature. There is a third, optional signature which some carriers require before a vehicle leaves the yard.

You can take up to 9 different pictures. Once you are done select Upload.

Shipments (connecting to brokers, shippers, receivers & carriers)

Addressing two of the biggest complains from drivers using an ELD

The new Shipment Sync feature, implemented on app release 133, targets those specific needs by allowing drivers, motor carriers, brokers, shippers and receivers to be connected and sharing shipment information in real-time. Shippers and receivers can confirm exact arrival time, bay number assigned to the driver, safe parking instructions and additional notes. This information is shared (instantly) with drivers, allowing them to better plan their routes, rest times and minimize dock waiting time. The next page shows a general overview of Shipment Sync:

 **New**
 Remark


79.81

 Seal number

 Remark

 CONDITION OF
 DEFECTS COR
 DEFECTS DO P
 DEFECTS NEE

Doral, Florida


 e-Sign

 **Shipment**

   83%  2:08 PM

Est. pickup date  2020-10-21	Est. pickup time  13:07
-----------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------

Est. delivery date  2020-10-21	Est. delivery time  14:07
-------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------

Shipper

Number

Commodity

Additional comments (optional)

First you need to create the shipment (see image above). Once the shipment is uploaded to the ELD portal, the carrier can share the shipment with brokers, shipper and receiver.

On the new Shipments tab (online portal), motor carrier personnel can see all shipments created by drivers. A pop-up window is displayed once the Details link is clicked. The motor carrier can share these ETAs with the broker and pickup/delivery warehouses. To do so, the motor carrier just needs to input the email address of every entity they want to share the shipment information with and save the shipment.

Field	Shipper	Receiver
Time		
Email	shipper@entity.com	receiver@entity.com
Bay Assignment		12
Recommended parking		Off exit 349 behind Truck Stop
Notes		Call Johnny at 6:15AM

Once the shipment is saved on the ELD portal an email (from domain: shipment-sync.com) is sent to each destination. Shippers and receivers

(independently) can input the specific warehouse arrival, bay number, safe parking information and

additional notes. Information about the motor carrier, driver's first and last name, shipping document, last known location is shown on the left pane. The last know location is updated every time the page is loaded.

The image shows a mobile application interface for updating shipment information. It is divided into two main panes. The left pane, titled 'Update Shipment', lists several key pieces of information: Carrier Information (CTIA Trucking, 8100 West Flagler St Miami FL), Tractor Number (123), Tractor VIN (XXXXXXXXXX), Driver (Dufree, John), Estimated Time of Arrival (10/03/2018 02:18 PM), and Last Known Location (Miami, Florida). The right pane is a form titled 'Update Shipment' with the following fields: SHIPPER (NAME, DOCUMENT NUMBER) with a dropdown and a text input; SHIPMENT (COMMODITY) with a dropdown; ENTER ADDITIONAL EMAILS TO SHARE SHIPMENT with a text input containing 'FleetManager@pickup.com'; ADJUST LOAD/UNLOAD DAY AND TIME with a date and time picker set to '10/04/2018 05:38 PM'; BAY ASSIGNMENT with a dropdown set to '12'; RECOMMENDED WAIT PARKING with a text input containing 'Flying J exit 239 off I-10'; and ADDITIONAL NOTES with a text area containing 'Wait for Johnny's call at 5pm'. A green 'SAVE SHIPMENT INFORMATION' button is located at the bottom of the right pane.

Once the shipment information is saved, an instant notification is sent to the driver including all the details added by the pickup/delivery personnel, keeping the driver updated at all times.

Index

adapter, 2
Annotations, 19
asset, 4, 9, 10
Bluetooth, 2, 5, 12
carrier, 4, 8, 10, 13, 25, 27, 28, 35, 42, 43
Certify, 22, 23
co-driver, 20
Deferral, 16, 17
diagnostic port, 2
Diagnostics, 11, 36
Driver, ii, 8, 13, 20, 39
Duty Status, 15
DVIR, 39
ECM device, 1, 2, 4, 5, 11, 13, 24, 36
Edits, 22
ELD Exports, 29
Engine Synchronization, 5, 11, 36, 37
Fuel, 20
identifier, 1
IFTA, 15, 20
internet, 2, 31, 37
J1939 port, 2
license plate, 4, 9
location, 1, 36, 37, 43
malfunctions, 1, 36
mobile device, 2, 8, 24, 37
Motor Carrier Suggestions, 27
odometer, 4, 9
plug, 2
Printout, 21, 29
Recap, 16
registration state, 4, 9
reinstall, 7
Remarks, 19
Roadside Inspection, 21, 29
ScanDevices, 5, 6, 11, 12, 36
Shipment, 42
Support Account, 4
tractor number, 4
Unidentified, 8, 25, 31, 36
vehicle, 2, 4, 5, 8, 9, 14, 15, 20, 31, 34, 36, 39, 41
VIN number, 4, 9
violation, 19
