


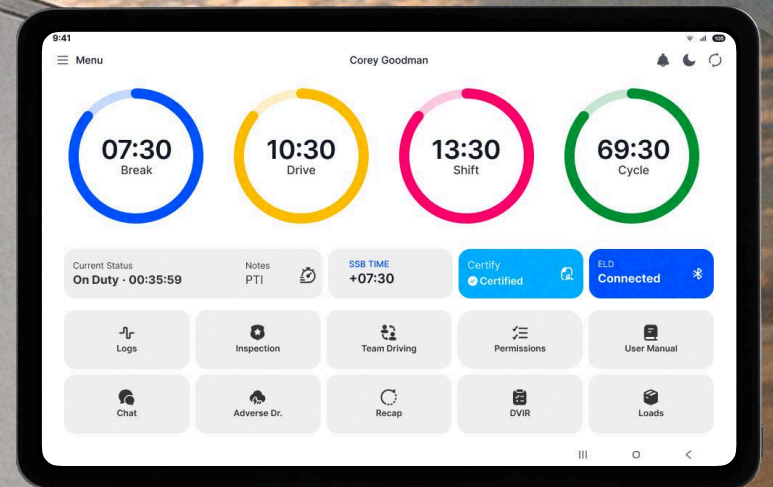


User Guide



CUSTOMER
SUPPORT CONTACT

 (347)444-6634  info@libertyeld.com

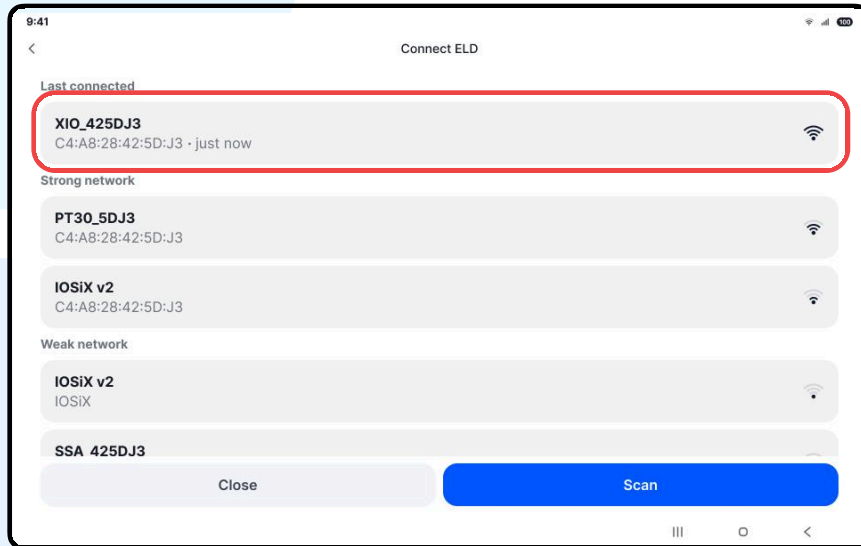


1 Choose your ELD device.


Select your ELD from the available devices list based on the shown signal strength.

2 Your ELD is now linked.

A green "Connected" light on the dashboard shows that your ELD is linked and ready.

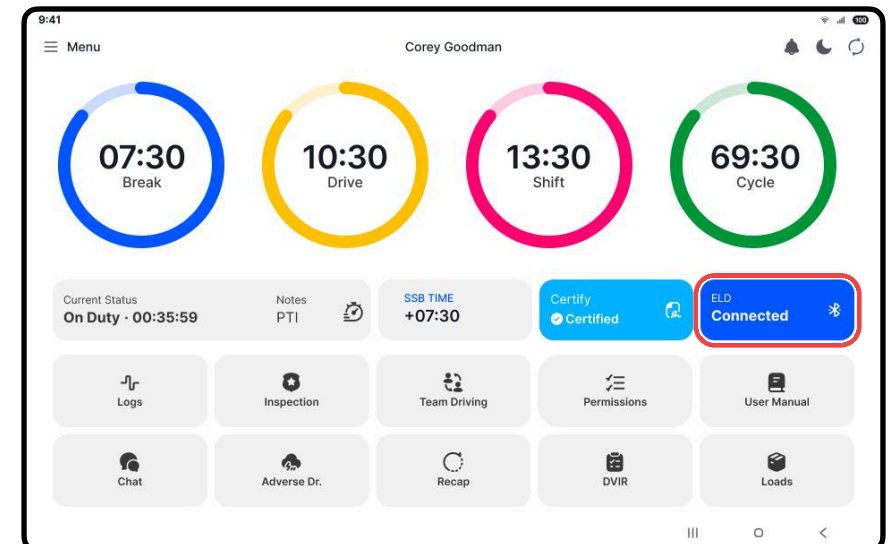

Using ELD while driving.

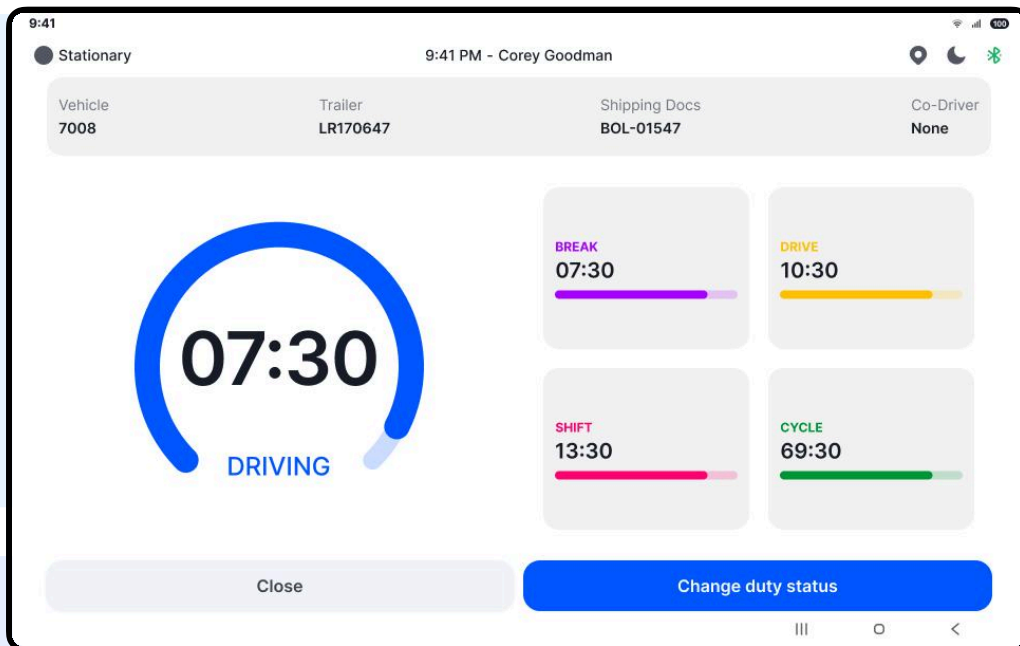


1 Automatic logging of your driving time.

Your driving time is automatically tracked once your ELD links up. Your status changes to "Driving" when you hit 5 mph or faster. If you fall below 5 mph, it switches to "On Duty" after sitting still for 6 minutes.

Using an ELD while driving.

1 Refreshing Your Duty Status

Tap the status bar on your dashboard to update your duty status. Choose Off Duty, Sleeper, On Duty, Yard Move, or Personal depending on your current activity.

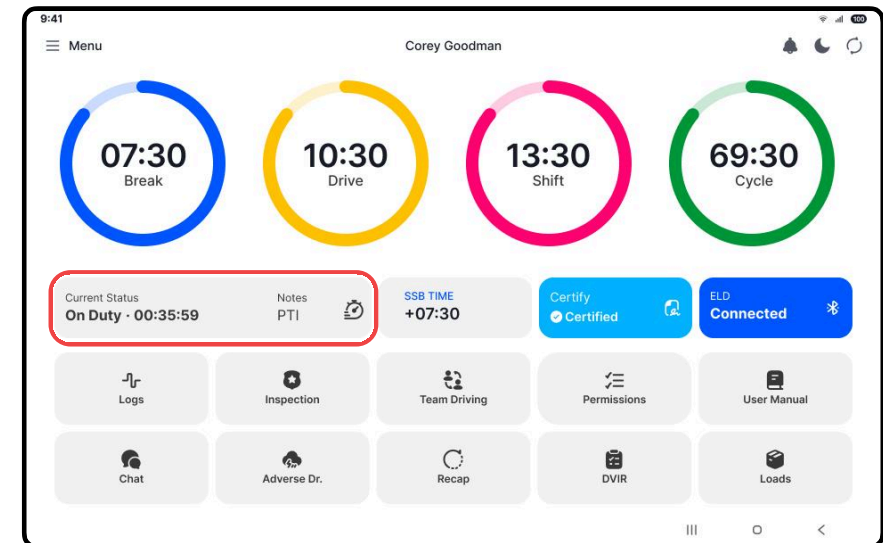

2 Inputting Trip Details.

Fill in your Trailer, Shipping Documents, Location, and Notes. Tap quick select buttons for standard remarks like "PTI" or "Delivery," or type them yourself. The location updates automatically if you leave it empty.



A screenshot of the 'Change Duty Status' screen. The screen is divided into two main sections. The left section contains input fields for 'Trailer' (LR190743), 'Shipping Docs' (BOL-12345), 'Location' (1.2mi WSW of Delaware, OH), and 'Notes' (PTI;). The right section contains a grid of buttons for duty status: 'Off Duty', 'On Duty', 'Sleeper', 'Drive' (highlighted with a red border), 'YM' (Yard Move), and 'PC' (Personal). At the bottom, there are 'Close' and 'Save' buttons.

Ensure you follow the guidelines when presenting your documents to the office.

Review your ELD logs.

1 Follow these steps to show your records to the officer.

Choose "Inspection" from the dashboard or menu.

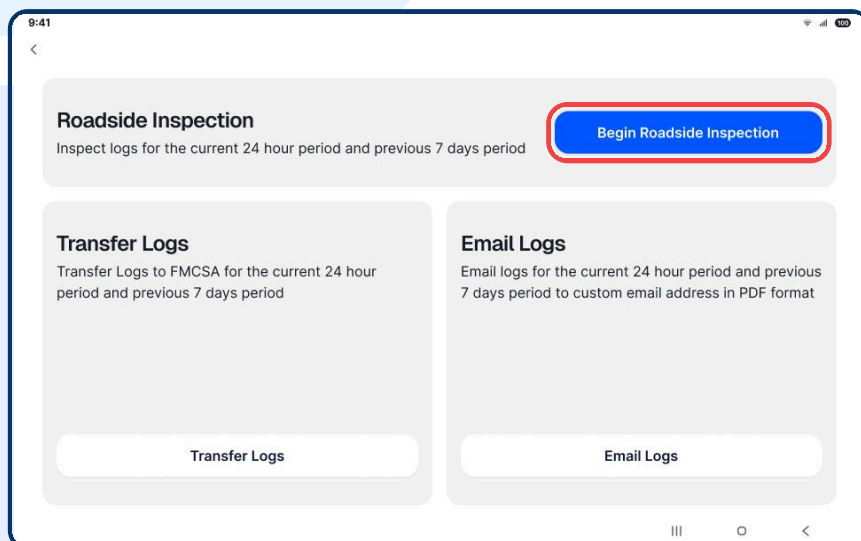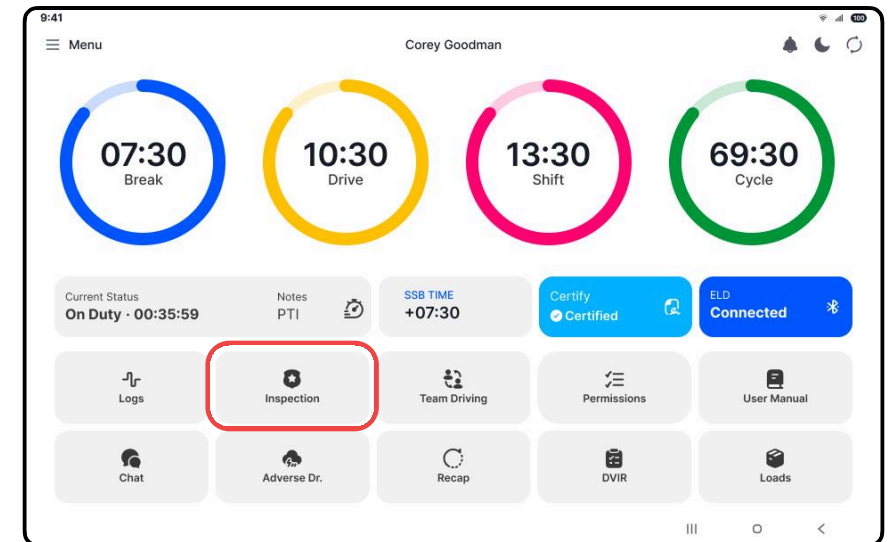

2 Beginning a Roadside Inspection.

Next, tap "Begin Roadside Inspection" to show your eight-day logbook summary to the officer.

Driver's daily log.

Sunday, February 17, 2026
USA property 70 hour / 4 day




Driver Name	José Manuel	Driver ID	3719462
Driver's License State	USA	Driver's License Number	D09083517
Co-Driver's Name	Carlos Alberto	Co-Driver ID	5827394
Carrier			
Main Office Location	895 Legend Loop, Helena, MT 59602	Home Terminal Location	895 Legend Loop, Helena, MT 59602
Driver's Certification Status	Yes, Certified		
Trailers Owned	2016	Shipping Documents	16854
Exempt Driver Status	No, not exempt	Unidentified Driver Records	0 Records
Malfunction Indicators	Yes	Data Diagnostic Indicators	No
Current Location			
Time Zone Offset	PST (UTC-8)	24-Hour Start Time	12:00 AM (Midnight)
ELD Identification Number		ELD Provider Name	

1 Showing your logs.

Give your device to the officer to show your eight-day logbook summary. The screen displays your Driver's Daily Log with all necessary information.

Ensure you follow the guidelines when presenting your documents to the office.

Transfer ELD records to authorized safety officer for inspection.

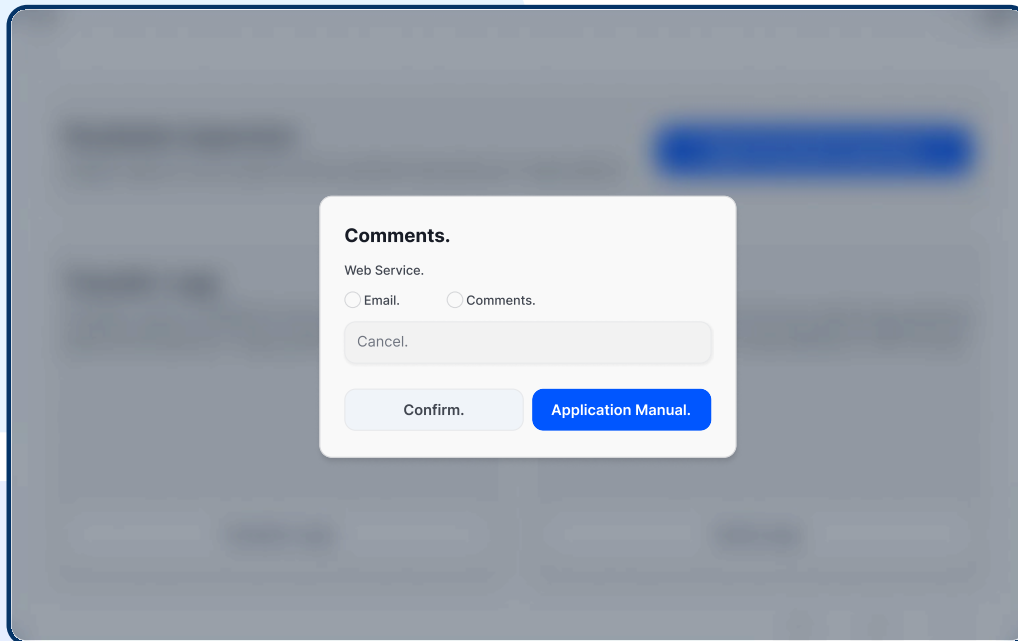

- 1 Choose "Web Service" or "Email," add a comment if needed, and press "Confirm" to send your logs to the officer.

Make sure you follow the guidelines when presenting your documents to the office.

Ensure you follow the guidelines when presenting your documents to the office.

ELD will monitor and report malfunction data based on section "4.6 ELD's Self-Monitoring of Required Functions", table 4:

P – "Power compliance" malfunction, E – "Engine synchronization compliance" malfunction, T – "Timing compliance" malfunction, L – "Positioning compliance" malfunction, R – "Data recording compliance" malfunction, S – "Data transfer compliance" malfunction, O – "Other" ELD detected malfunction.

P – "Power compliance" malfunction,
E – "Engine synchronization compliance" malfunction,
T – "Timing compliance" malfunction,
L – "Positioning compliance" malfunction,
R – "Data recording compliance" malfunction,
S – "Data transfer compliance" malfunction,
O – "Other" ELD detected malfunction

A motor carrier must ensure that its drivers possess an ELD information packet containing the following items: An instruction sheet for the driver describing ELD malfunction reporting requirements and recordkeeping procedures during ELD malfunctions. The following instructions are in accordance with the guidelines set forth in 395-34.

The following instructions are in accordance with the guidelines set forth in 395-34.



Liberty

ELD COMPANY FOR LOGISTICS.

WWW.LIBERTYELD.COM

 (347)444-6634

 info@libertyeld.com