

ELD Installation and Connection



Table of Contents

▶ Install the Hive ELD device in your vehicle	3
▶ Install the Hive ELD App	4
▶ Log in to the Hive ELD App and select a vehicle	4-5
▶ Connect your mobile device to the Hive ELD device	6
▶ Complete Pre-Trip DVIR	7
▶ Record Hours of Service	8
▶ Inspect Logs	9

Install the Hive ELD device in your vehicle

1 Turn off the engine and locate the diagnostic port inside the vehicle. For heavy-duty vehicles, look for circular ports with 9 or 6 pins. For light to medium-duty vehicles, find the OBDII port.

3 Make sure to install the device away from other electrical components to prevent interference.

2 Connect the other end of the cable to the Hive ELD.

4 After installing the device, confirm its functionality by looking for a blinking green LED light. The green light will start blinking once a GPS and Cellular connection is established.



Install the Hive ELD App

1


For Android phones and tablets, download the Hive ELD App from the Google Play Store. For iPhones and iPads, download the Hive ELD App from the App Store.

2

Open the Hive ELD App

Login to the Hive ELD App and select a vehicle


- ▶ Enter your login details and tap **LOG IN**. You will be prompted with the *Terms and Conditions*.
- ▶ Read the *Terms and Conditions* and tap **AGREE**.
- ▶ Select *your vehicle* from the list, or search for one.
- ▶ Tap **ACCEPT**, you will be prompted with a *Settings* page where you can review and edit settings details.
- ▶ Tap **SAVE**.

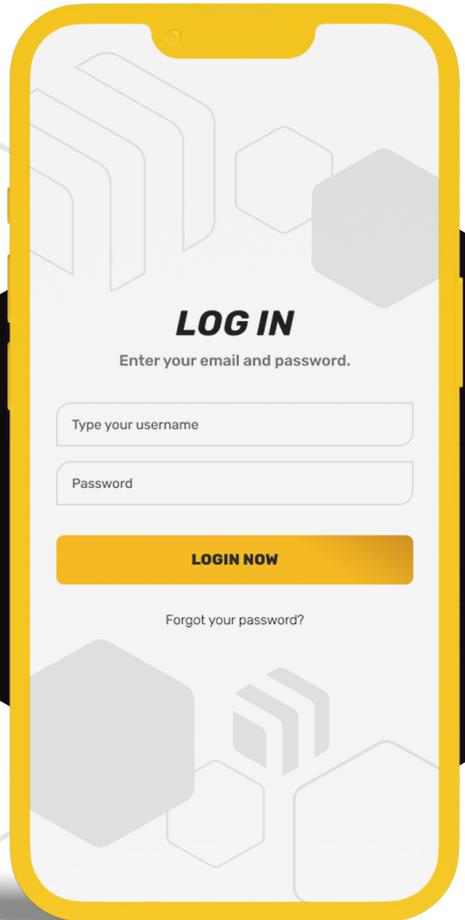



Dashboard View

Once you have logged in and selected your vehicle, you will be directed to the Dashboard page. To establish a connection with your vehicle, utilize the Tap to Connect button.

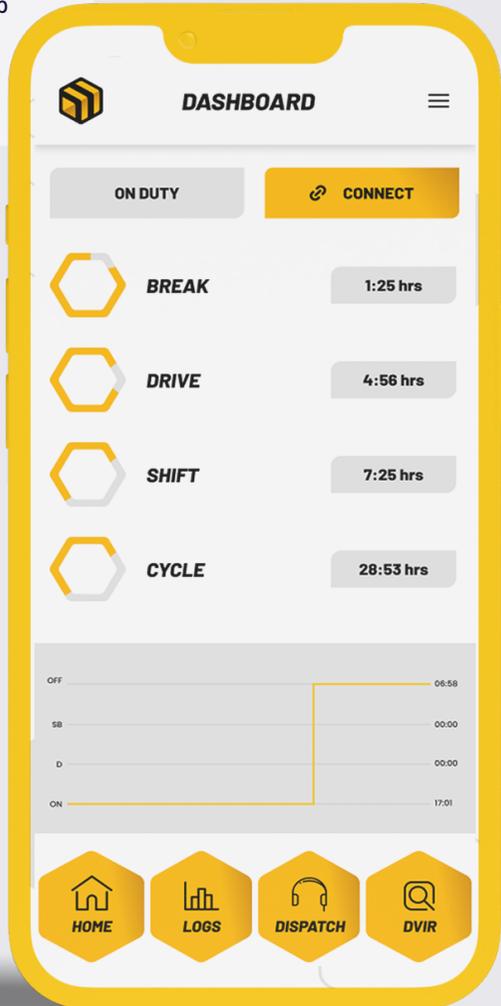


Connect your mobile device to the Hive ELD device



Enable Bluetooth

Ensure Bluetooth is enabled on your device before connecting to the Hive ELD device.

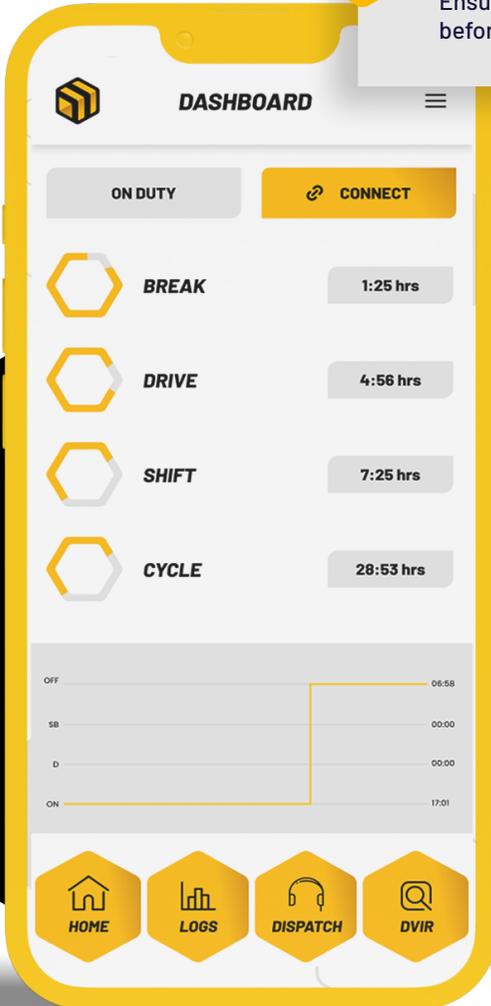

To connect your vehicle, use the **Connect** button. The device will try to pair with the selected vehicle's ELD via Bluetooth. The ELD bar will change from yellow to red, indicating it is in pairing mode.



An icon (↔) will appear in connection bar upon successful connection.

▶ Ready to Drive

After completing all the preparatory tasks in this section, you are ready to drive. Once your vehicle reaches a speed of 5 MPH or more, your duty status will automatically change to Driving, as required by the ELD mandate.

Complete Pre-Trip DVIR



1

Begin a new pre-trip inspection report by tapping the **DVIR button** on the Dashboard.

2

Begin a new pre-trip inspection report by tapping the **DVIR button** on the Dashboard.



Tap Sign and Save the Report.


Record Hours of Service

1 When your vehicle reaches 5 MPH or higher, Hive ELD indicates that the vehicle is *In Motion*, and your duty status will automatically change to **On Duty**.

2 When the vehicle stops (0 MPH) it's considered *Stationary*.

3 You can change your duty status by tapping **Driving** and selecting a different status.



4 If your vehicle remains stationary for five minutes, you will be prompted to change your duty status. If you ignore this prompt, your duty status will automatically change to **On Duty**.

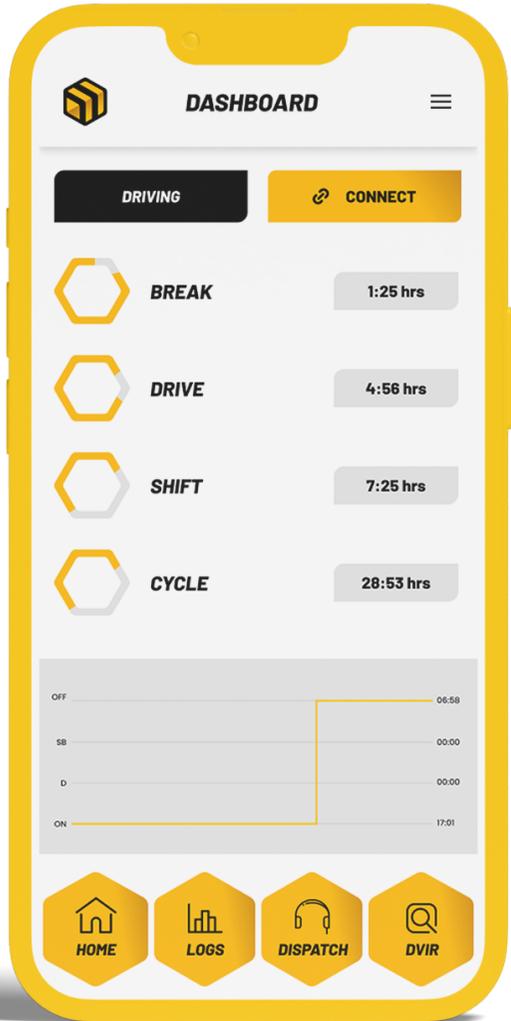

Inspect Logs



To start the DOT inspection, tap the menu icon in the top right corner and select **DOT Inspection**.

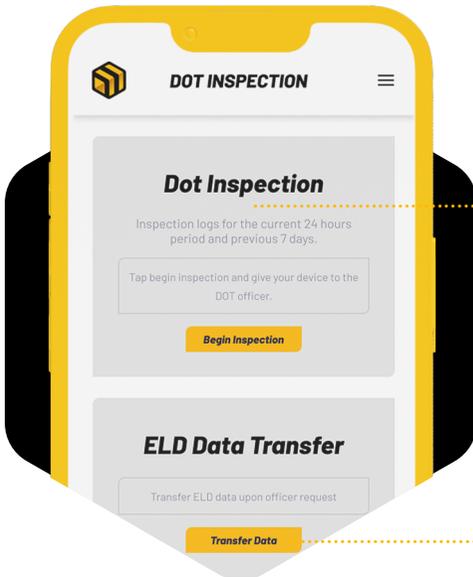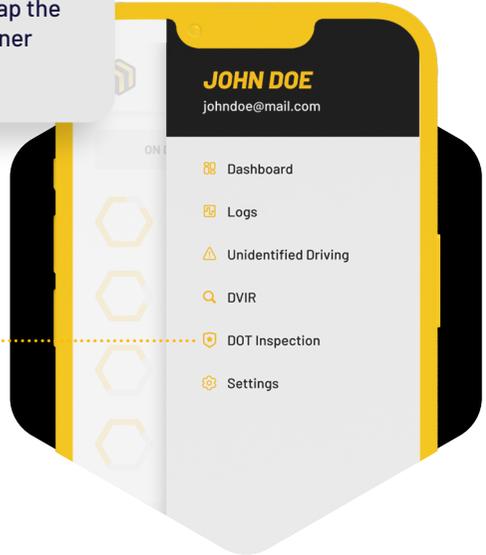

1

To let an officer inspect your logs tap **Begin Inspection**. Logs for current and last seven days will appear on the screen.

2

If the officer asks for the output file tap **Transfer Data**

Tap the **Transfer Data** to send the file via web service or email.

