intime eld

User Manual

drivers manual

Attention

For legal and safety purposes, please refrain from calling your office, customer support line, of safety personnel while driving.

intime eld

Installation ELD Device

Step 1.

Make sure that your vehicle's engine must be OFF. If the engine is ON,please turn it off and turn the key the "Off" position before connecting to the ELD device.

Step 2.

Locate the diagnostic port inside your vehicle's cabin. The diagnostic port is typically located in one of the following places: **1** under the left side of the dashboard, **2** under the steering wheel, **3** near the driver's seat, **4** under the driver's seat.

Installation
ELD Device

Step 3.

To connect the ELD plug it into the diagnostic port of the vehicle. Unscrew the lock surface until it locks. Make sure the ELD is connected.

Step 4.

Once plugged in the device will start syncing with the engine control module (ECM) and New ELD World application on the tablet.

Step 5.

Then, get the tablet provided by fleet and turn it on. Tablet should automatically start application.

≥ intime eld

Downloading Application

For Android Devices

Type "**InTime Eld**" into the search bar of Google Play Store. Tap on "Install" button to download the app into your device.

For IOS Devices

Type "**InTime Eld**" into the search bar of App Store. Tap on "Get" button. Tap on "Install" button to download the app into your device.

≥ intime eld

Permission for resources

First of all app need to get access to bluetooth and location for exchanging data between driver's mobile device and **ELD device.**
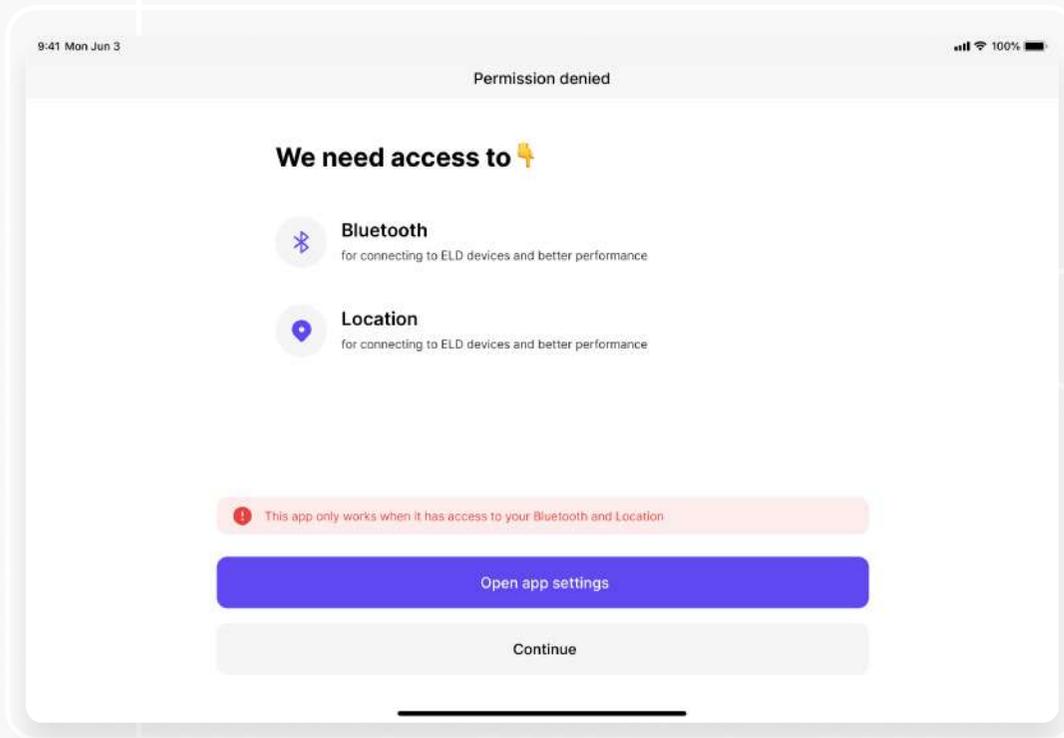
Signing In
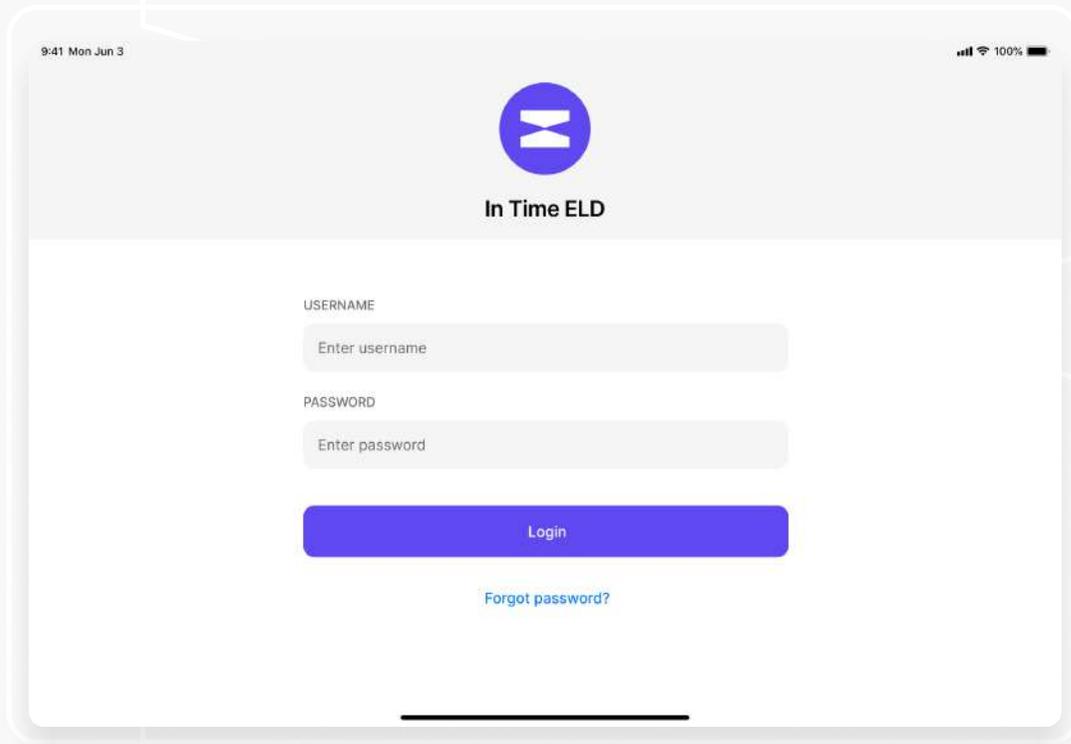
Driver can enter the app by using username and pasword which created for exactly for this driver.

Connect ELD
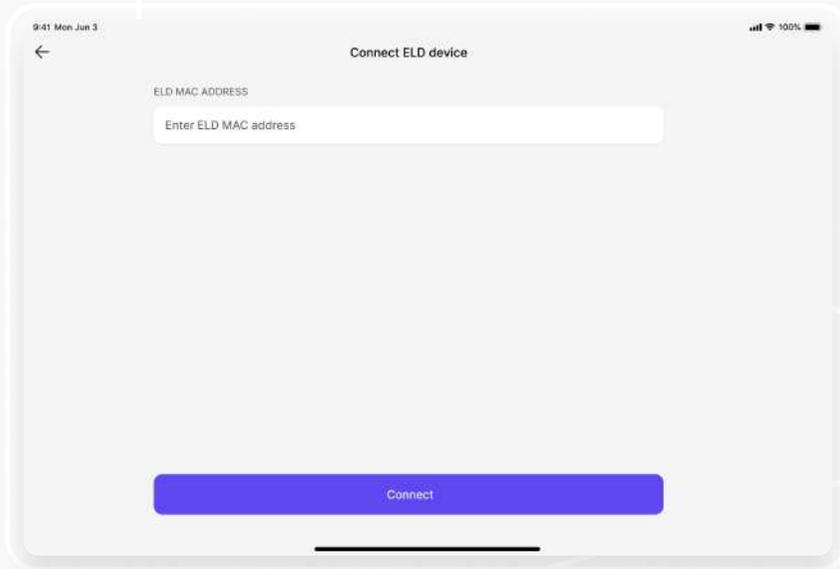
By touching on the screen of mobile device application can get IP Adress of the ELD. By pressing **'Connect'** button ELD device starts working with our application.

Your cellular device will automotically scan ELD.

≍ intime eld
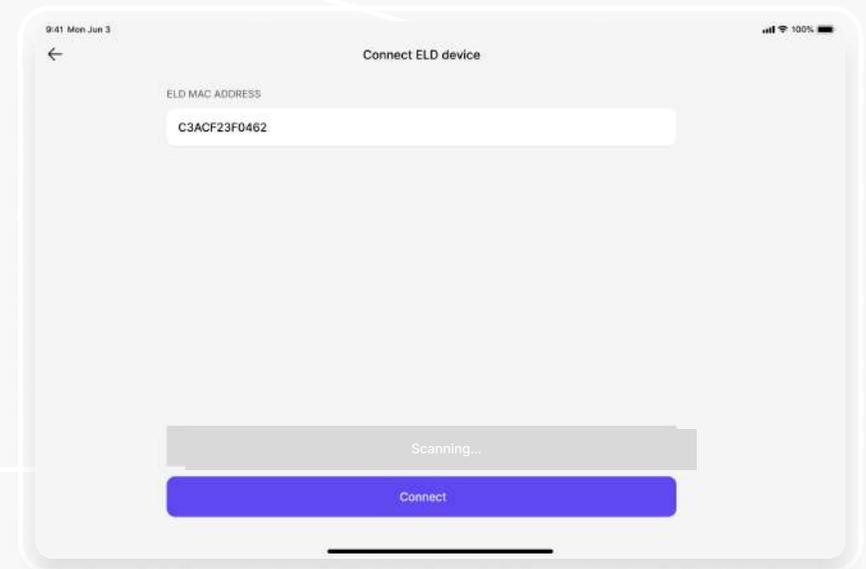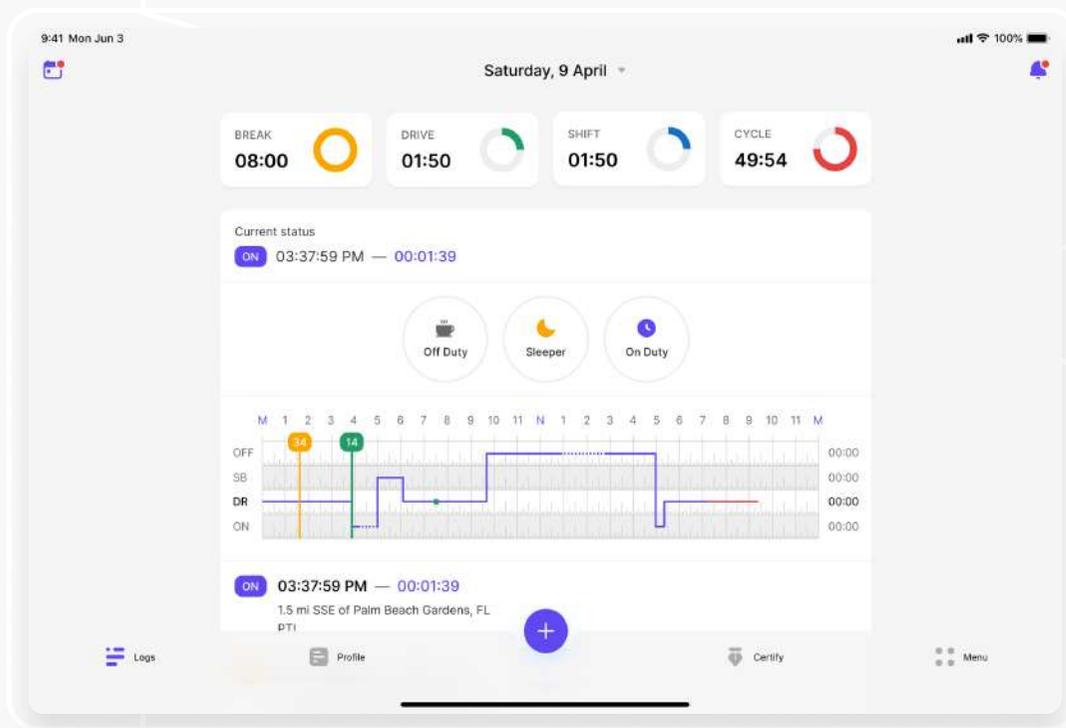
Home screen

The view of home screen of the application.

Driver must swap screen by time to reload new data and refreshing the screen.

Duty statuses

notification
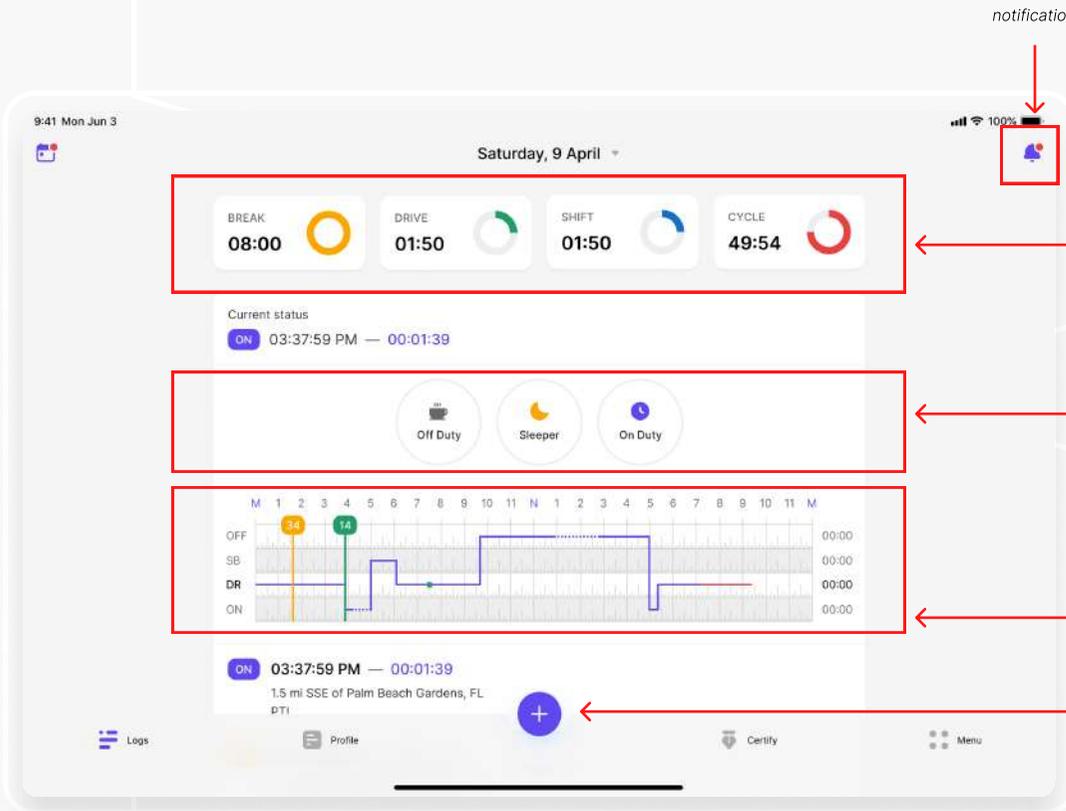
In this section driver can see time indicators value which belongs to his/her duty status.

From the statuses in the main window, driver can select a status depending on your situation

Driver's **graph** will be shown here.

To change duty status driver have to click this **+ icon button**.

≍ intime eld
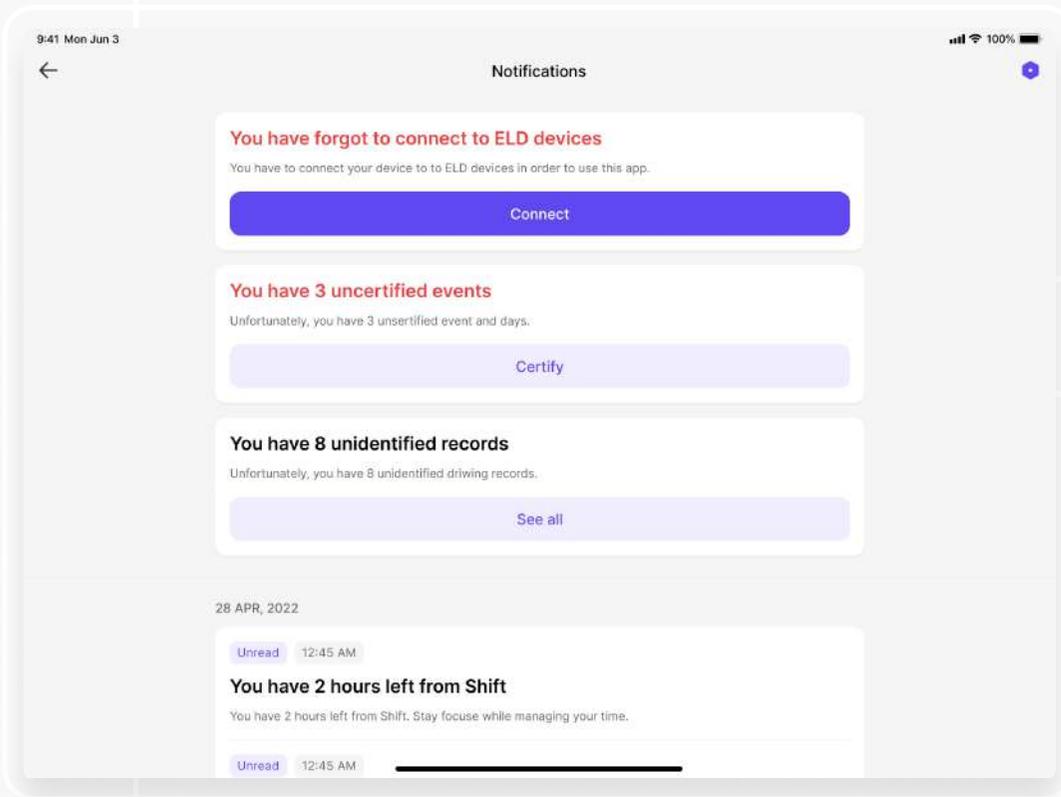
Notification

Driver's **errors, violations** and messages related to him/her work statuses can be seen in the notifications section.

Changing status
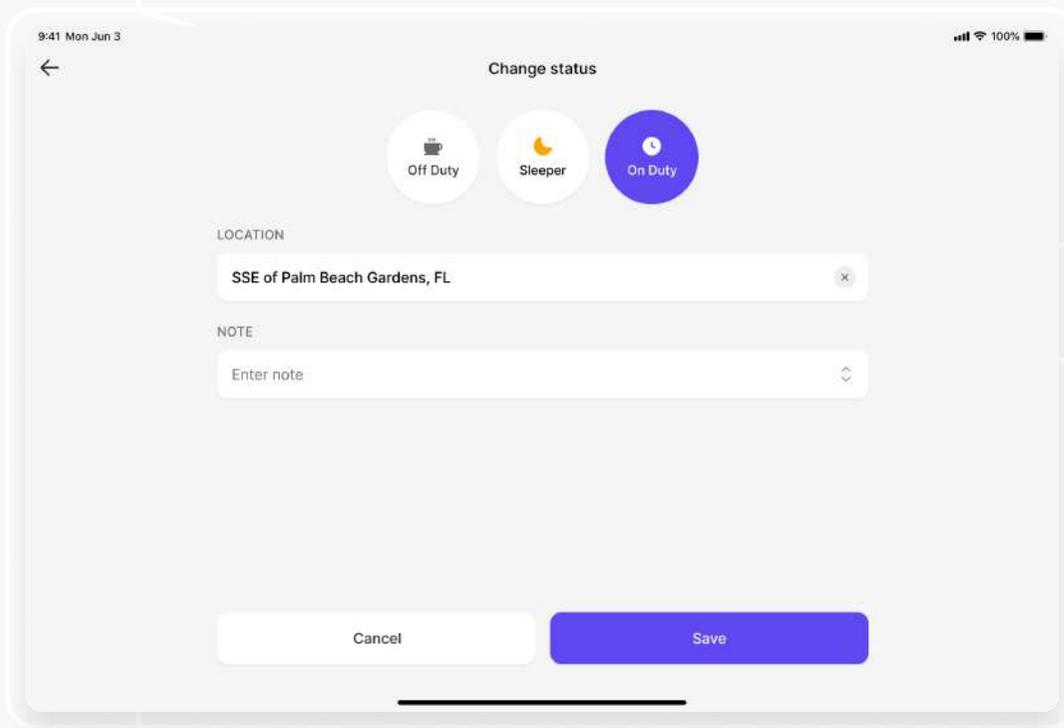
To change current status to another one driver must pick one status and fill information fields(location,note) then save.

Driver on the road
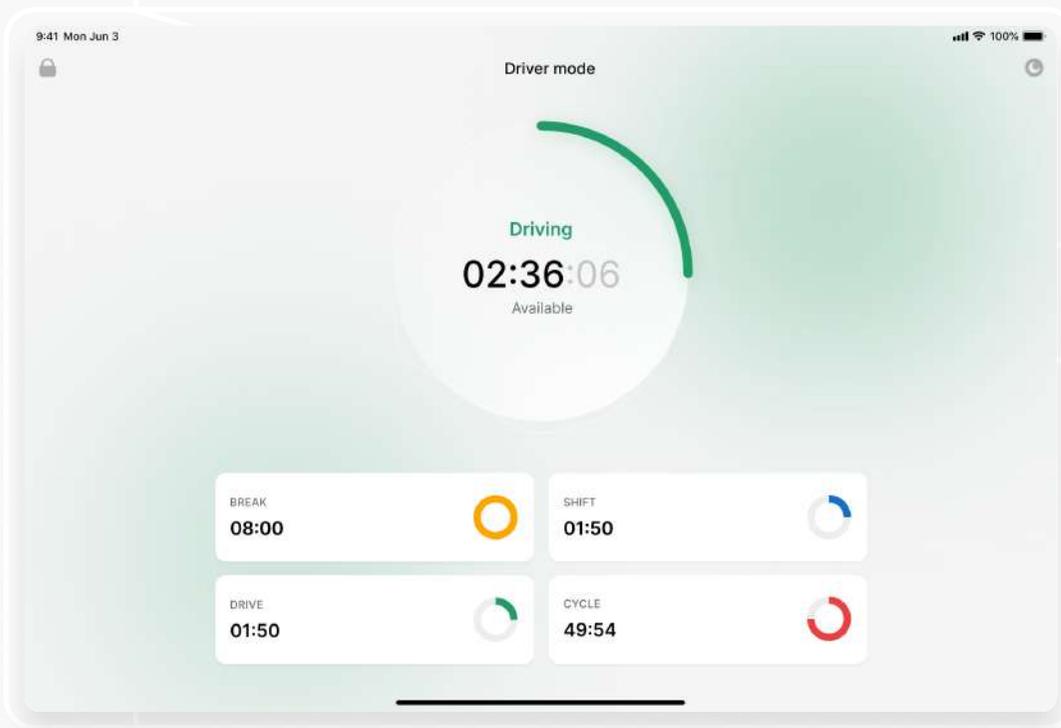
Once you have connected your mobile device to InTimeELD, your driving time automatically recorded. When your vehicle begins moving, your duty status will automatically be set to Driving. At 5 mph (or more) the vehicle is considered Drive.

When driver stops moving, Drive screen waits for 3 minuts, if the speed does not exceed at 5mph (or more) the Drive status will be exited.

intime eld

Editing status

Go to the main «Logs» screen. Click on any log from the logs table.
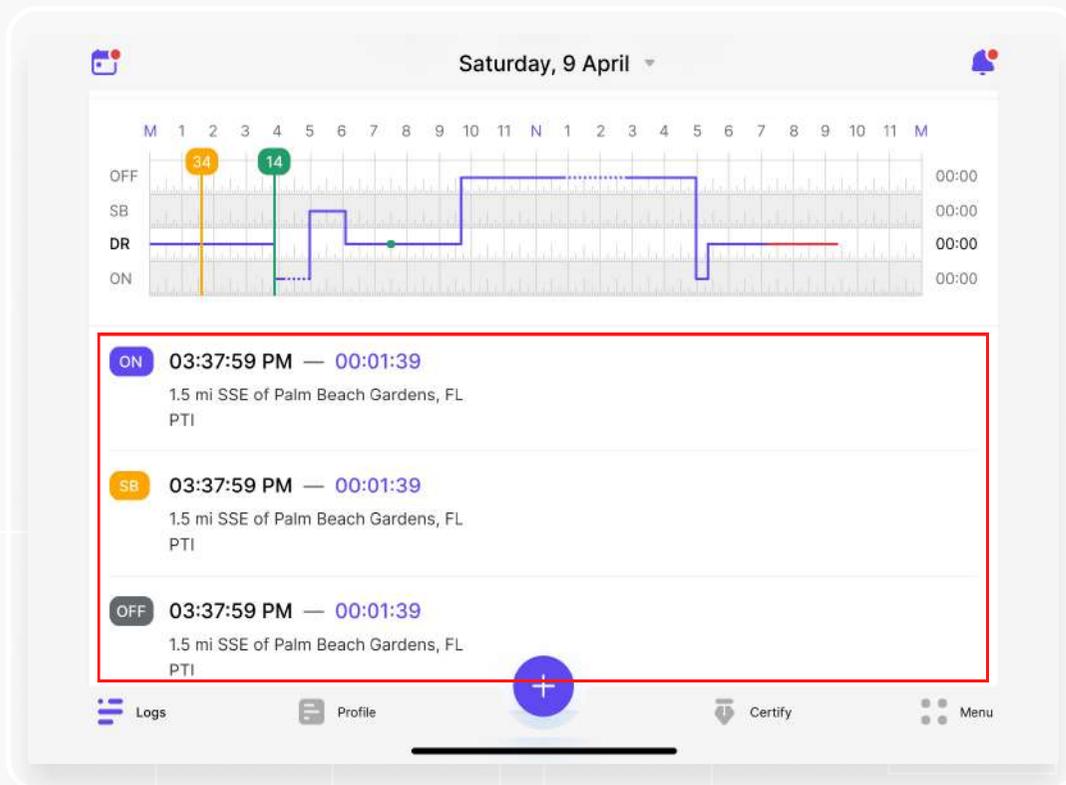
Editing status
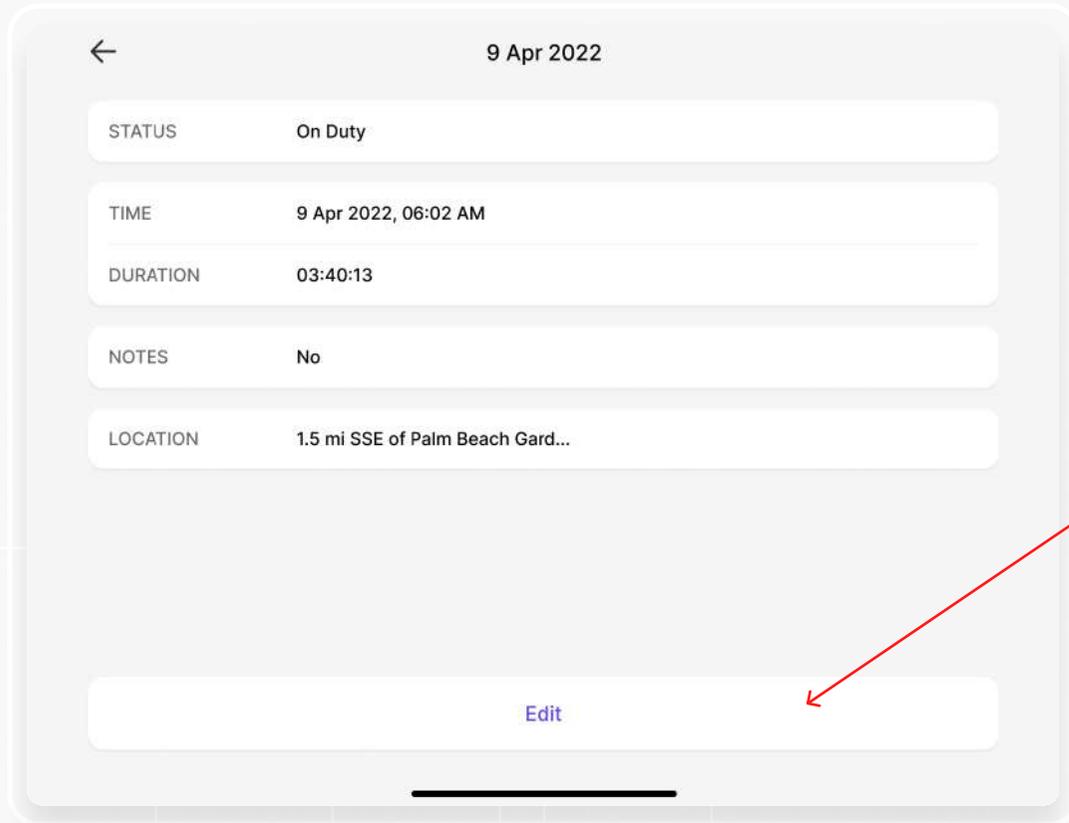
The page which this log's info placed will be opened.
Then click ""**Edit**" button.

new.

Editing status

You will be able to change the **timeline** of the chosen status: tap on the timeline and move it right to prolong, or left to shorten it.

Also, you can edit the status timeline by using the fields "**From**" and "**To**"

To edit the type of the **status**, tap on the needed status from the list of the offered statuses.

Press "**Save**" to save changes.

nCw.
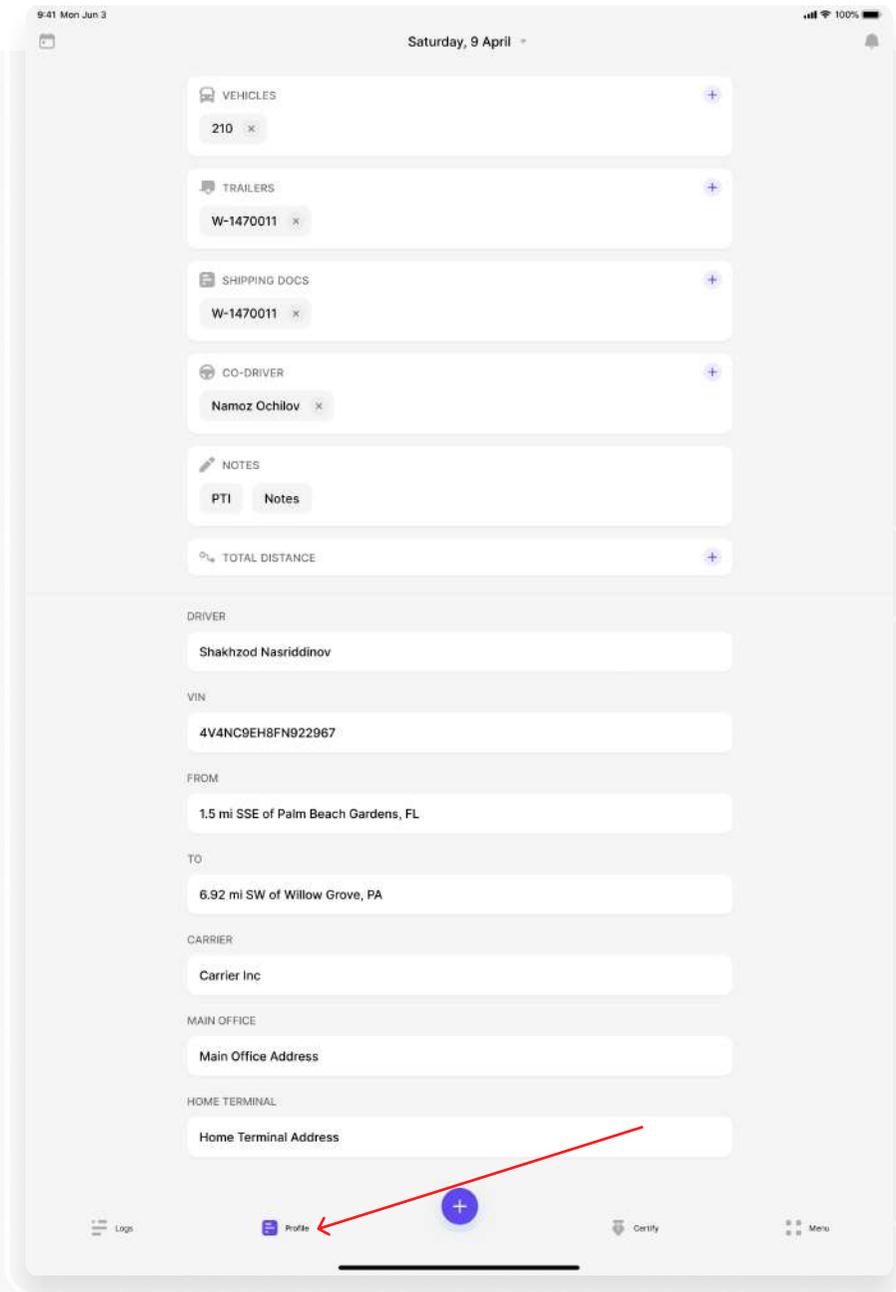
Shipping document

In navigation bar **Profile** section which driver can fill **"Shipping document"** information fields.

Certification
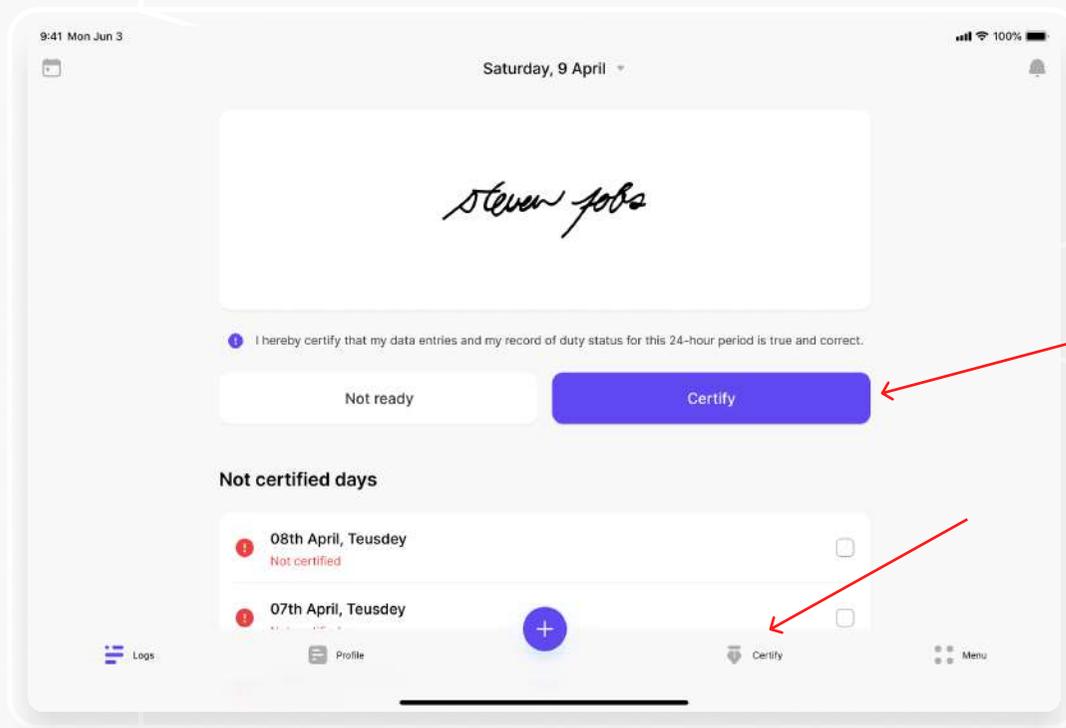
In navigation bar **Certify** section which driver create own **signature** and sign his/her duty days. Also unsigned days will be appeared here.

intime eld
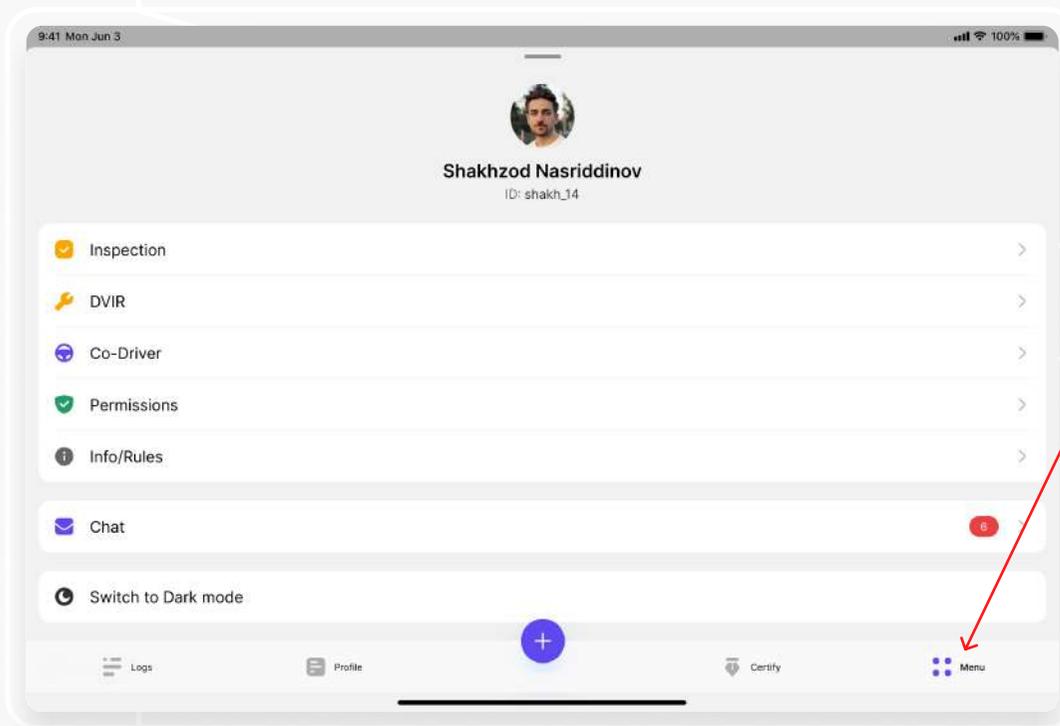
Menu

There is **Menu** section in navigation bar. It shows general information and events. Such as **"Inspection", "DVIR", "Co-driver", "Chat"** etc. General information about each ones is given in the next page.

Driver's account
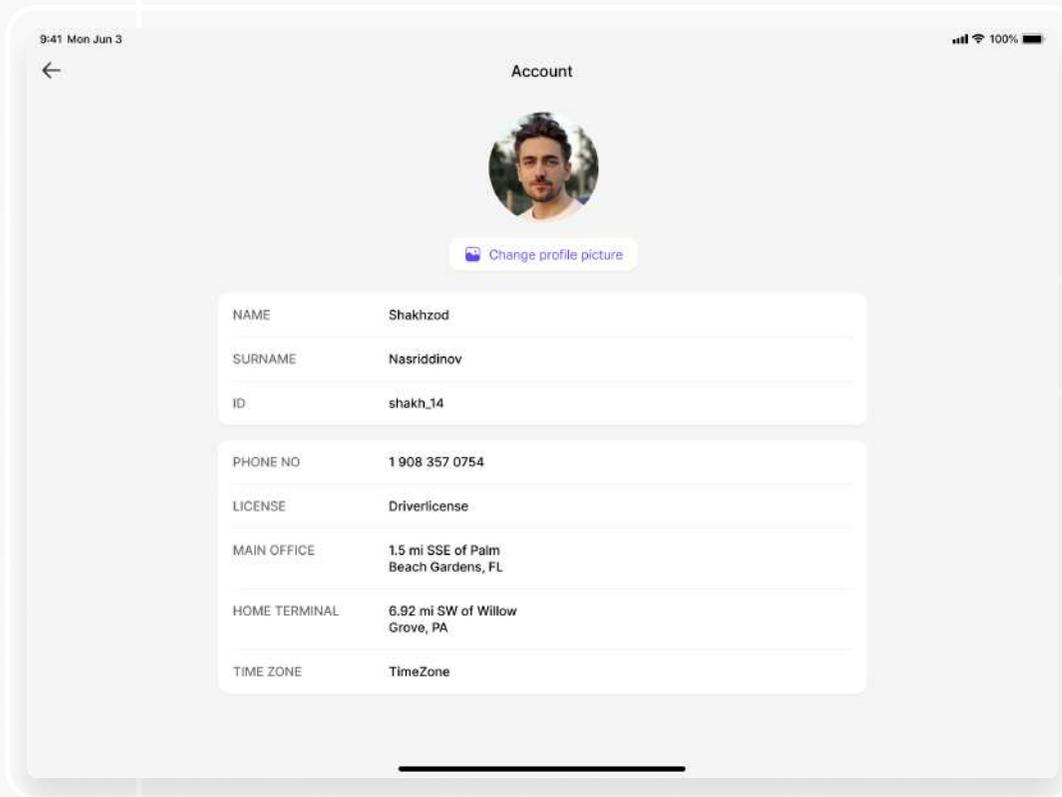
By clicking avatar in the menu page driver can open his/her own information.

intime eld
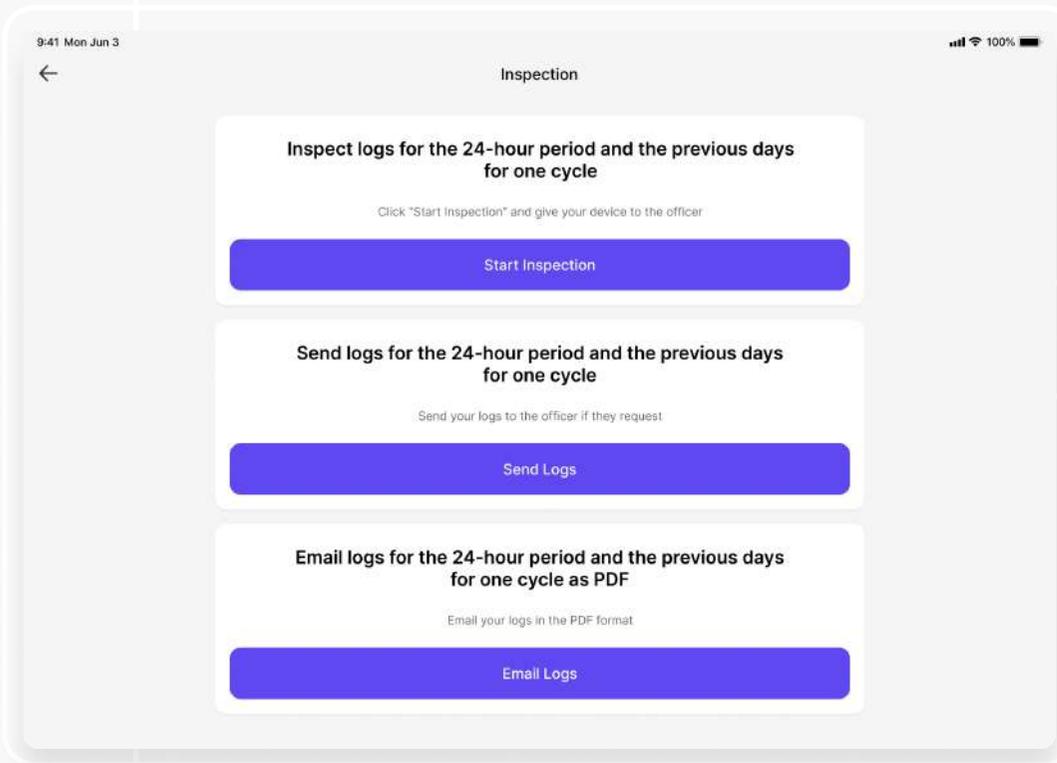
Inspection

For representing required reports driver can go with **"Inspection"** section and generate it. Generated daily report view is below.

= intime eld

Inspection

In next opened window, type your comment and click on the send button for transfering it.

≥ intime eld

DVIRs

adding new DVIR

issue created time

issue isn't fixed yet

issue fixed
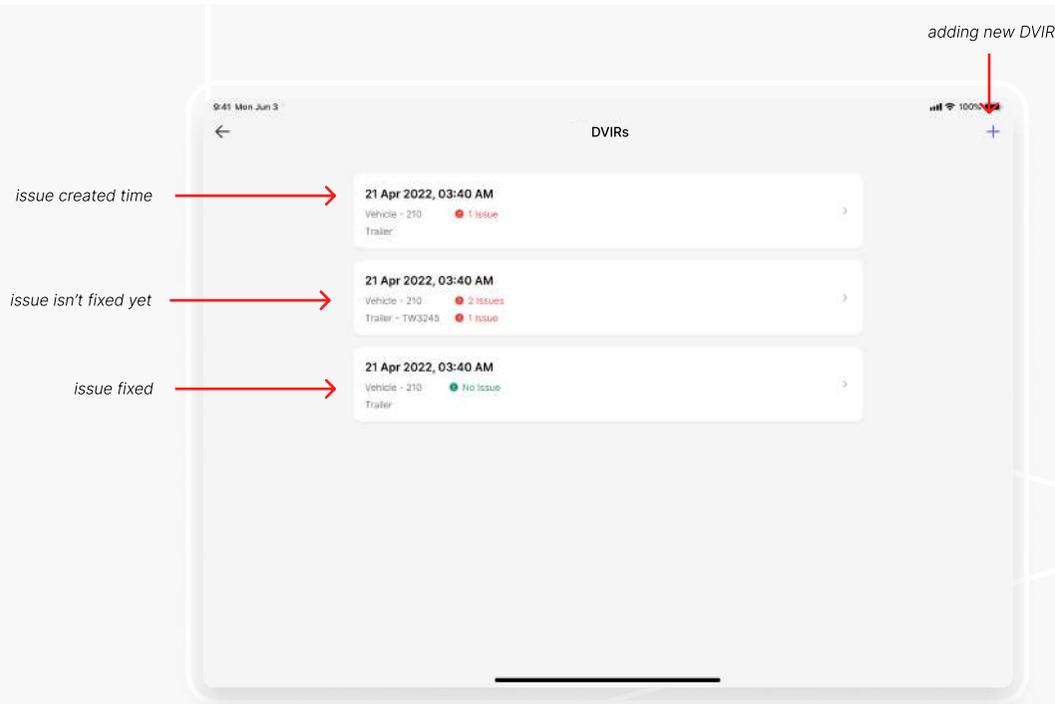
DVIR page will be shown like this. There are recent DVIRs and it's issues type and with current status(fixed or not).

The page for creating a **new DVIR.**

Co-Driver

adding new DVIR

Co-driver name

switching with Co-Driver
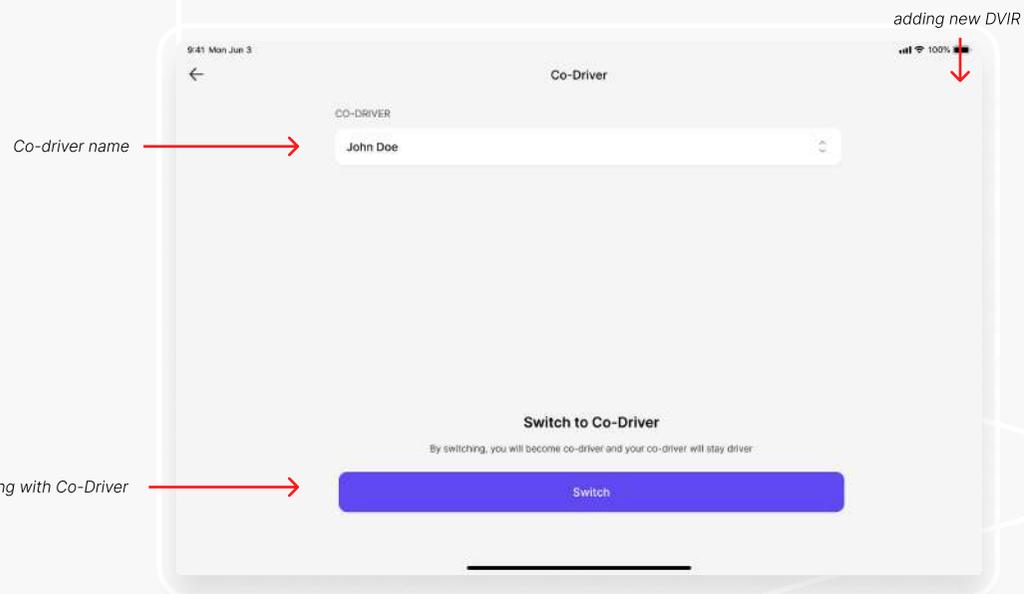
In **Co-Driver** page driver can see his/her Co-Driver and switch with him.

By clicking Co-Driver's name can search and change his/her Co-Driver to another one.
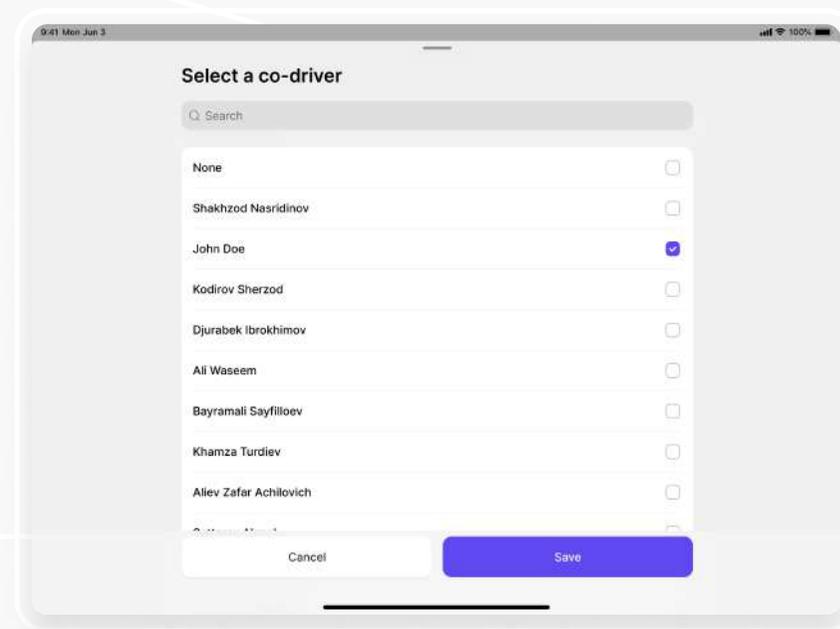
≍ intime eld

Light/Dark modes

By clicking this section interface mode can change from **Light mode** to the **Dark mode** and vice versa.

www.intimeeld.com